

 Document Number
 Issue Date
 Rev. Date

 SPL82044
 09/13/94
 7/16/21

## CR Pump Body Assembly Service Parts List


Pump Model (Located on Pump Serial Plate)	See Page
CR	2, 3
CRQA	4, 5
CRQB	See Service Parts List SPL83164

## **Model CR**

REF. NO.	DESCRIPTION
B1	Intake Adapter (Includes Wear Ring)
B2	Mounting Bracket
В3	O-ring, 13 x 13-1/4 in.
B4	Volute Body (Includes B20, B21 and Wear Ring)
B5	O-ring, 5-5/8 x 5-7/8 in.
В6	Bearing Housing
В7	Breather
B8	Steel Pipe Plug, 1/4 NPT
В9	Hex Hd Screw, 1/2-13 x 7/8 in.
B10	Hex Hd Screw, 5/8-11 x 1-1/2 in.
B11	Lock Washer, 1/2 in.
B12	Lock Washer, 5/8 in.
B13*	Discharge Adapter

REF. NO.	DESCRIPTION
B14*	Hex Hd Screw, 3/8-24 x 2 in.
B15*	Hex Nut, 3/8-24
B16*	Lock Washer, 3/8 in.
B17*	O-ring, 6-1/4 x 6-1/2 in.
B18	Snubber
B19	Oil Level Plug
B20	Drive Screw, No. 6 x 1/4 in.
B21	Serial Plate
B22	Brass Pipe Plug, 1/4 NPT
B25	Steel Pipe Plug, 3/8 NPT
B26	Brass Pipe Plug, 3/8 NPT
B27	Steel Pipe Plug, 3/4 NPT
B28	Brass Pipe Plug, 3/4 NPT

<sup>\*</sup> These items are optional.

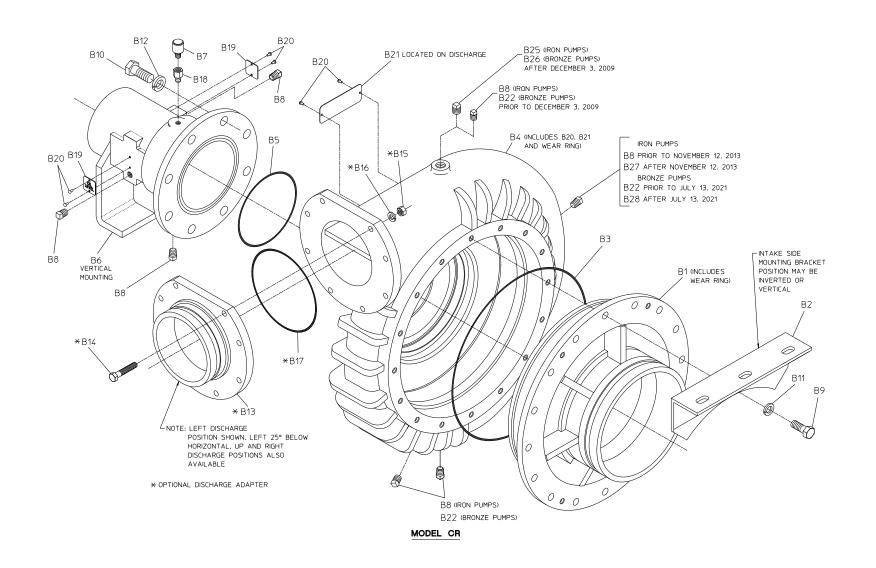

## **Model CRQA**

REF. NO.	DESCRIPTION
B1	Intake Adapter (Includes Wear Ring)
B2	Mounting Bracket
В3	O-ring, 13 x 13-1/4 in.
B4	Volute Body (Includes Wear Ring)
B5	O-ring, 5-5/8 x 5-7/8 in.
B8	Steel Pipe Plug, 1/4 NPT
В9	Hex Hd Screw, 1/2-13 x 7/8 in.
B11	Lock Washer, 1/2 in.
B12	Lock Washer, 5/8 in.
B13*	Discharge Adapter

REF. NO.	DESCRIPTION
B14*	Hex Hd Screw, 3/8-24 x 2 in.
B15*	Hex Nut, 3/8-24
B16*	Lock Washer, 3/8 in.
B17*	O-ring, 6-1/4 x 6-1/2 in.
B22	Brass Pipe Plug, 1/4 NPT
B23	Hex Nut, 5/8-18
B24	Stud, 5/8 NC x NF
B25	Steel Pipe Plug, 3/8 NPT
B26	Brass Pipe Plug, 3/8 NPT
B27	Steel Pipe Plug, 3/4 NPT
B28	Brass Pipe Plug, 3/4 NPT

<sup>\*</sup> These items are optional.

