



Intake Relief Valve Assembly

Component	See Page
Pump Mounted Valve	2
Separately Mounted Valve	2
Pilot Valve Assembly Components	3
Relief Valve Assembly Components	4

Ref No.	Description	Ref No.	Description
IR3	Insert-Strainer	IR47	Pilot Valve Repair Kit
IR4	Screw-Throttle	IR50	O-Ring 7.65mm X 1.78mm
IR15	Gasket-Strainer	IR51	Ball
IR16	O-Ring	IR52	Disc Clamp Intrv
IR18	Setting Ring Scale	IR53	Nut Hex Intrv
IR19	Washer-Flat, Nylon, 3.2mm ID X 6.9mm OD	IR54	Diaphragm Intrv
IR21	Screw-Adjusting	IR55	Circle
IR22	Screw-Setting	IR56	Disc Pressure Intrv
IR25	Ring-Thread	IR57	Piston-Control
IR26	Plate-Spring	IR58	Ring-Guide
IR27	Spring-Pressure	IR59	O-Ring, 1 x .065 in
IR29	O-Ring, 1 x 1-1/4 in	IR61	Disc Piston Stop Intrv
IR31	Seat-Piston		

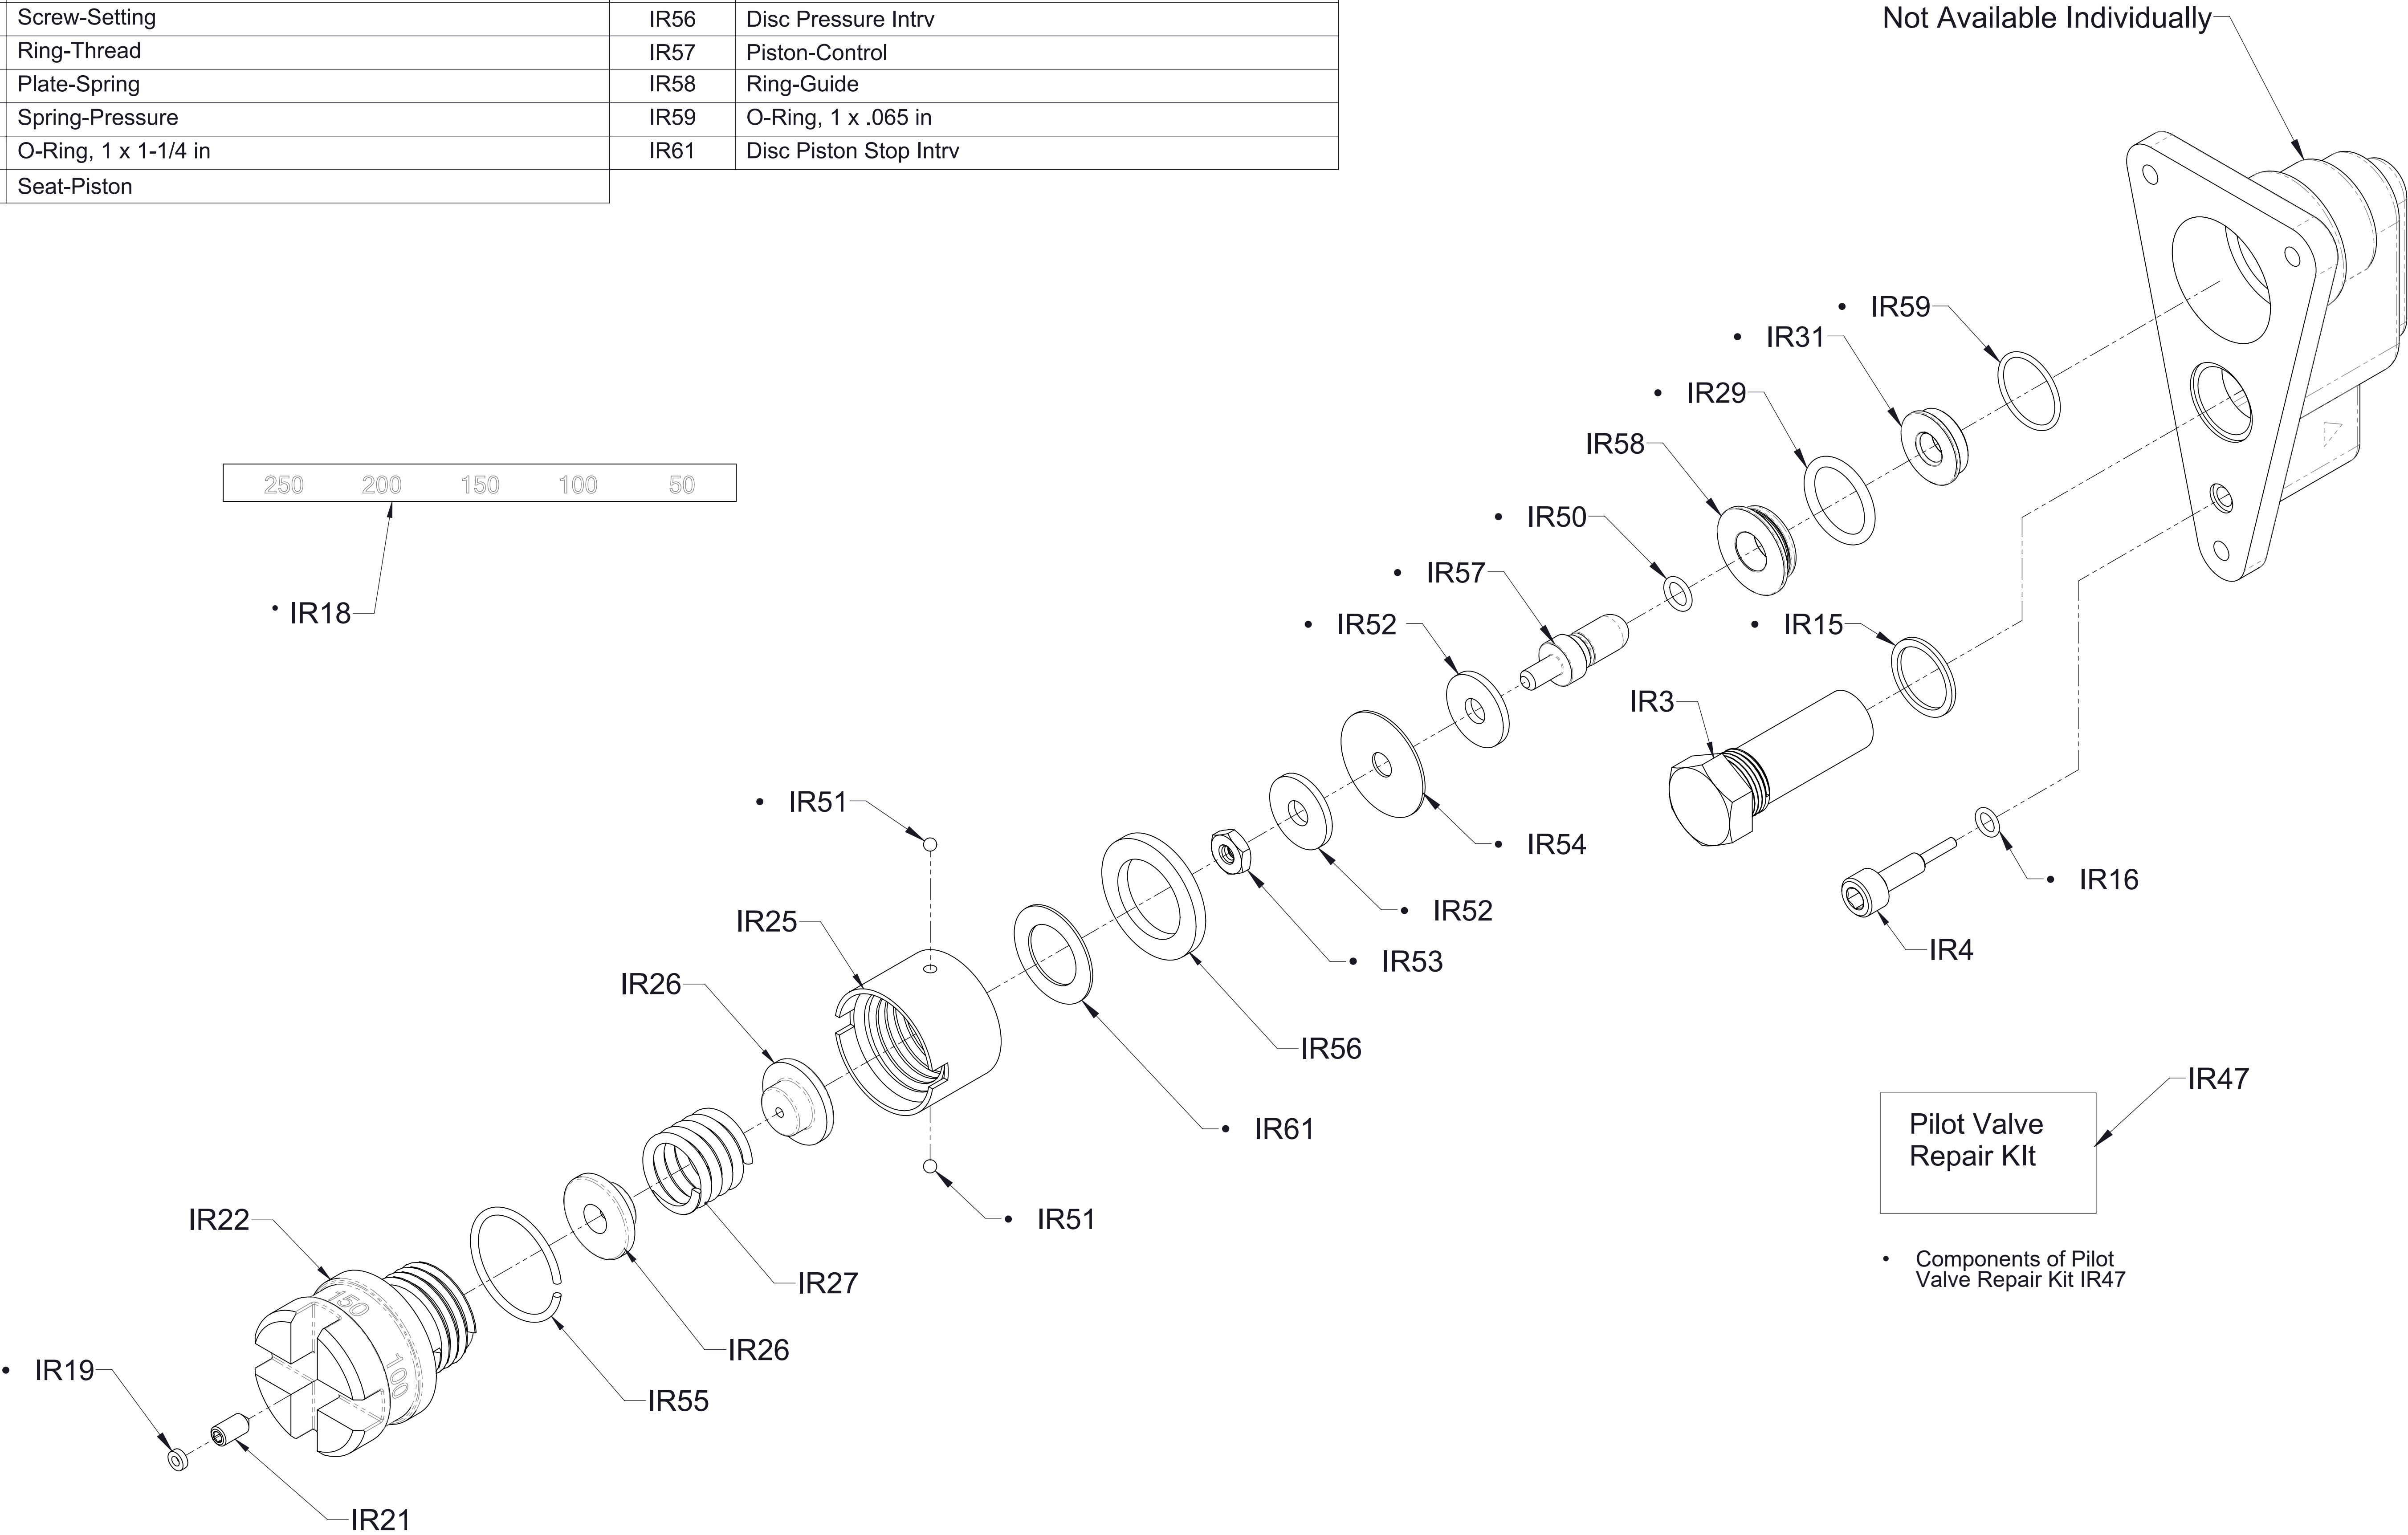

Pilot Valve Assembly Components

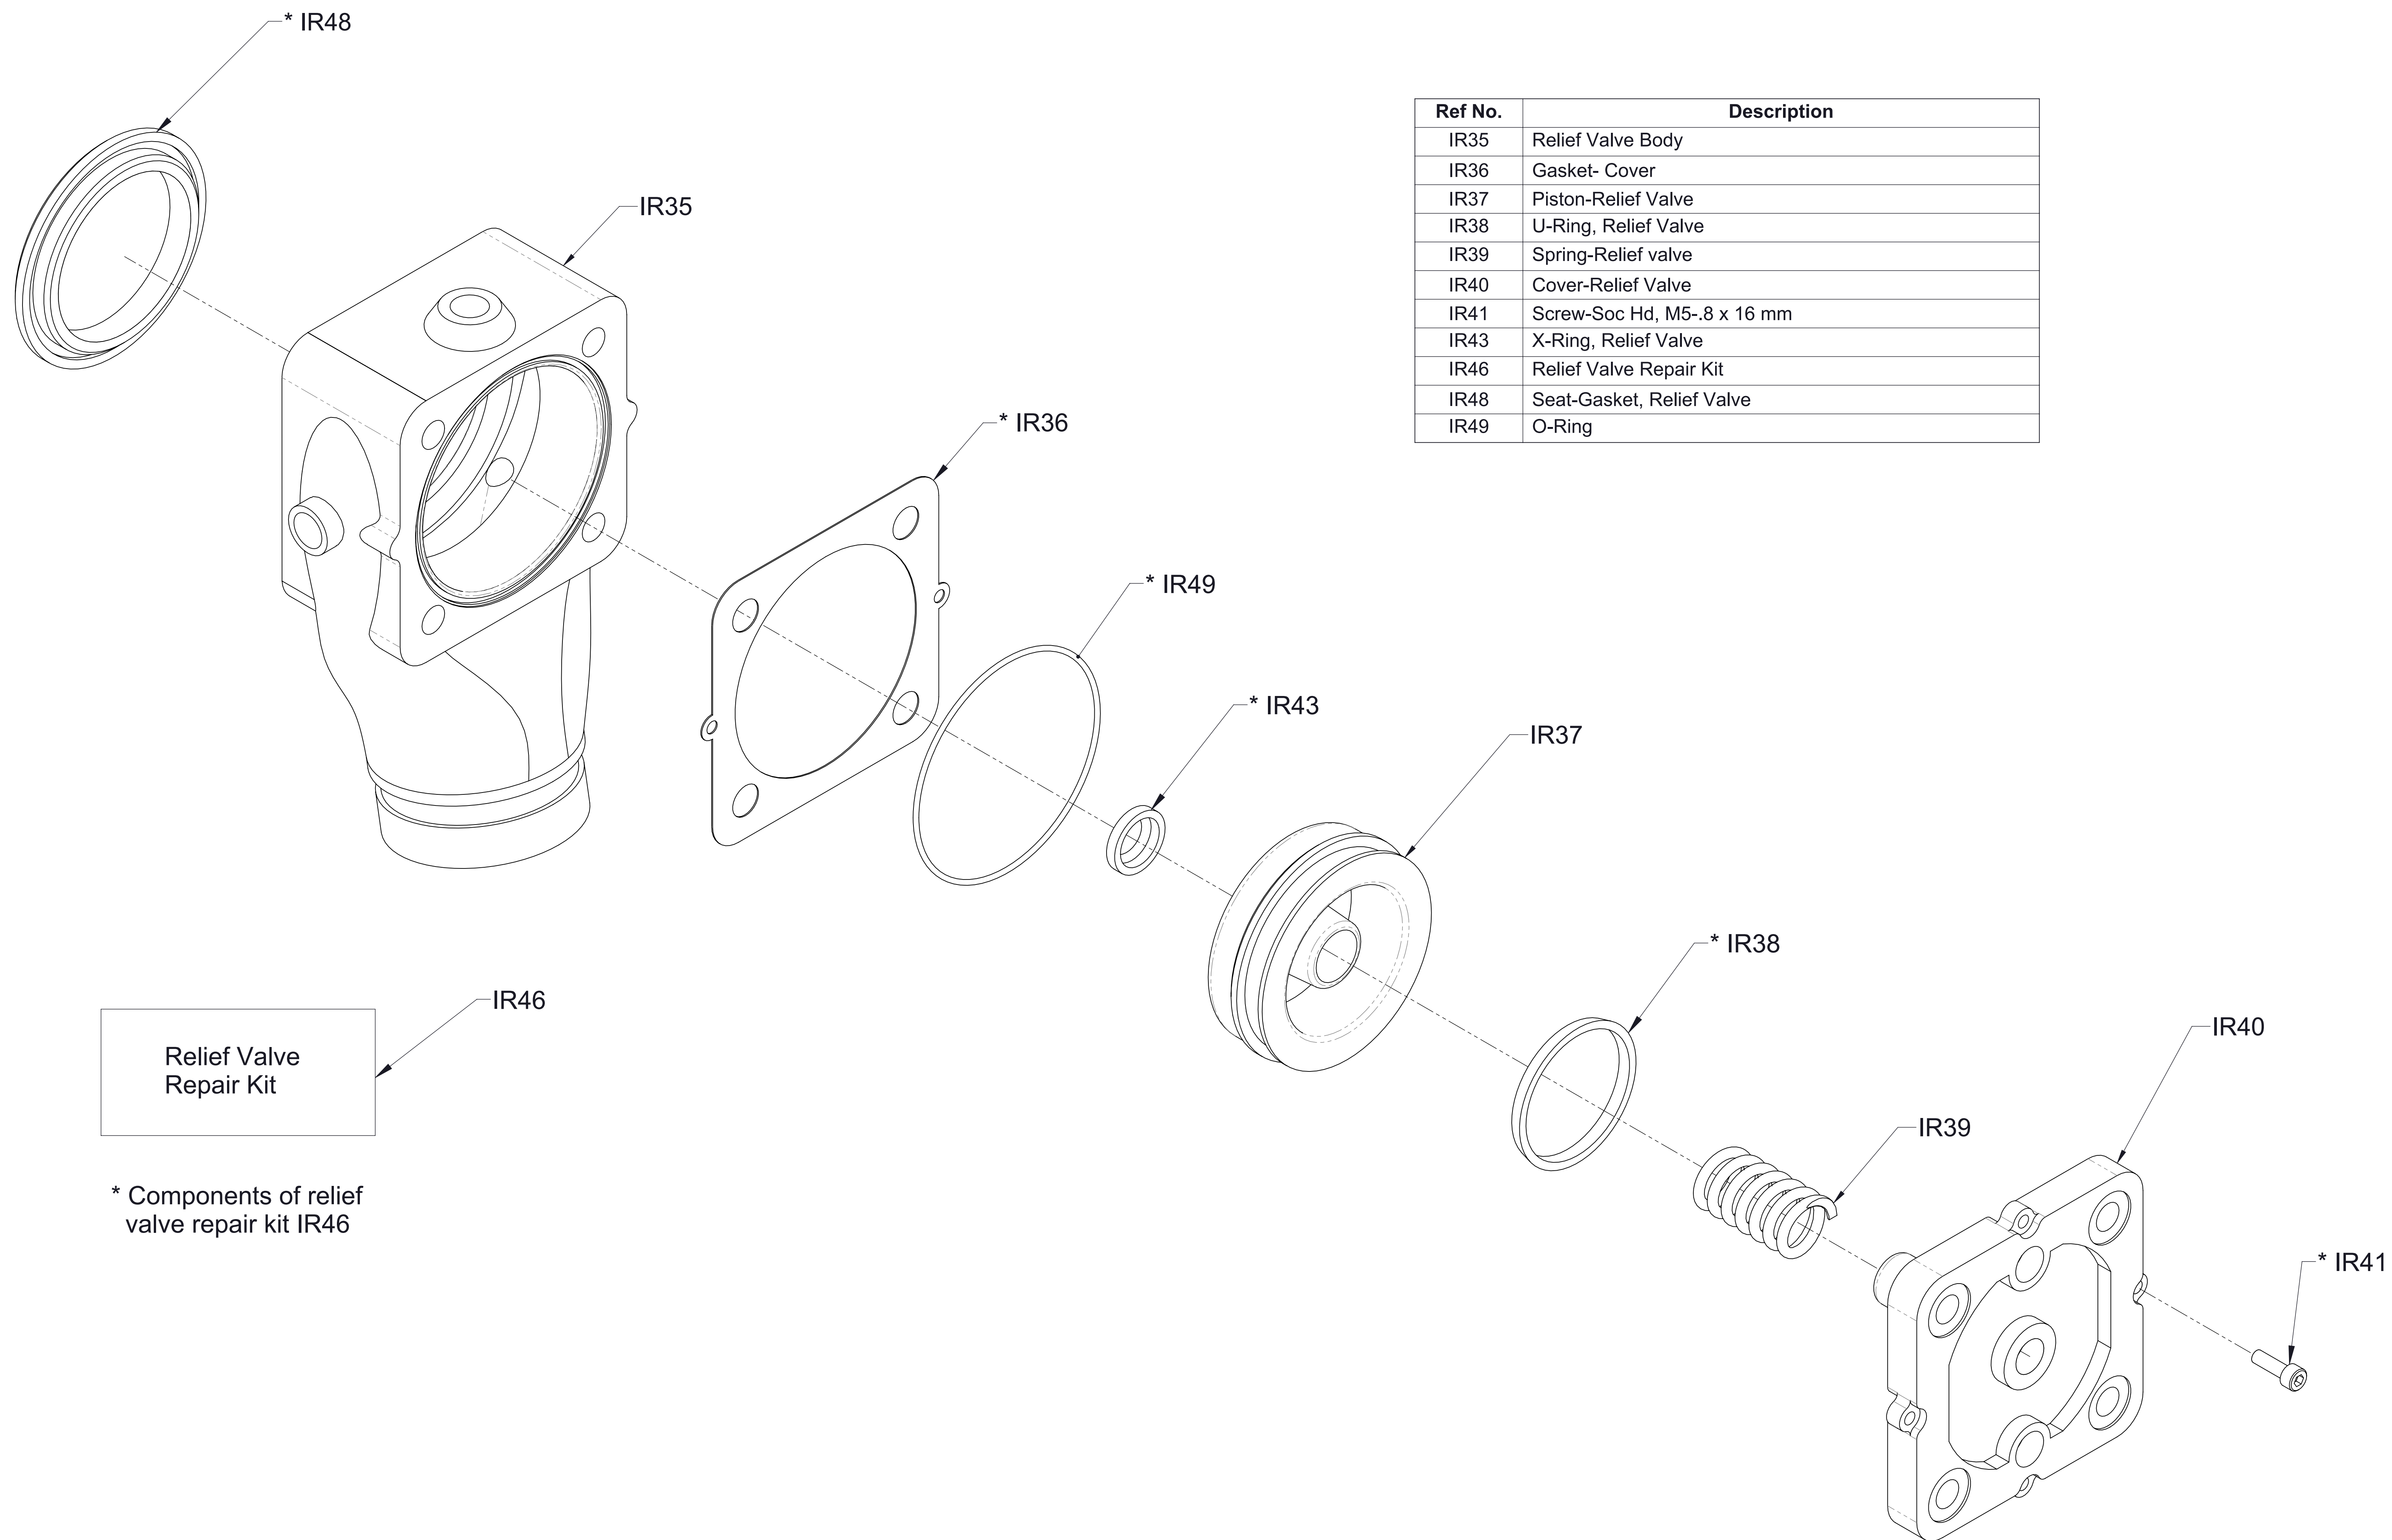

Relief Valve Assembly Components