




## QB Series Transmission Service Parts List

Pump Model (Located on Pump Serial Plate)	Component	See Page
CRQB	Case	2
	Driveline	3
	Cross-Section View	4
CXVQB (Front Facing Intake)	Case	5
	Driveline	6
	Cross-Section View	7
CXVQB (Rear Facing Intake)	Case	8
	Driveline	9
	Cross-Section View	10

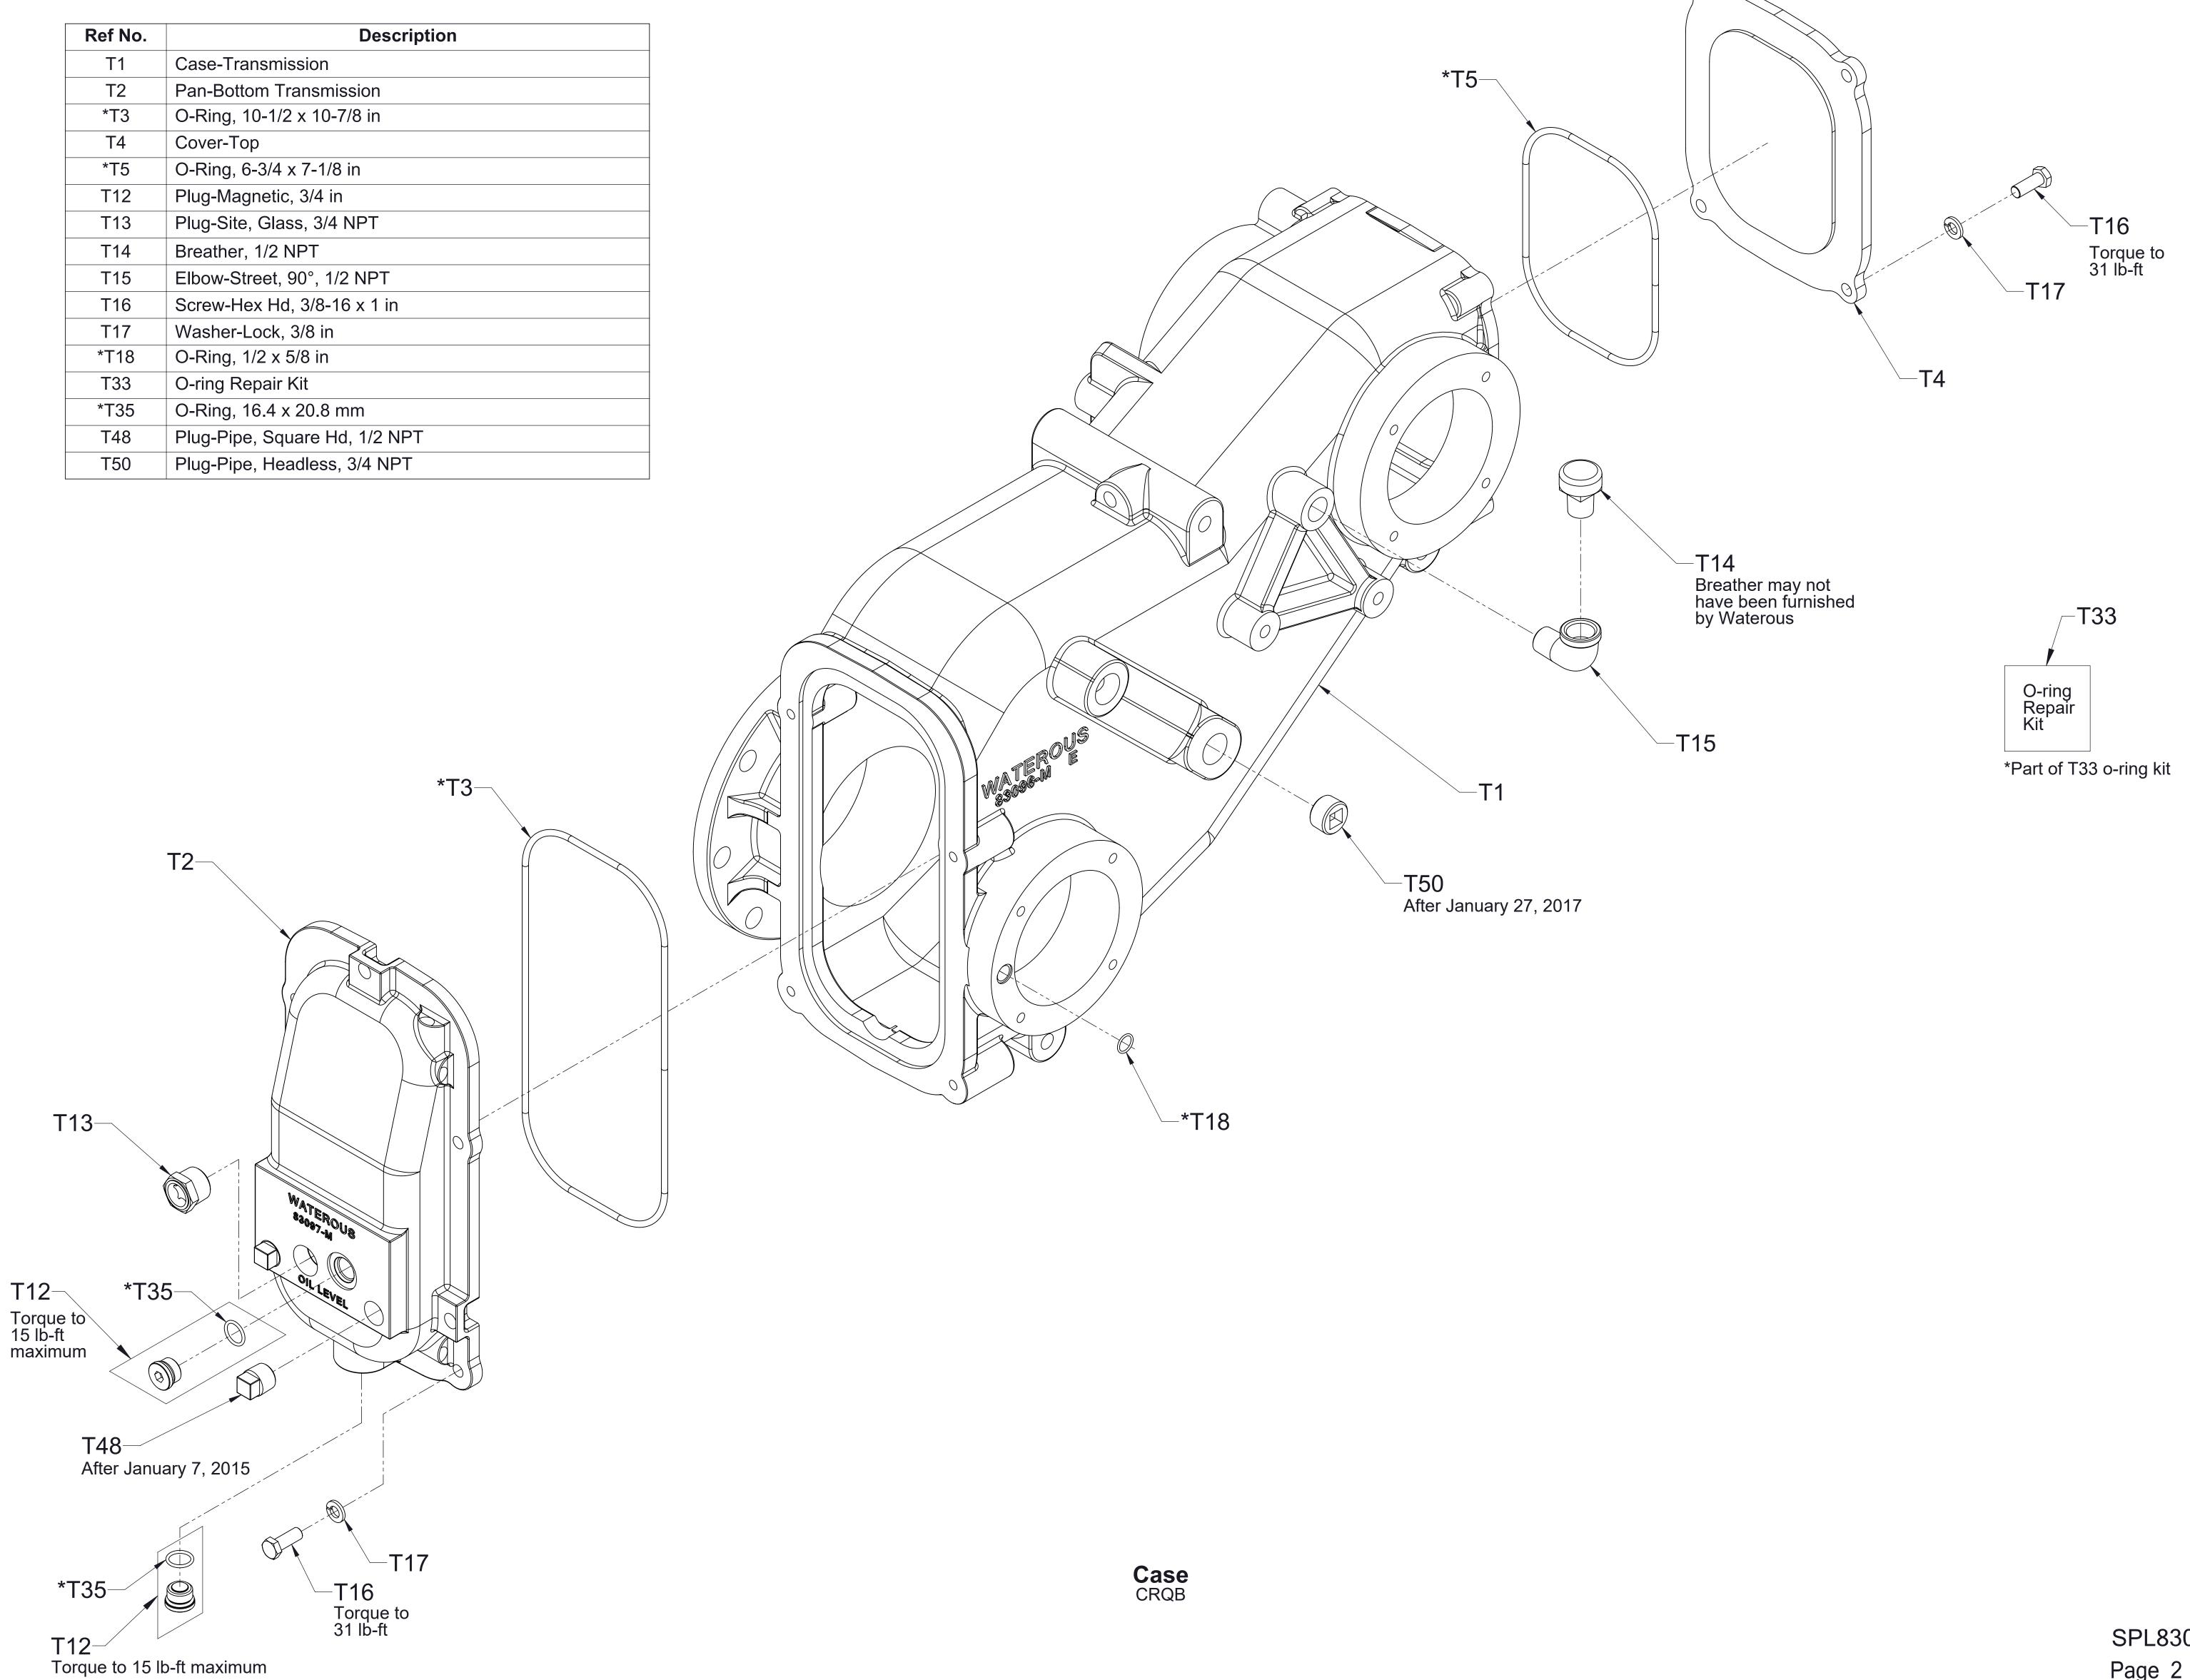


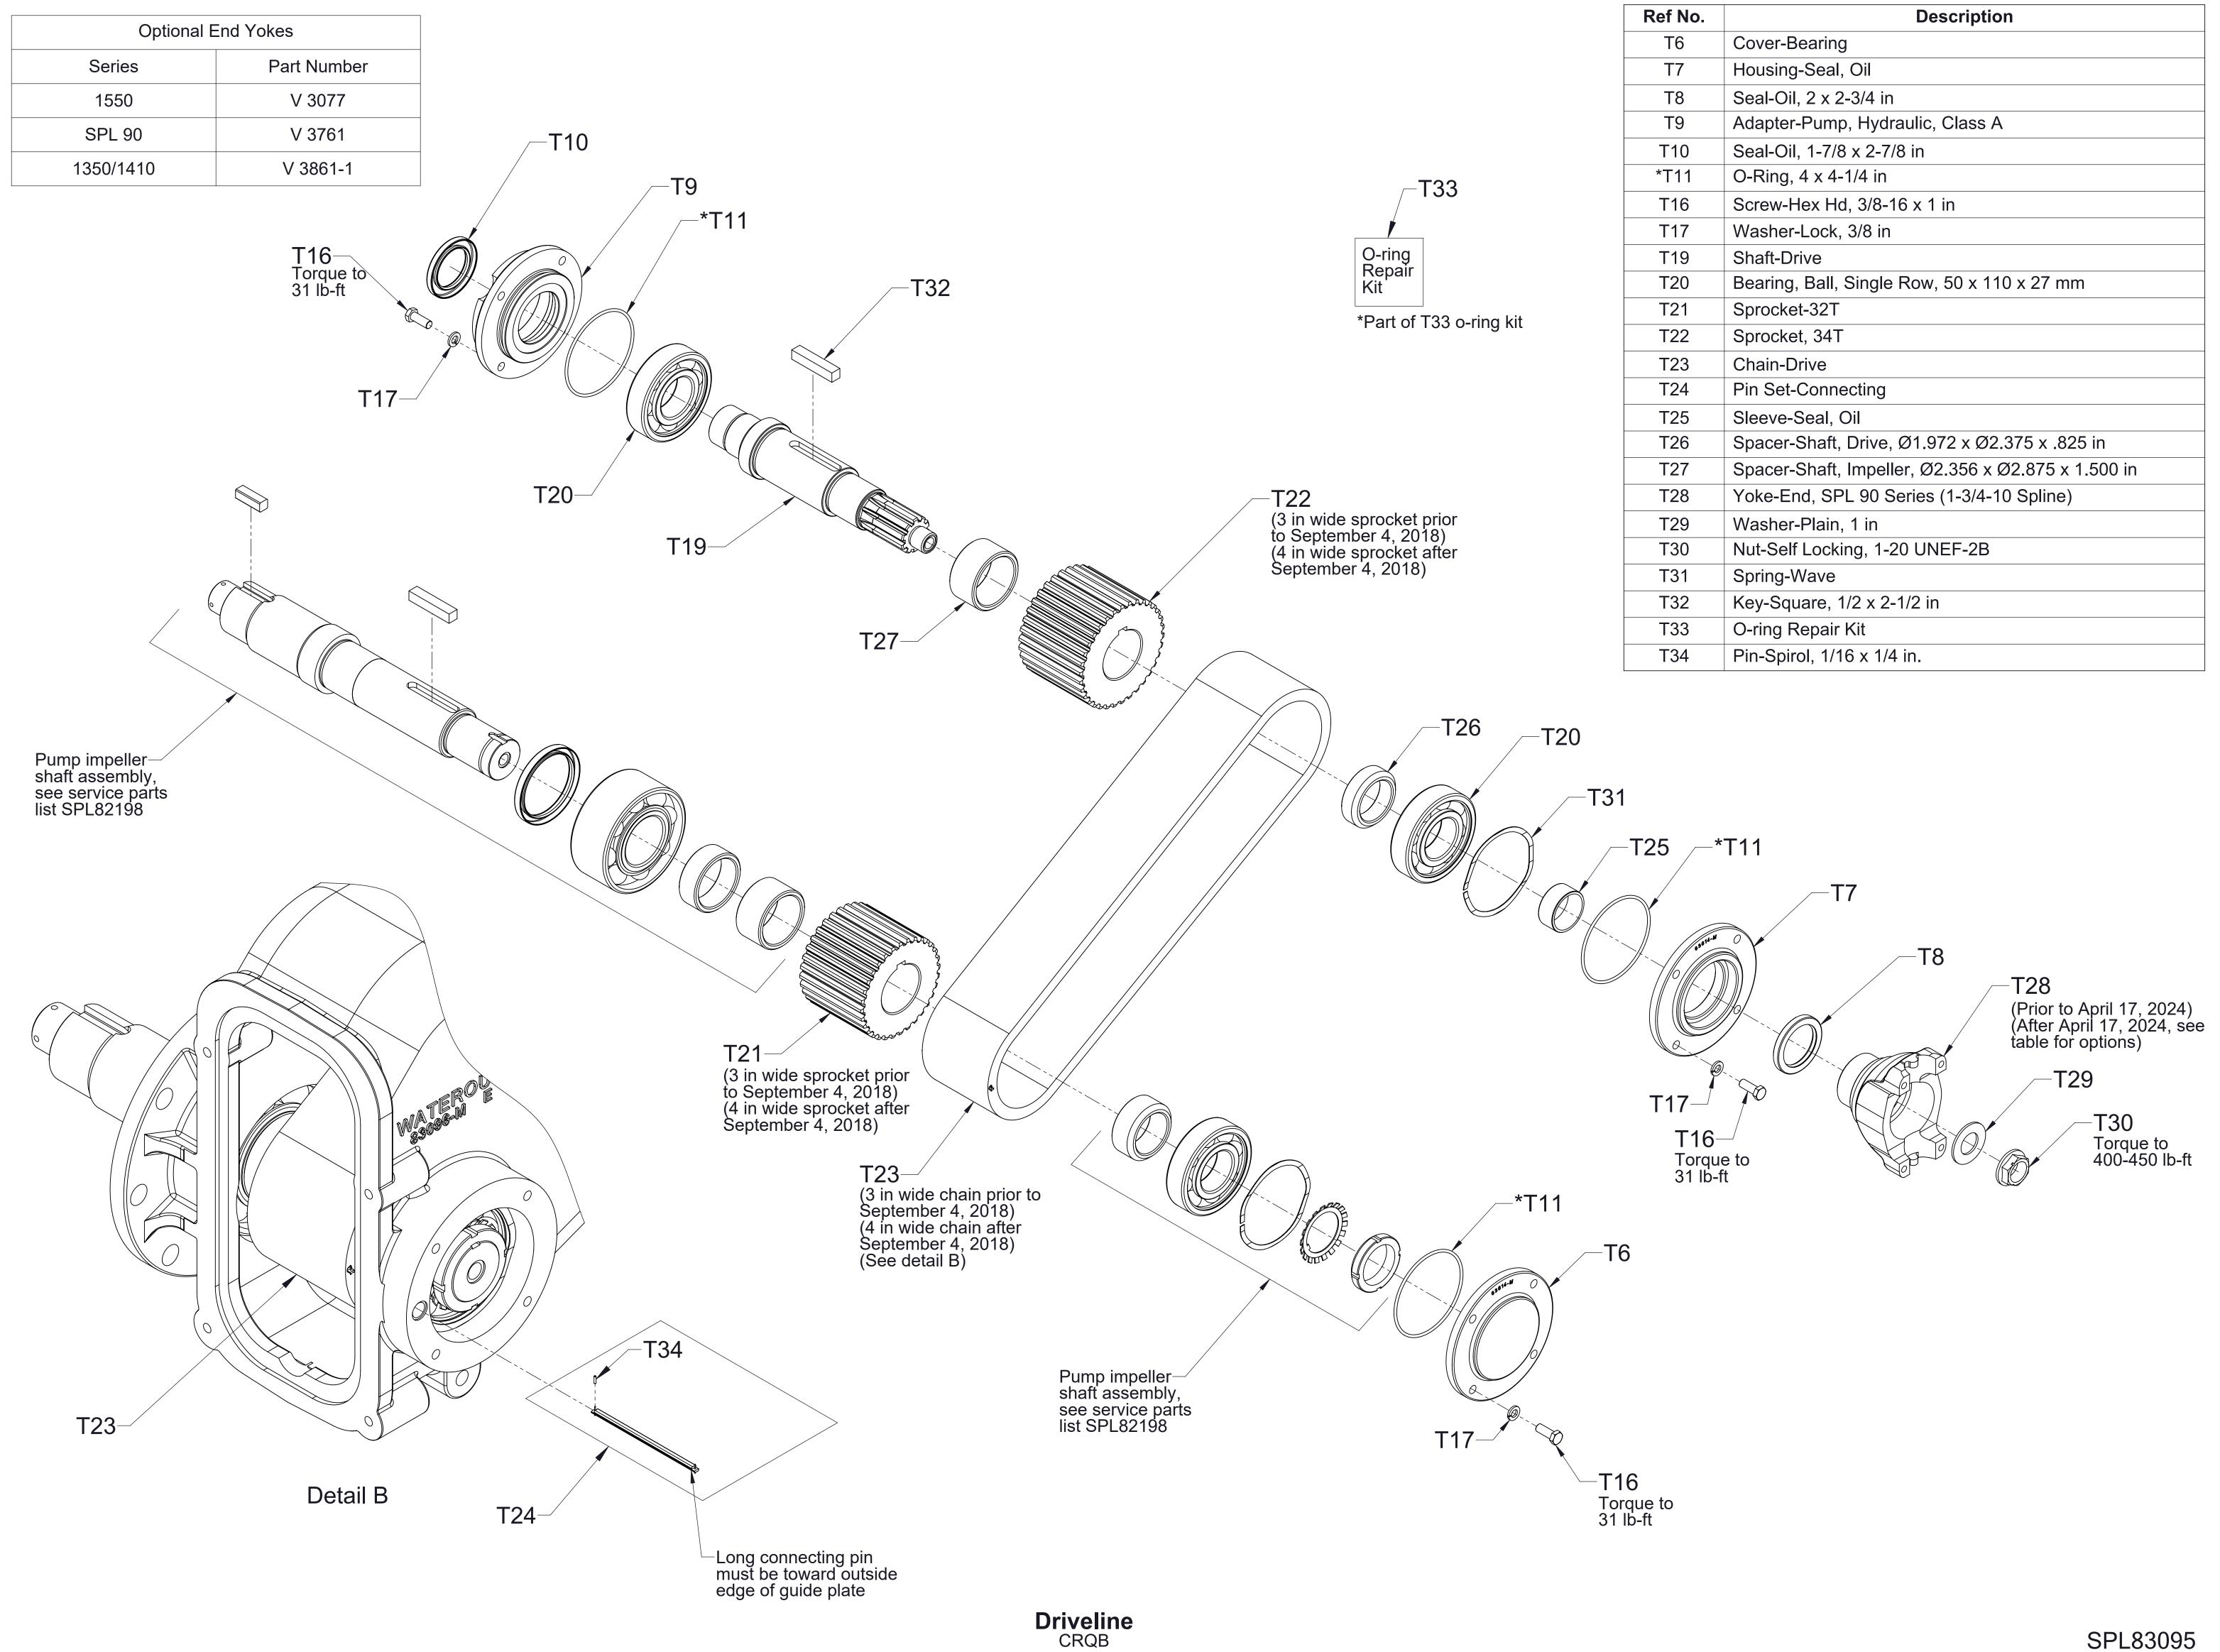

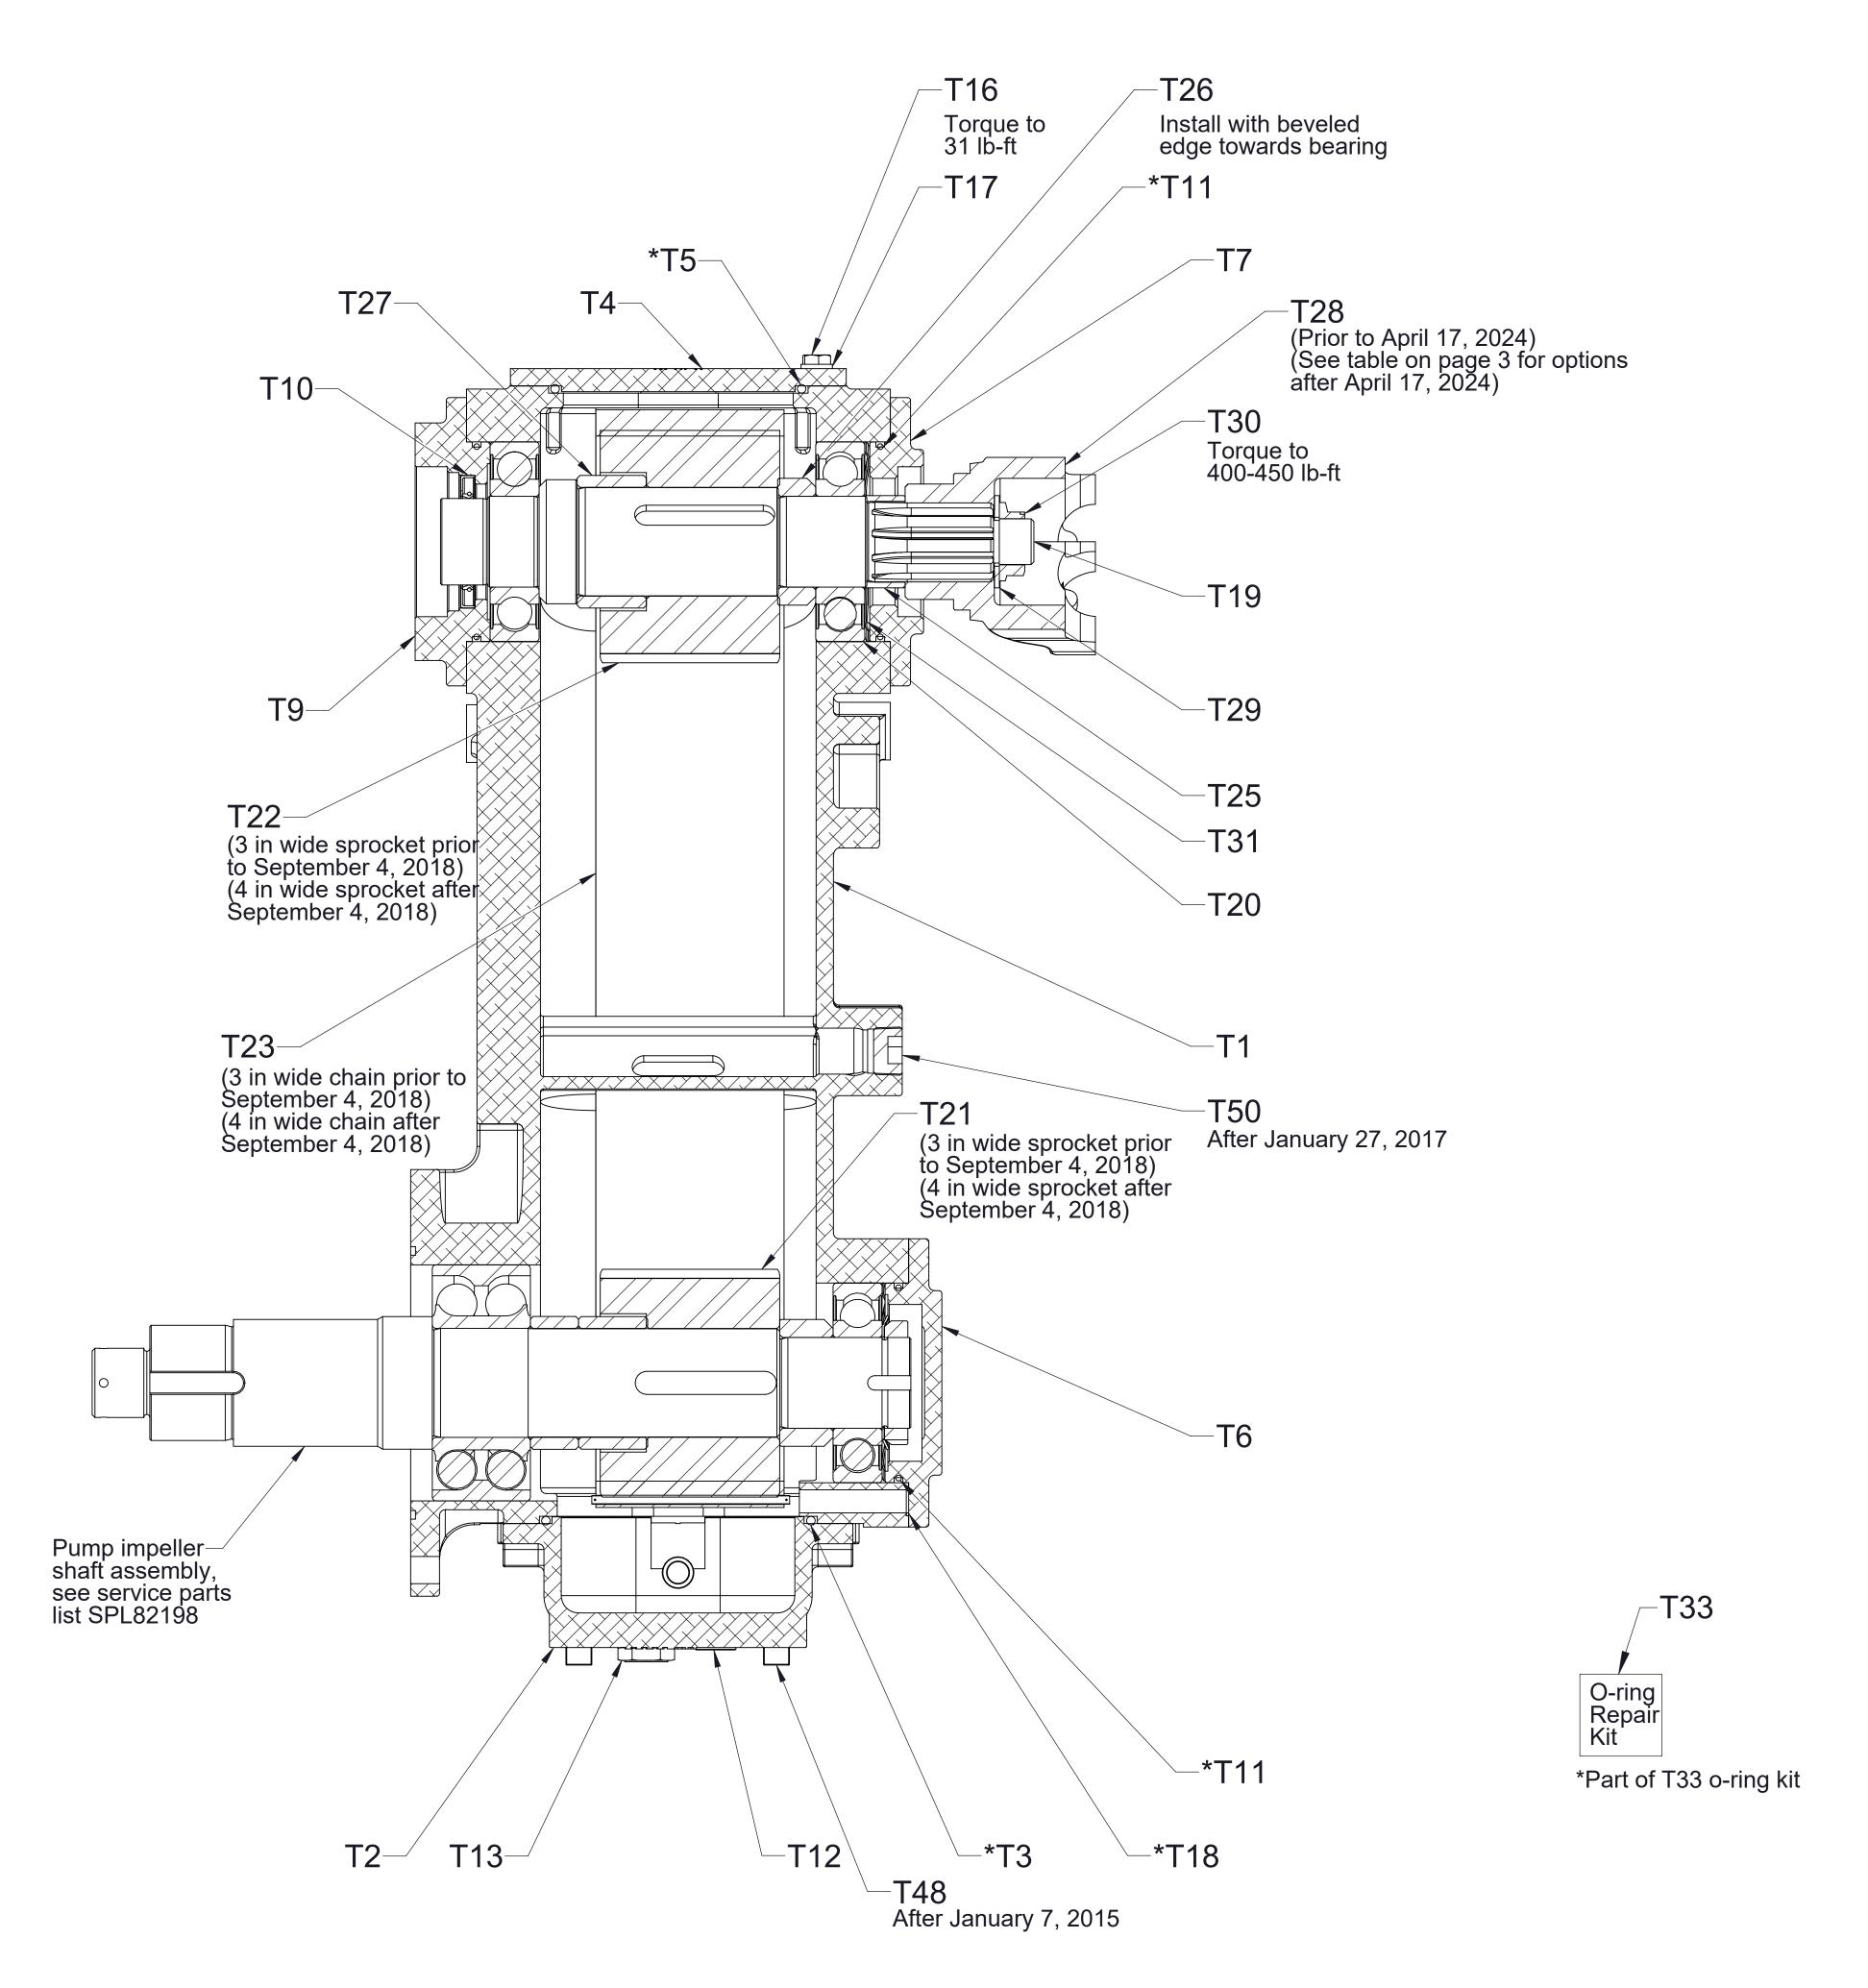


Ref No.	Description
T1	Case-Transmission
T2	Pan-Bottom Transmission
*T3	O-Ring, 10-1/2 x 10-7/8 in
T4	Cover-Top
*T5	O-Ring, 6-3/4 x 7-1/8 in
Т6	Cover-Bearing
Т9	Adapter-Pump, Hydraulic, Class A
T10	Seal-Oil, 1-7/8 x 2-7/8 in
*T11	O-Ring, 4 x 4-1/4 in
T12	Plug-Magnetic, 3/4 in (Includes T35)
T13	Plug-Site, Glass, 3/4 NPT
T16	Screw-Hex Hd, 3/8-16 x 1 in
T17	Washer-Lock, 3/8 in
T7	Housing-Seal, Oil
*T18	O-Ring, 1/2 x 5/8 in
T19	Shaft-Drive
T20	Bearing, Ball, Single Row, 50 x 110 x 27 mm
T21	Sprocket-32T
T22	Sprocket, 34T
T23	Chain-Drive
T25	Sleeve-Seal, Oil
T26	Spacer-Shaft, Drive, Ø1.972 x Ø2.375 x .825 in
T27	Spacer-Shaft, Impeller, Ø2.356 x Ø2.875 x 1.500 in
T28	Yoke-End, SPL 90 Series (1-3/4-10 Spline)
T29	Washer-Plain, 1 in
T30	Nut-Self Locking, 1-20 UNEF-2B
T31	Spring-Wave
T33	O-ring Repair Kit
T48	Plug-Pipe, Square Hd, 1/2 NPT
T50	Plug-Pipe, Headless, 3/4 NPT

Cross-Section View CRQB

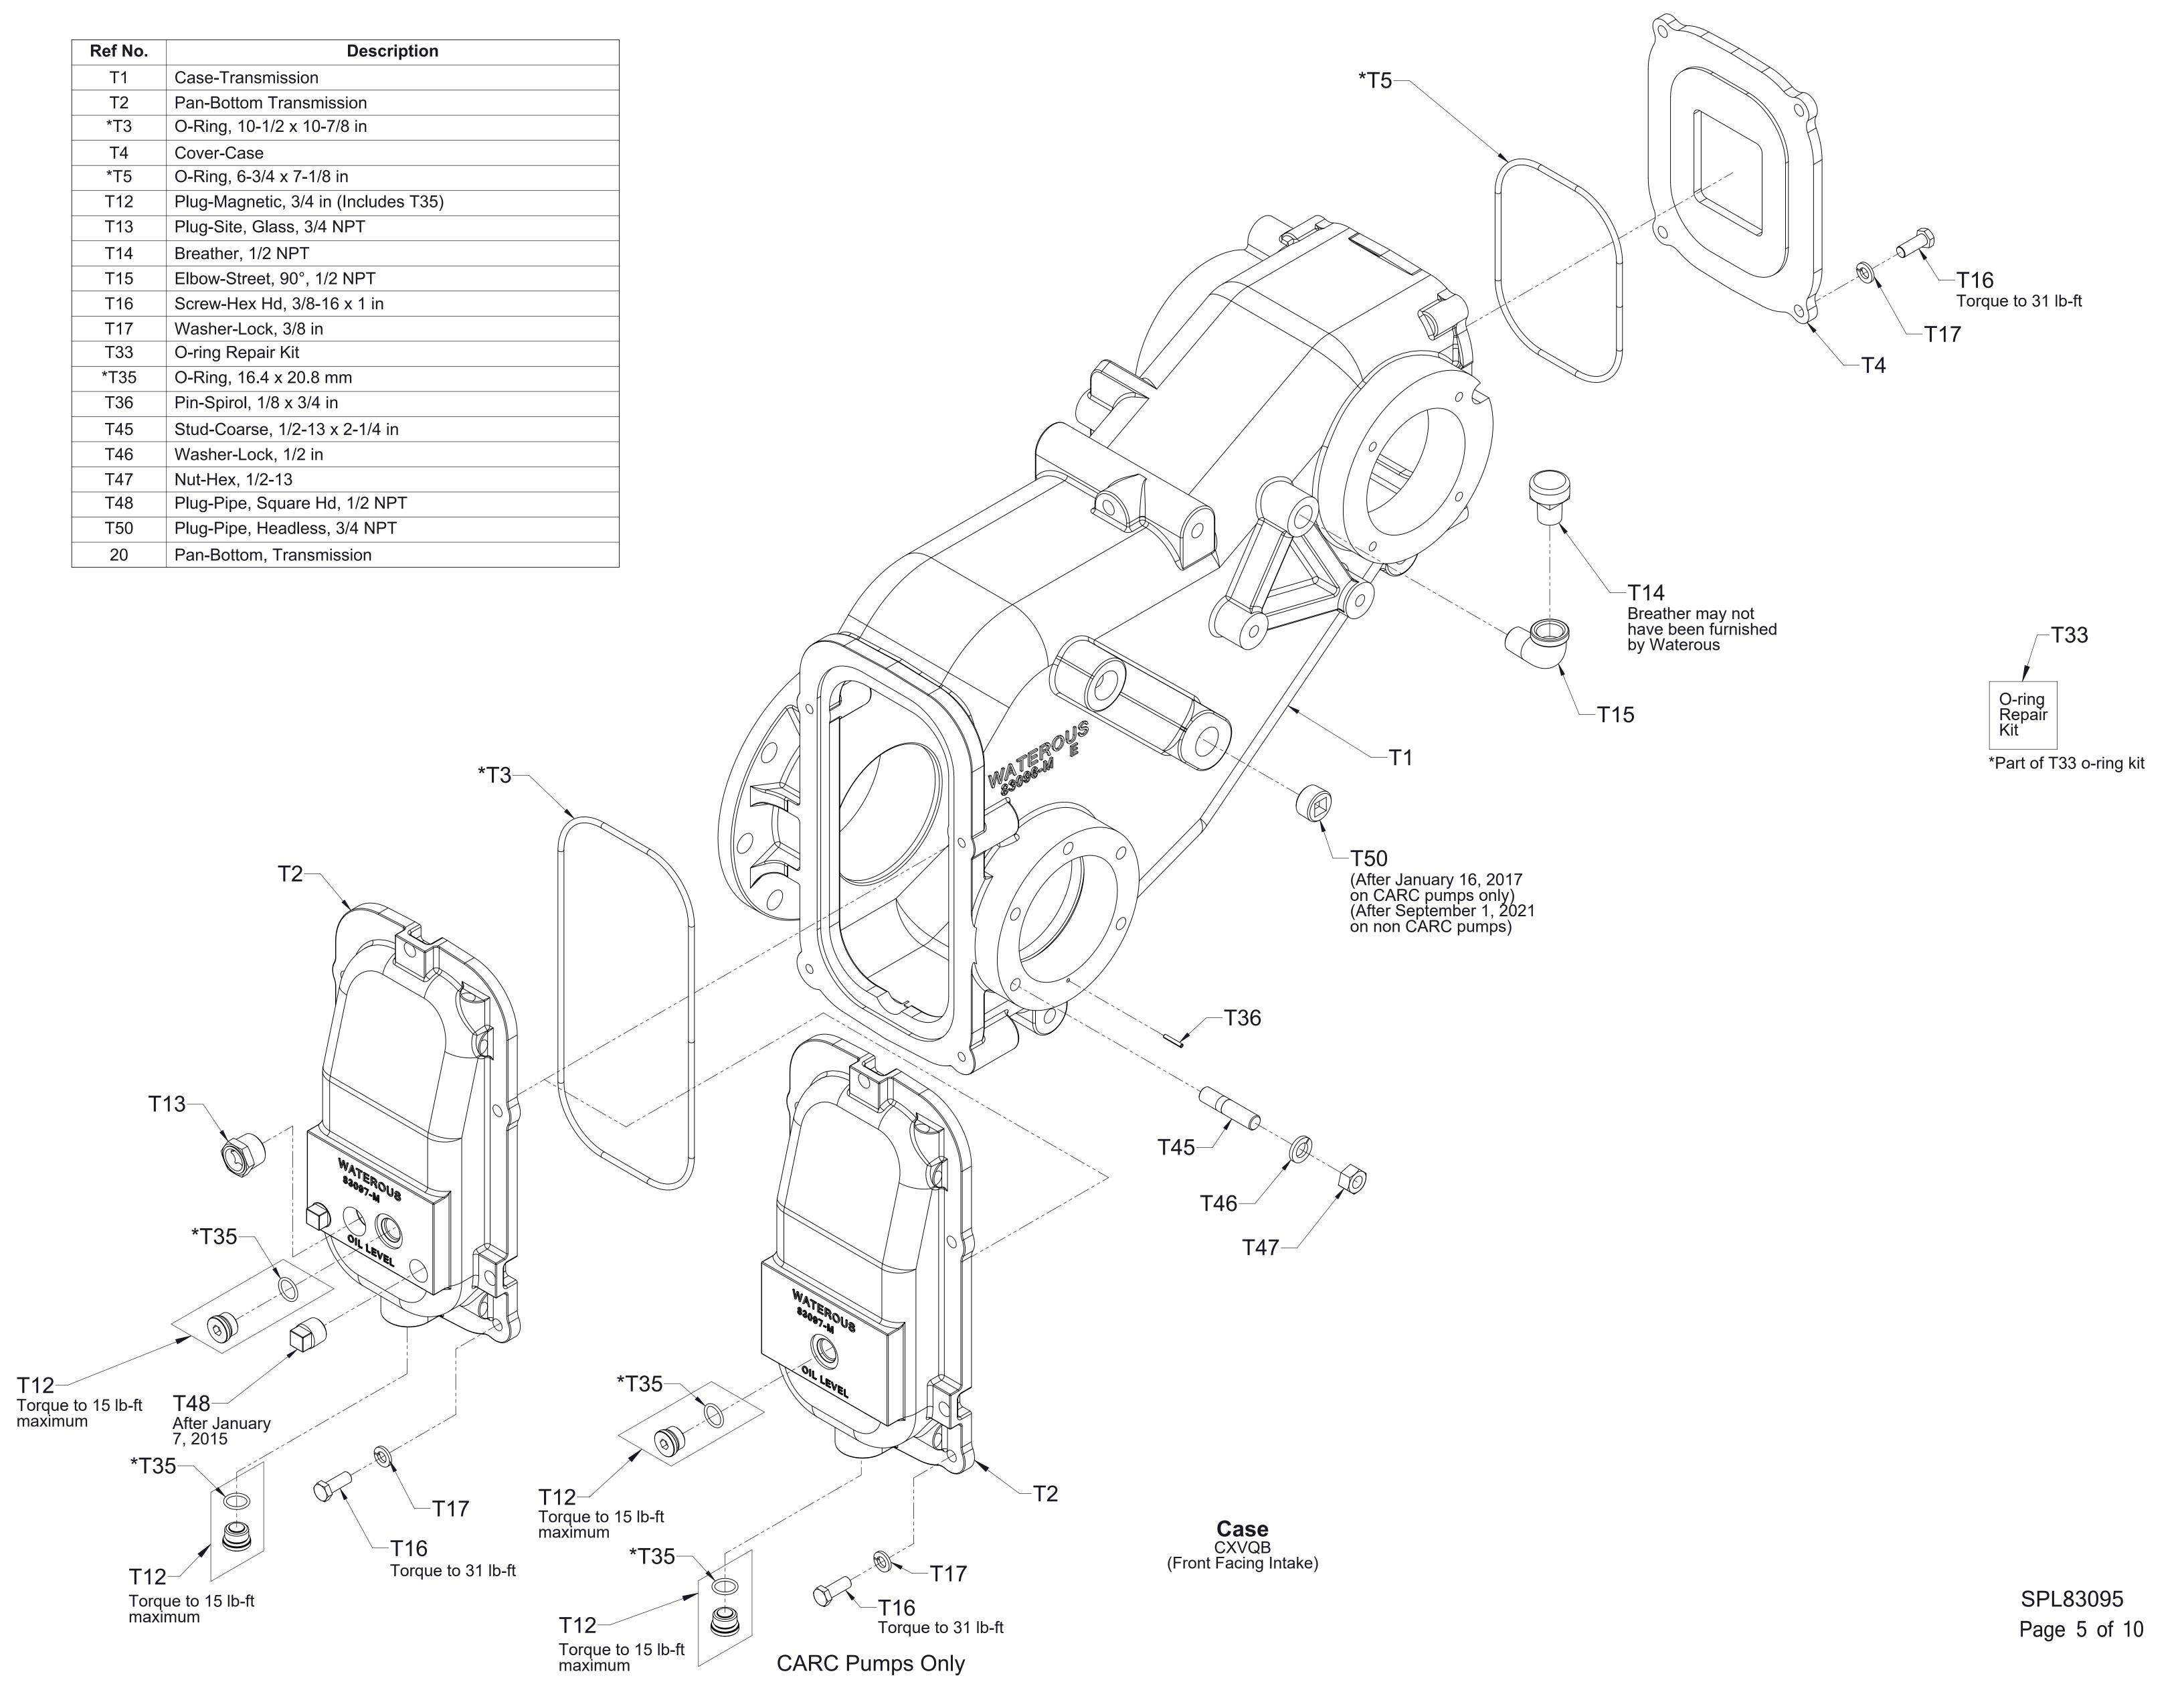

Optional End Yokes		
Series	Part Number	
1550	V 3077	
SPL 90	V 3761	
1350/1410	V 3861-1	

Detail B

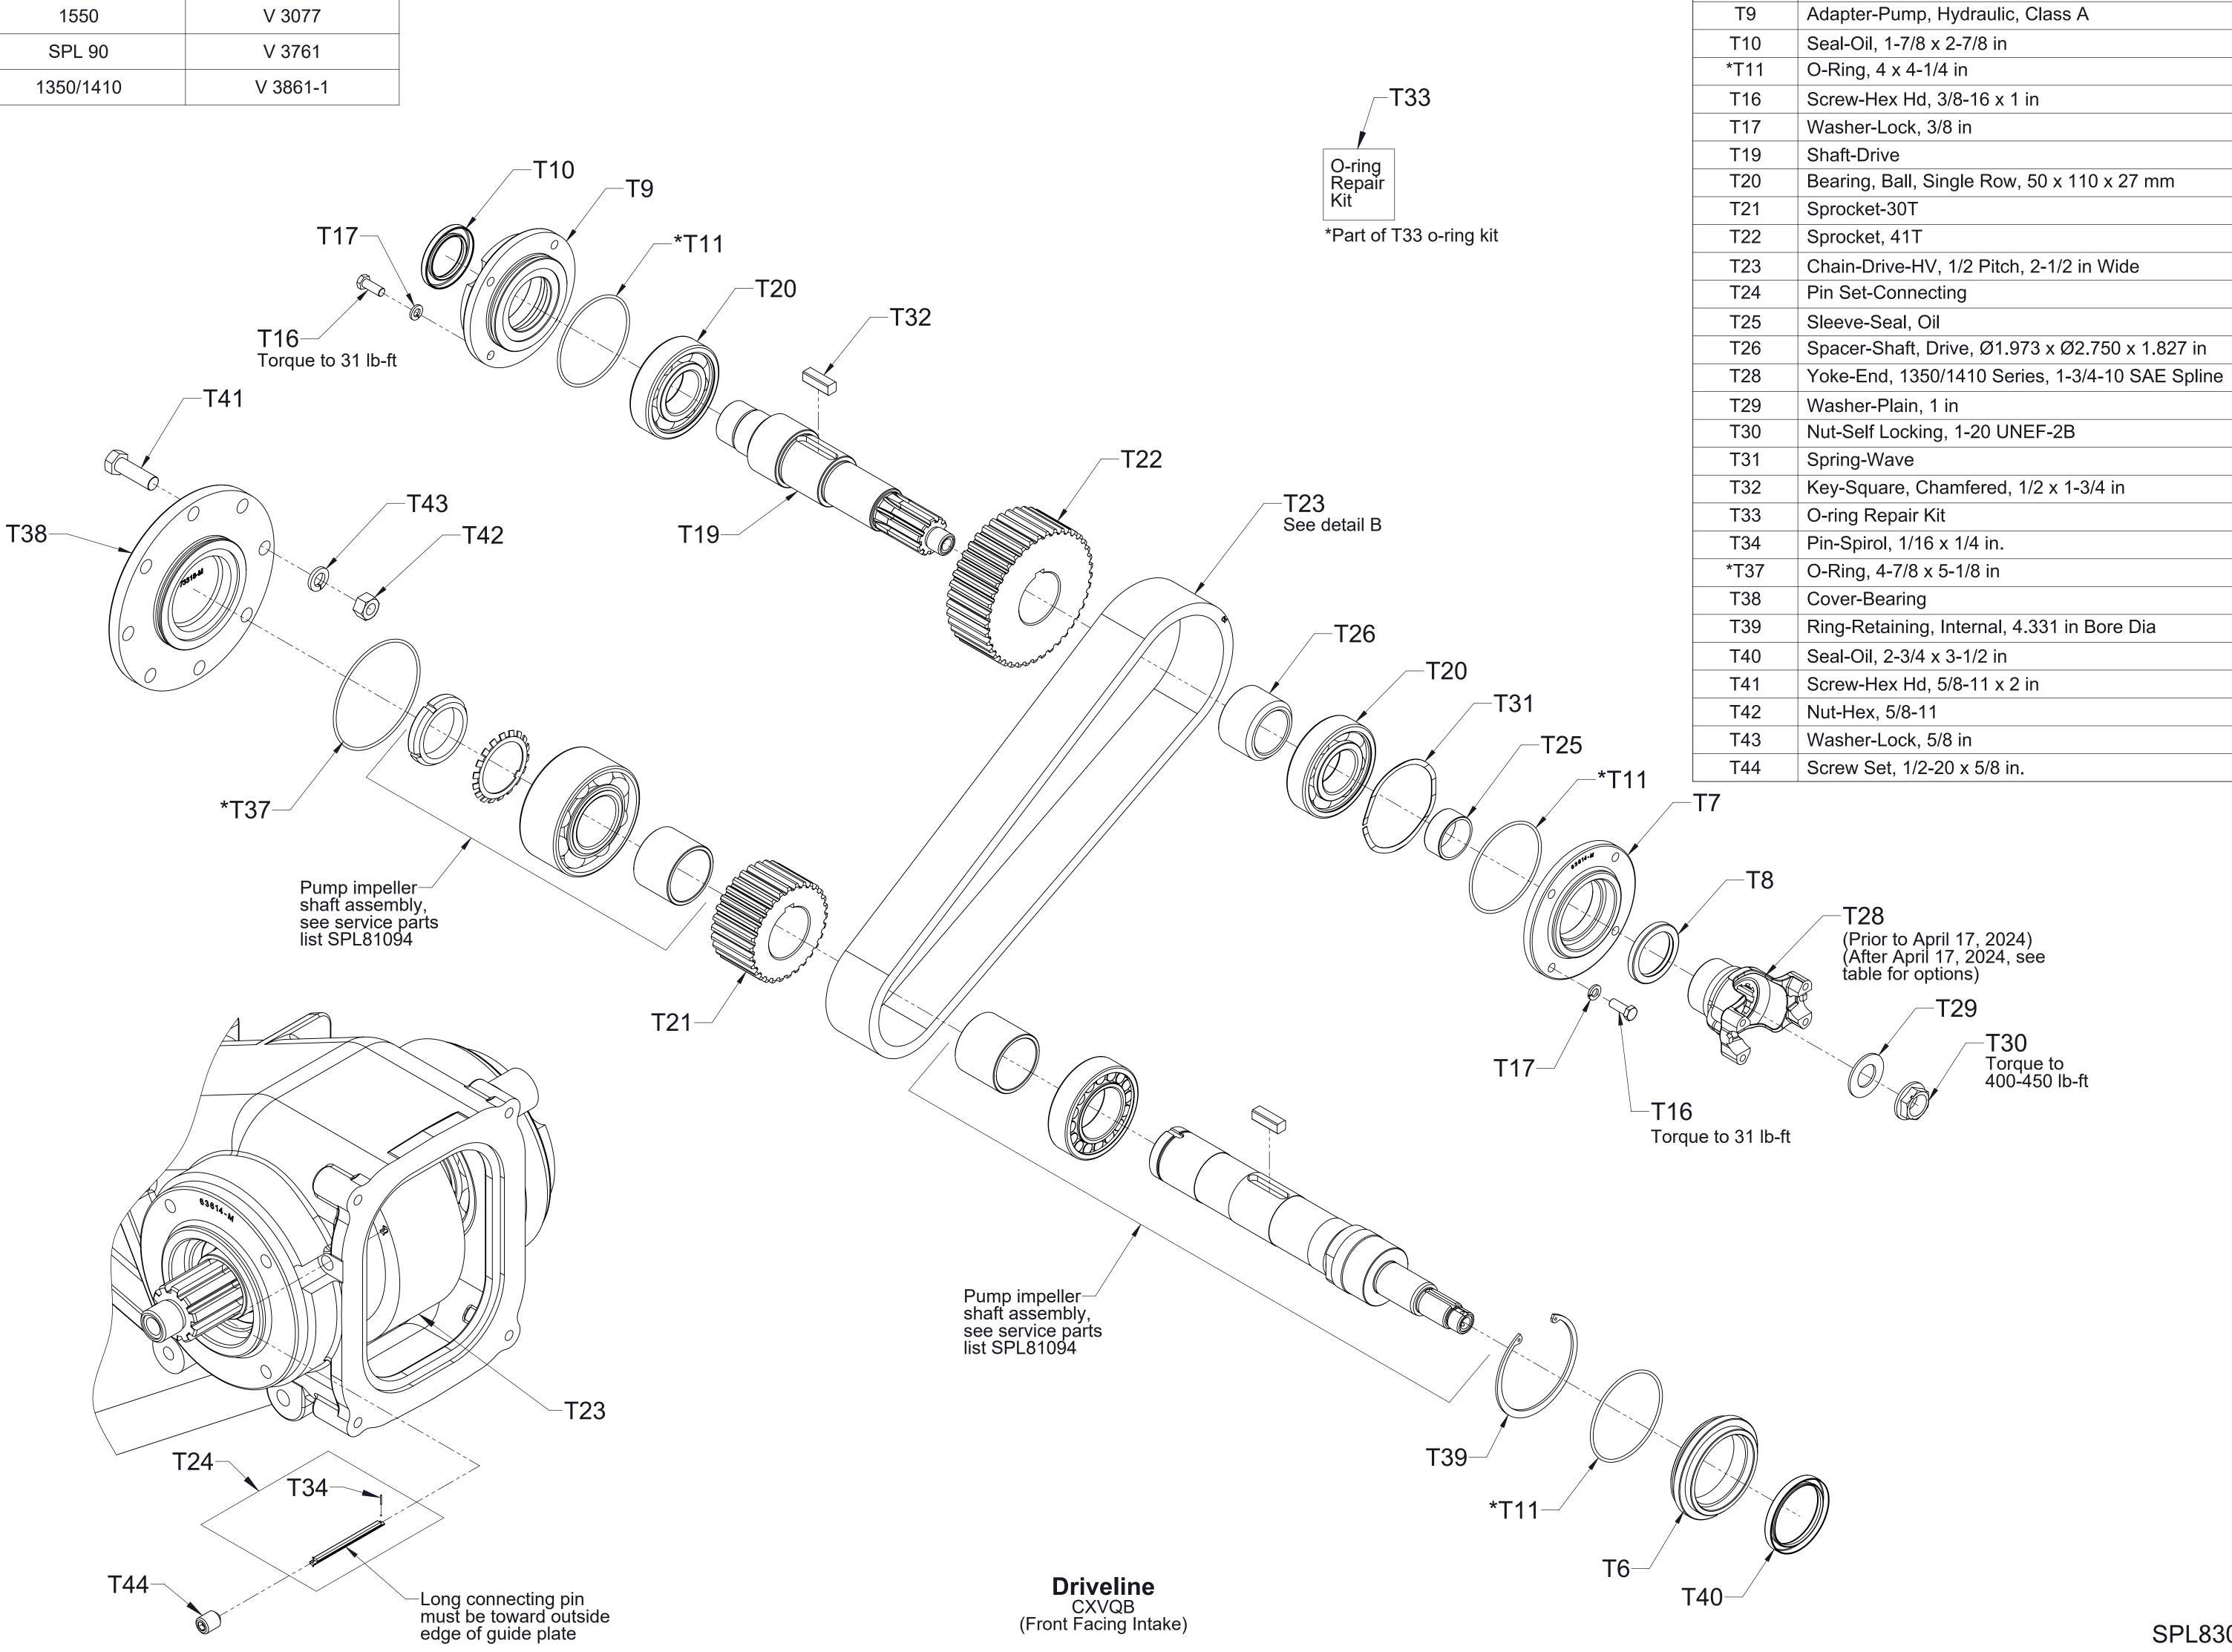

Description


Ref No.

T6


Housing-Seal, Oil

Housing-Seal, Oil


Seal-Oil, 2 x 2-3/4 in

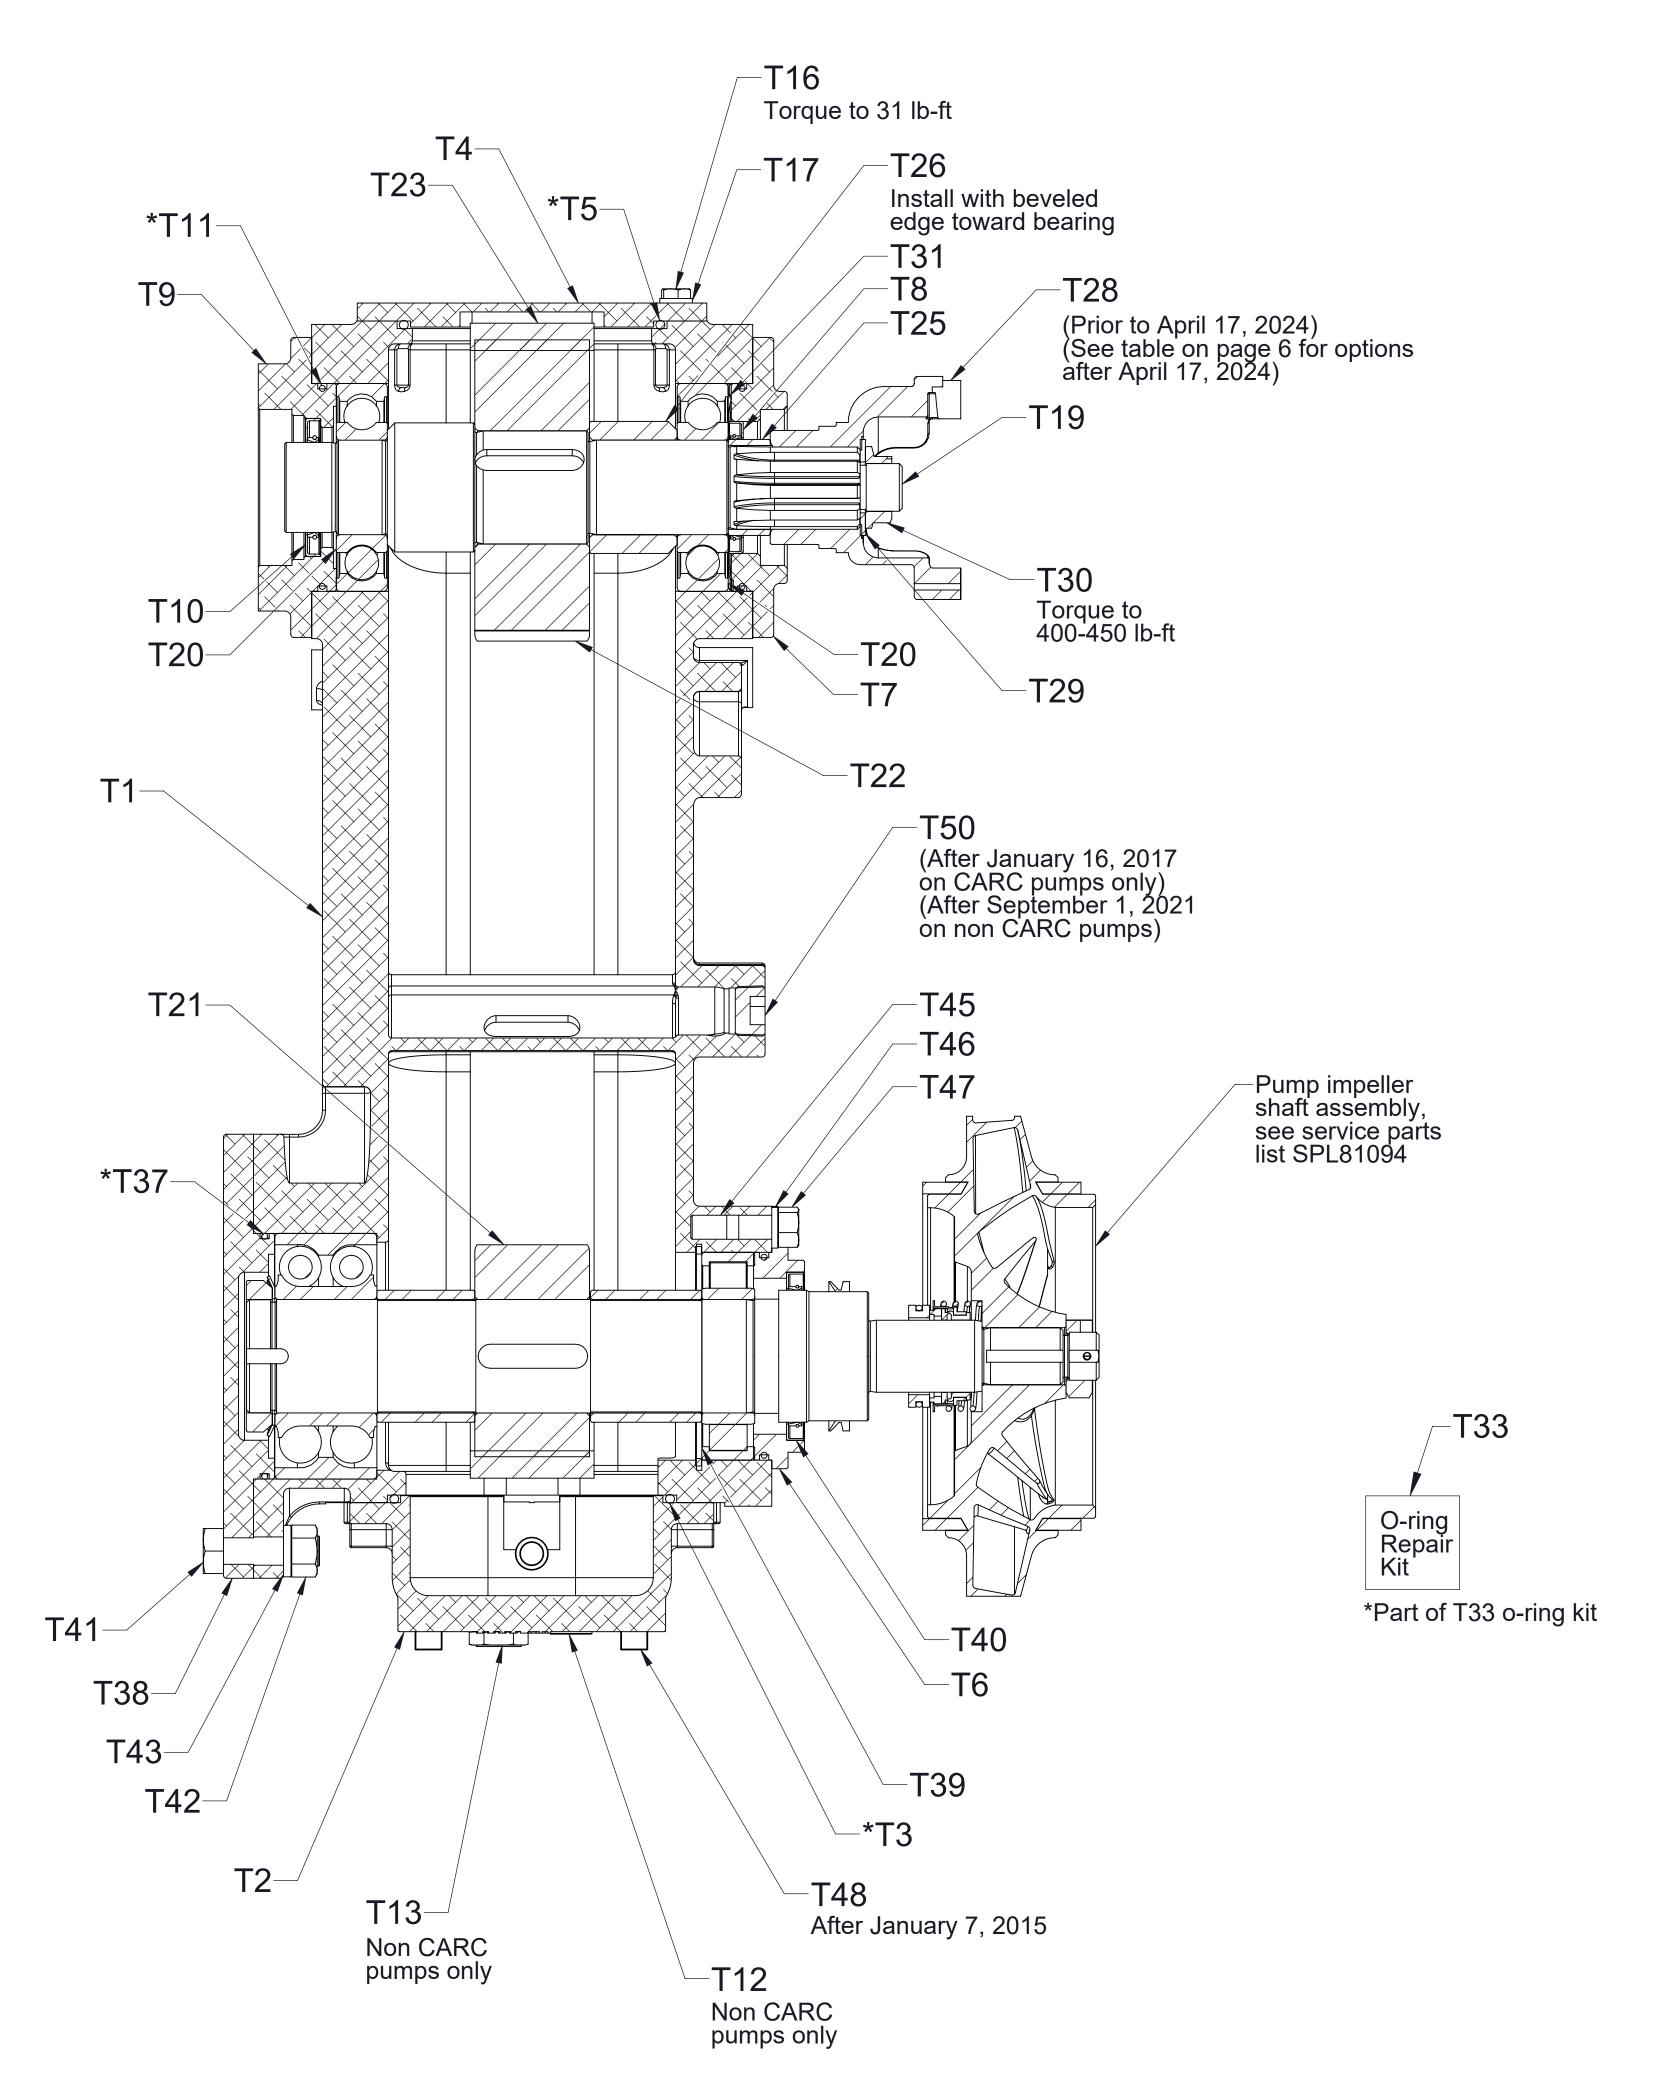

Ref No.	Description
T1	Case-Transmission
T2	Pan-Bottom Transmission
*T3	O-Ring, 10-1/2 x 10-7/8 in
T4	Cover-Case
*T5	O-Ring, 6-3/4 x 7-1/8 in
Т6	Housing-Seal, Oil
T7	Housing-Seal, Oil
Т8	Seal-Oil, 2 x 2-3/4 in
Т9	Adapter-Pump, Hydraulic, Class A
T10	Seal-Oil, 1-7/8 x 2-7/8 in
*T11	O-Ring, 4 x 4-1/4 in
T12	Plug-Magnetic, 3/4 in (Includes T35)
T13	Plug-Site, Glass, 3/4 NPT
T16	Screw-Hex Hd, 3/8-16 x 1 in
T17	Washer-Lock, 3/8 in
T19	Shaft-Drive
T20	Bearing, Ball, Single Row, 50 x 110 x 27 mm
T21	Sprocket-30T
T22	Sprocket, 41T
T23	Chain-Drive-HV, 1/2 Pitch, 2-1/2 in Wide
T25	Sleeve-Seal, Oil
T26	Spacer-Shaft, Drive, Ø1.973 x Ø2.750 x 1.827 in
T28	Yoke-End, 1350/1410 Series, 1-3/4-10 SAE Spline
T29	Washer-Plain, 1 in
T30	Nut-Self Locking, 1-20 UNEF-2B
T31	Spring-Wave
T33	O-ring Repair Kit
*T37	O-Ring, 4-7/8 x 5-1/8 in
T38	Cover-Bearing
T39	Ring-Retaining, Internal, 4.331 in Bore Dia
T40	Seal-Oil, 2-3/4 x 3-1/2 in
T41	Screw-Hex Hd, 5/8-11 x 2 in
T42	Nut-Hex, 5/8-11
T43	Washer-Lock, 5/8 in
T45	Stud-Coarse, 1/2-13 x 2-1/4 in
T46	Washer-Lock, 1/2 in
T47	Nut-Hex, 1/2-13
T48	Plug-Pipe, Square Hd, 1/2 NPT
T50	Plug-Pipe, Headless, 3/4 NPT
55	Impeller
56	Ring-Wear

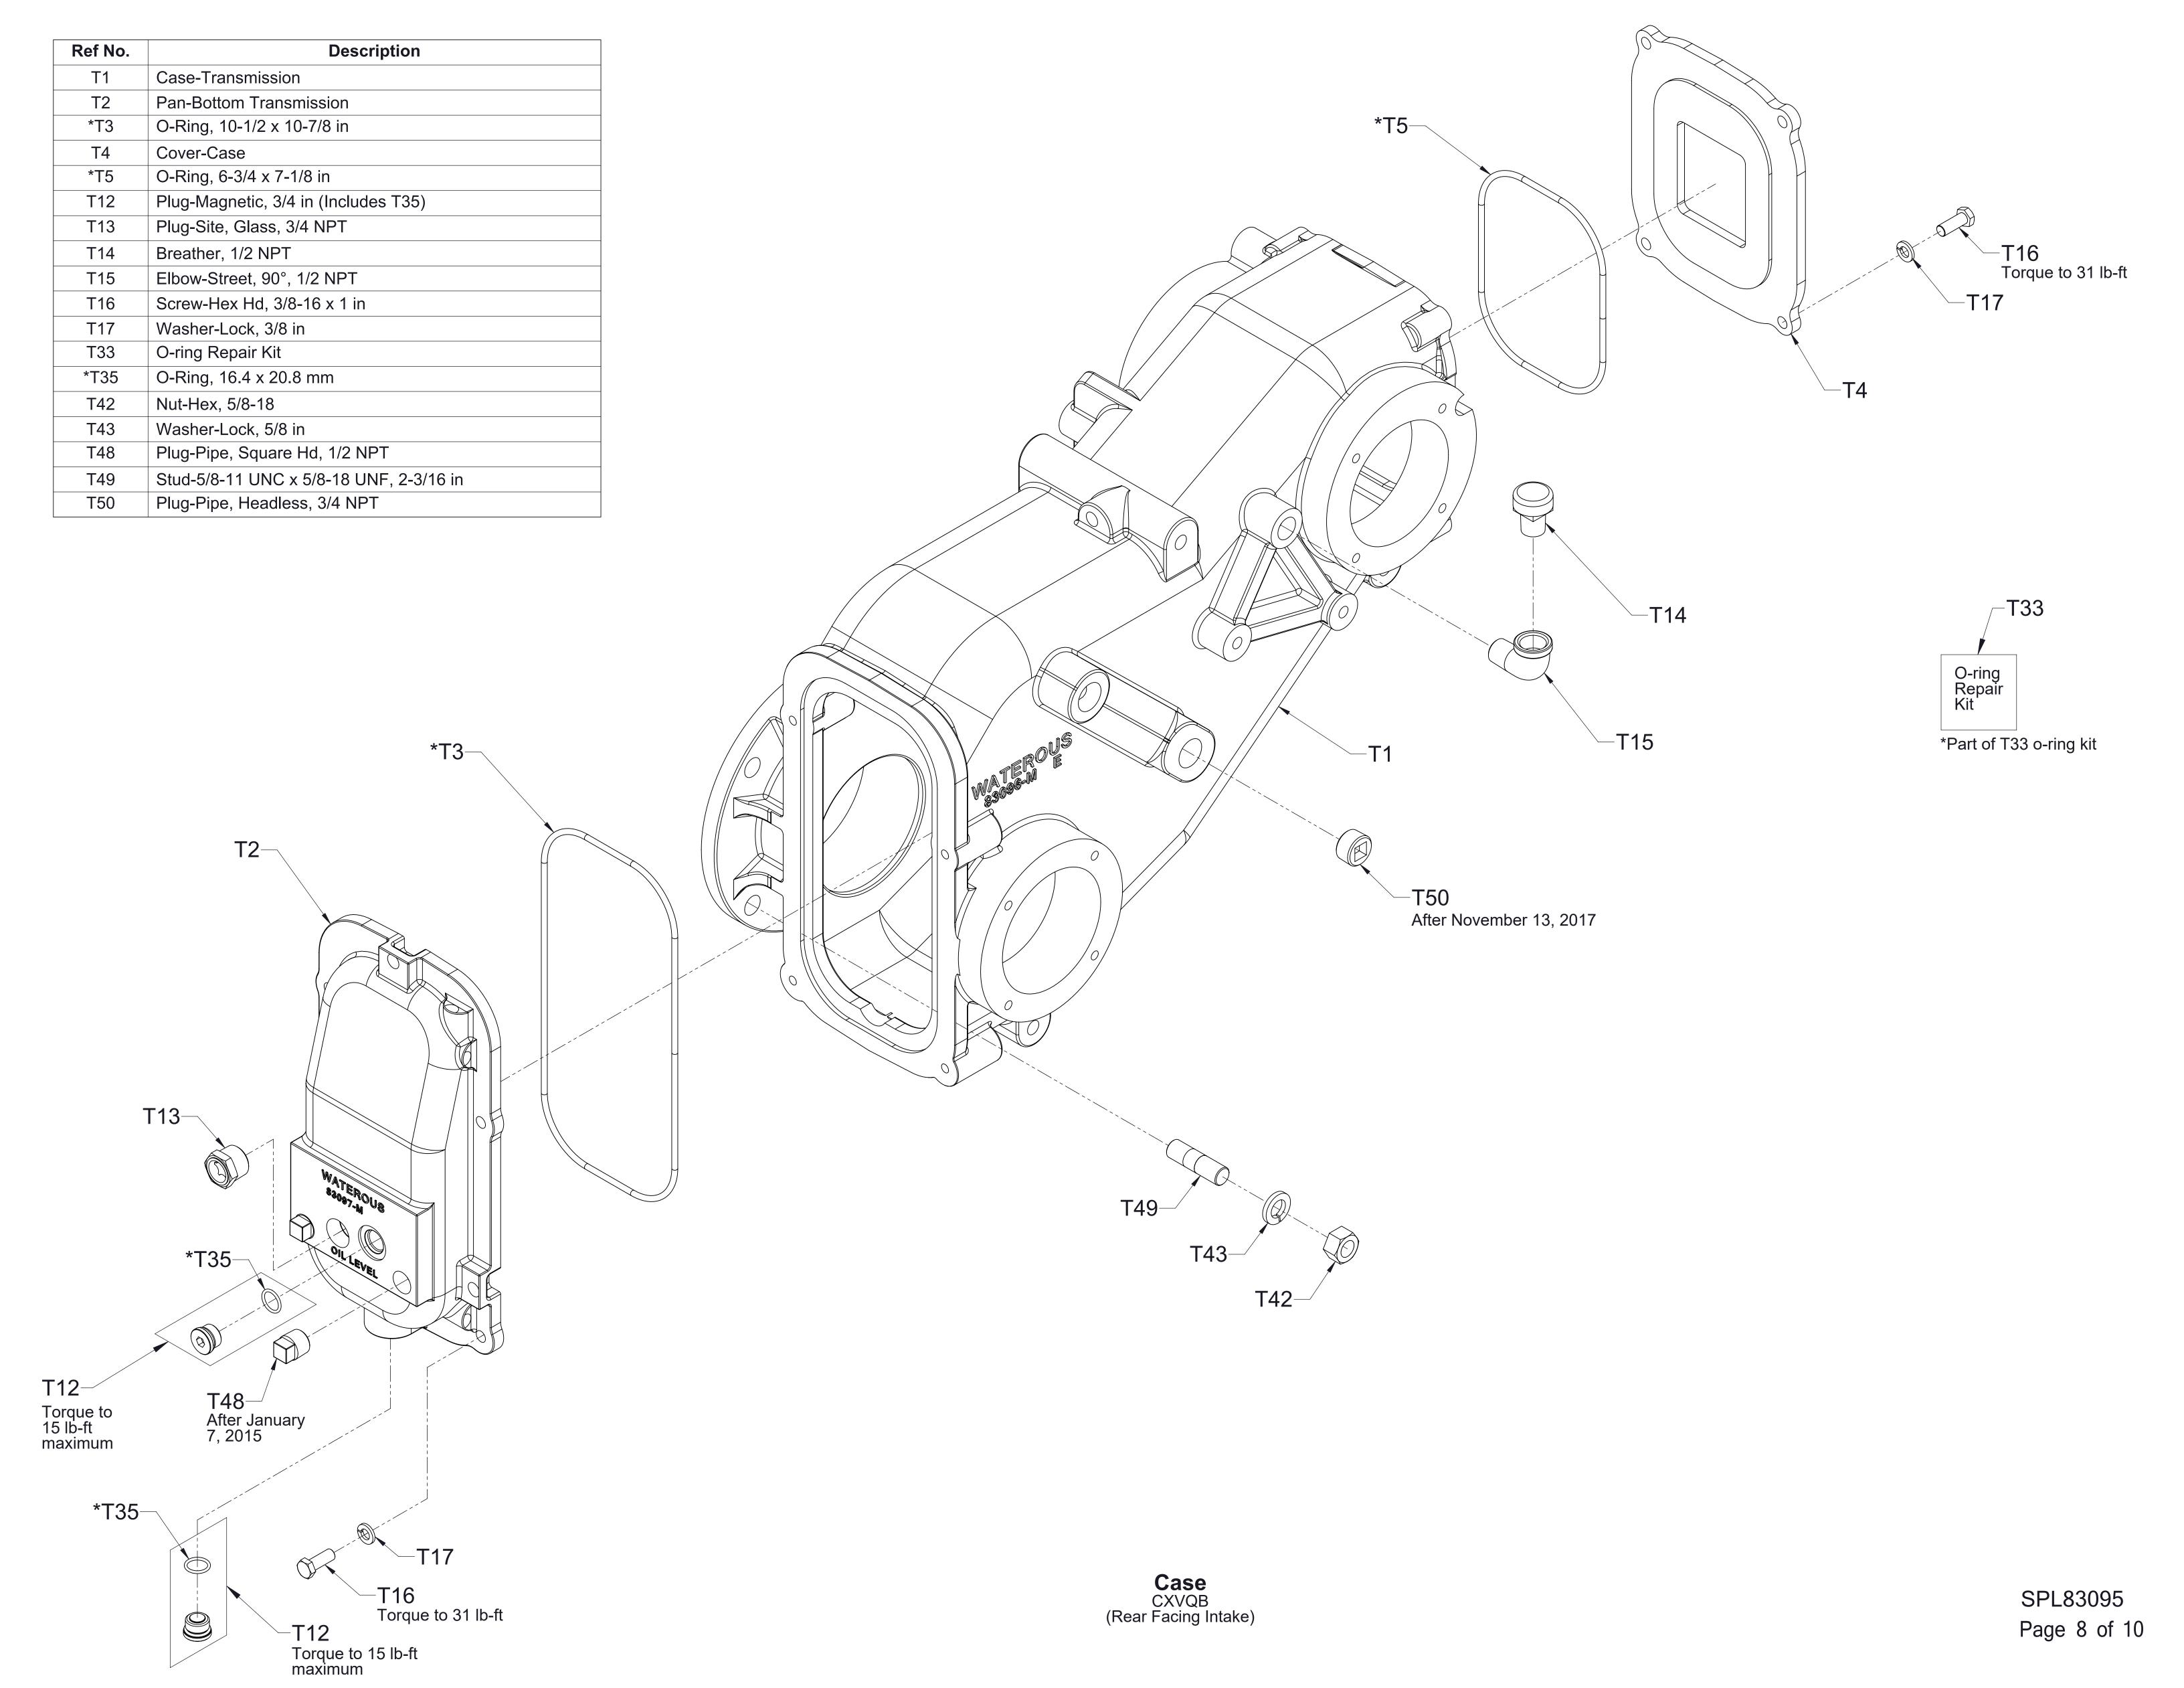

Optional End Yokes		
Series	Part Number	
1550	V 3077	
SPL 90	V 3761	
1350/1410	V 3861-1	

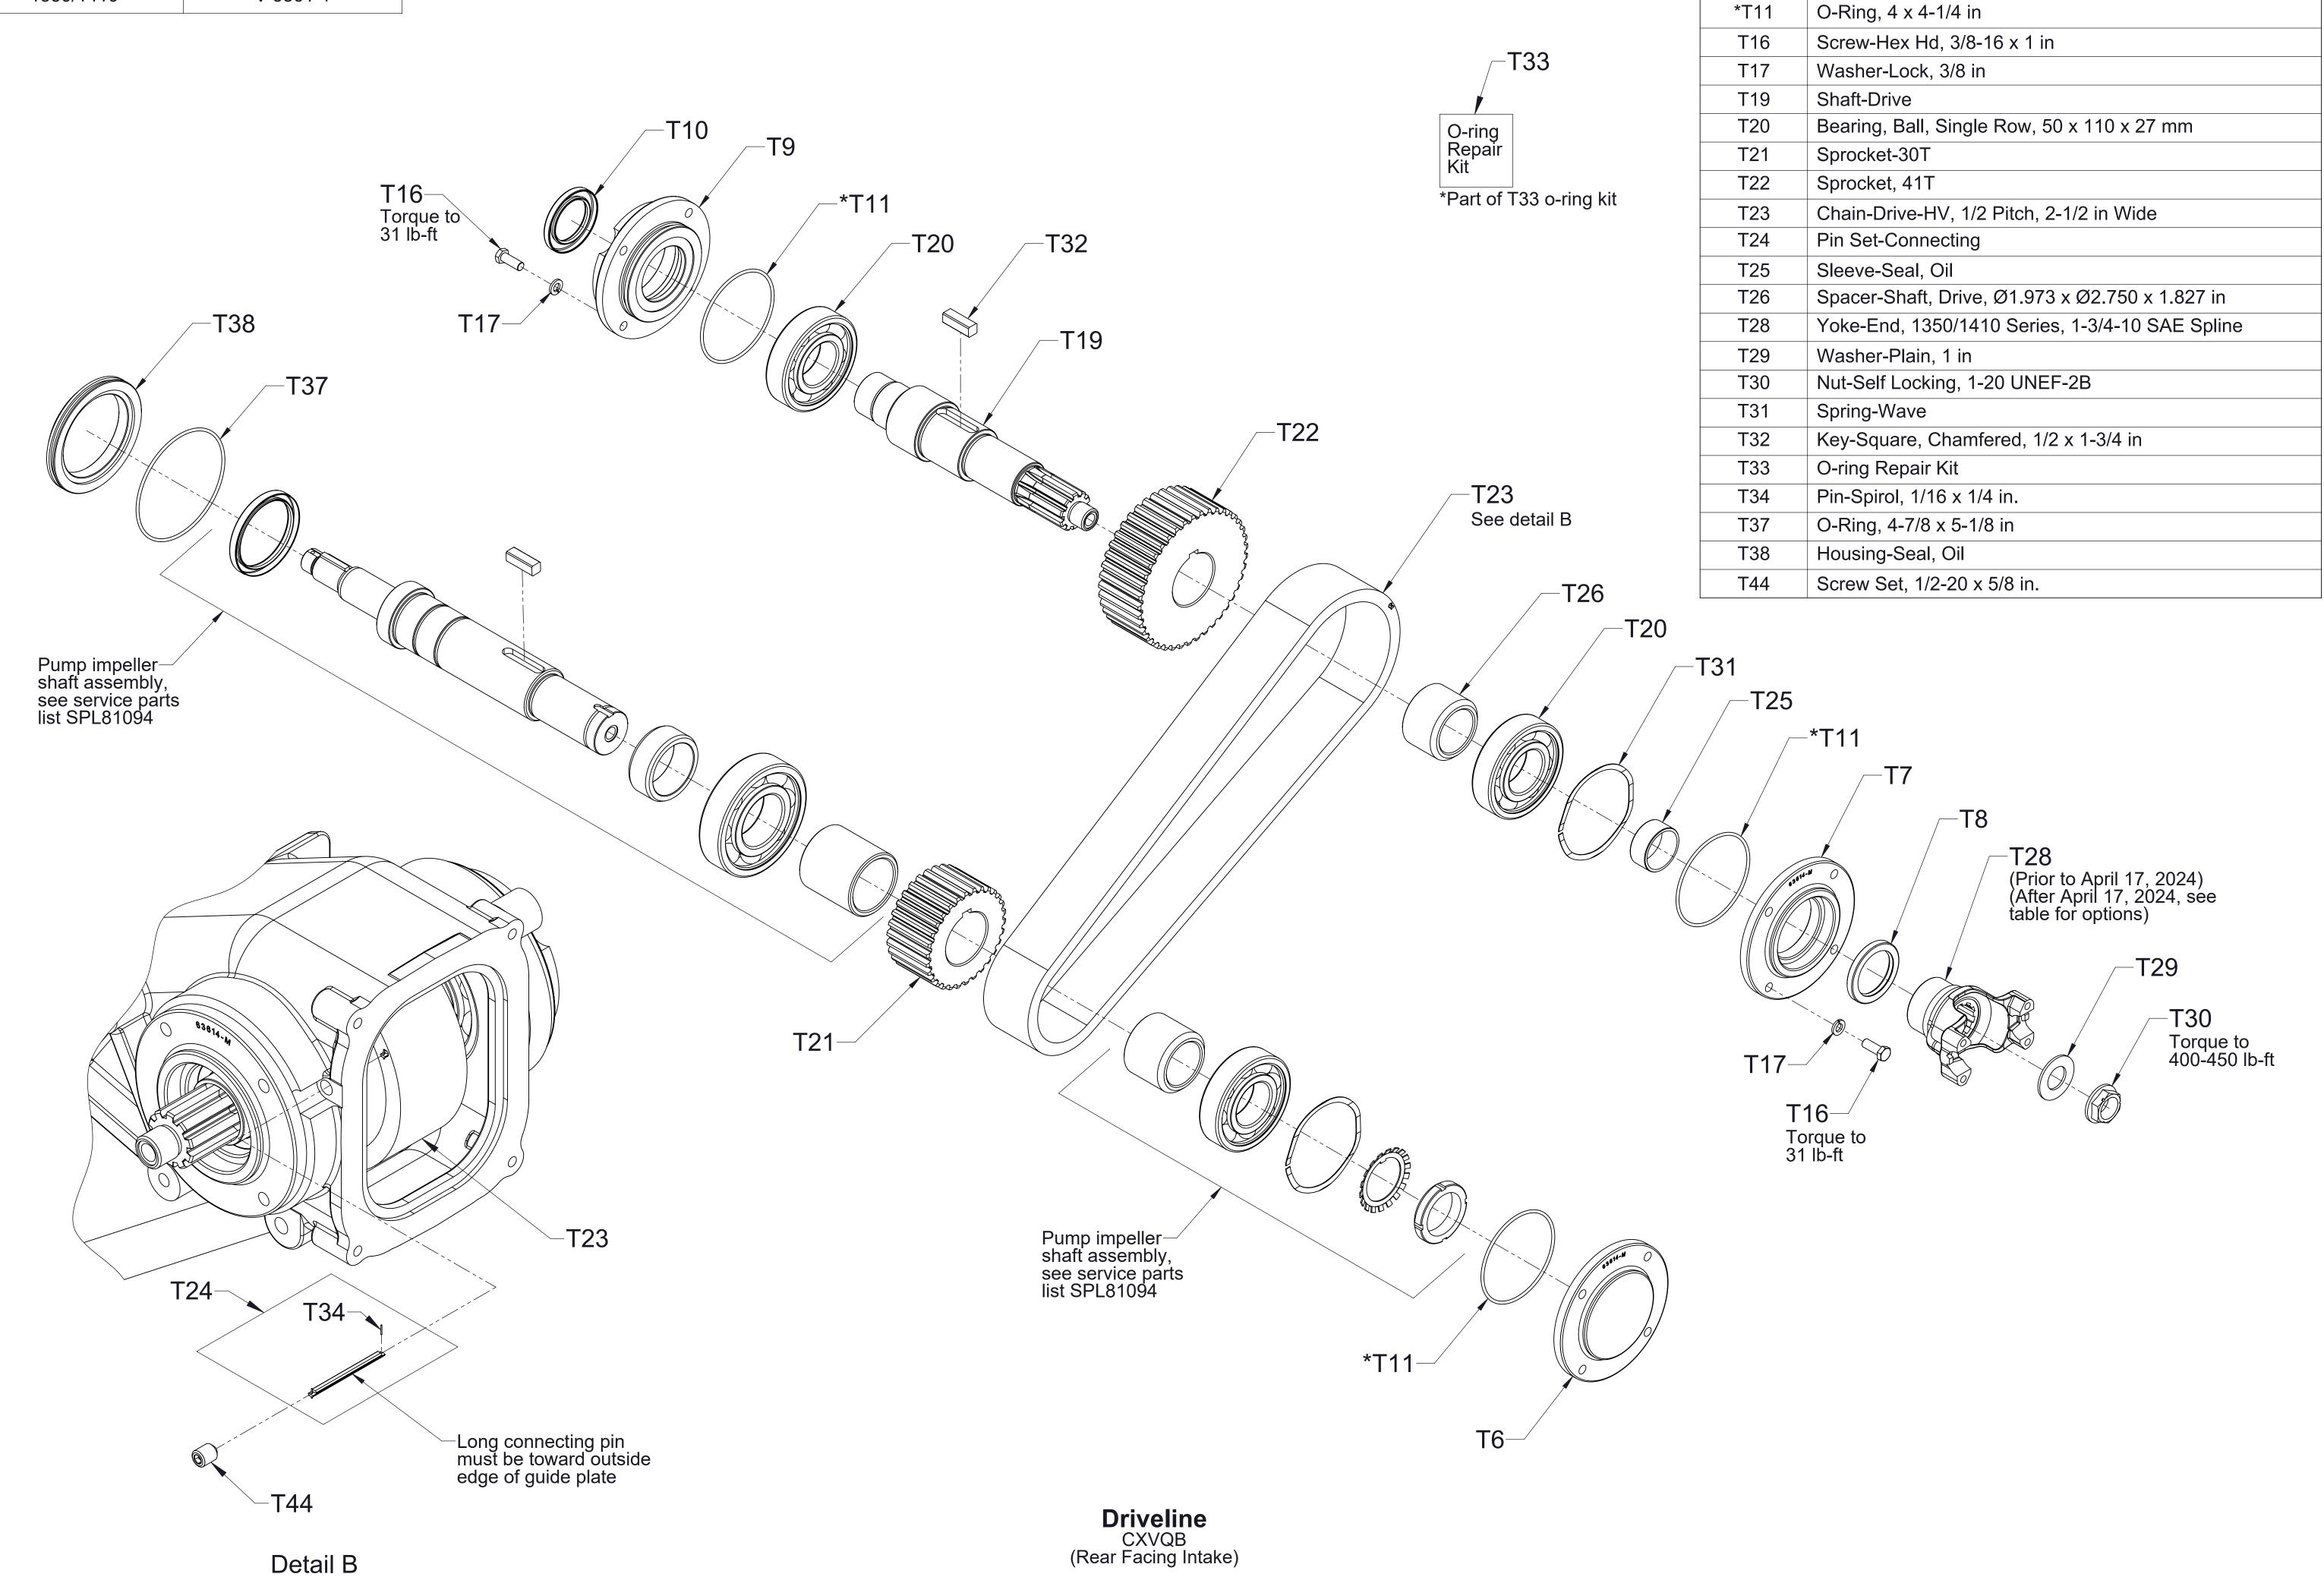

Description

Ref No.


Cover-Bearing

Housing-Seal, Oil

Seal-Oil, 2 x 2-3/4 in

Seal-Oil, 1-7/8 x 2-7/8 in

Adapter-Pump, Hydraulic, Class A

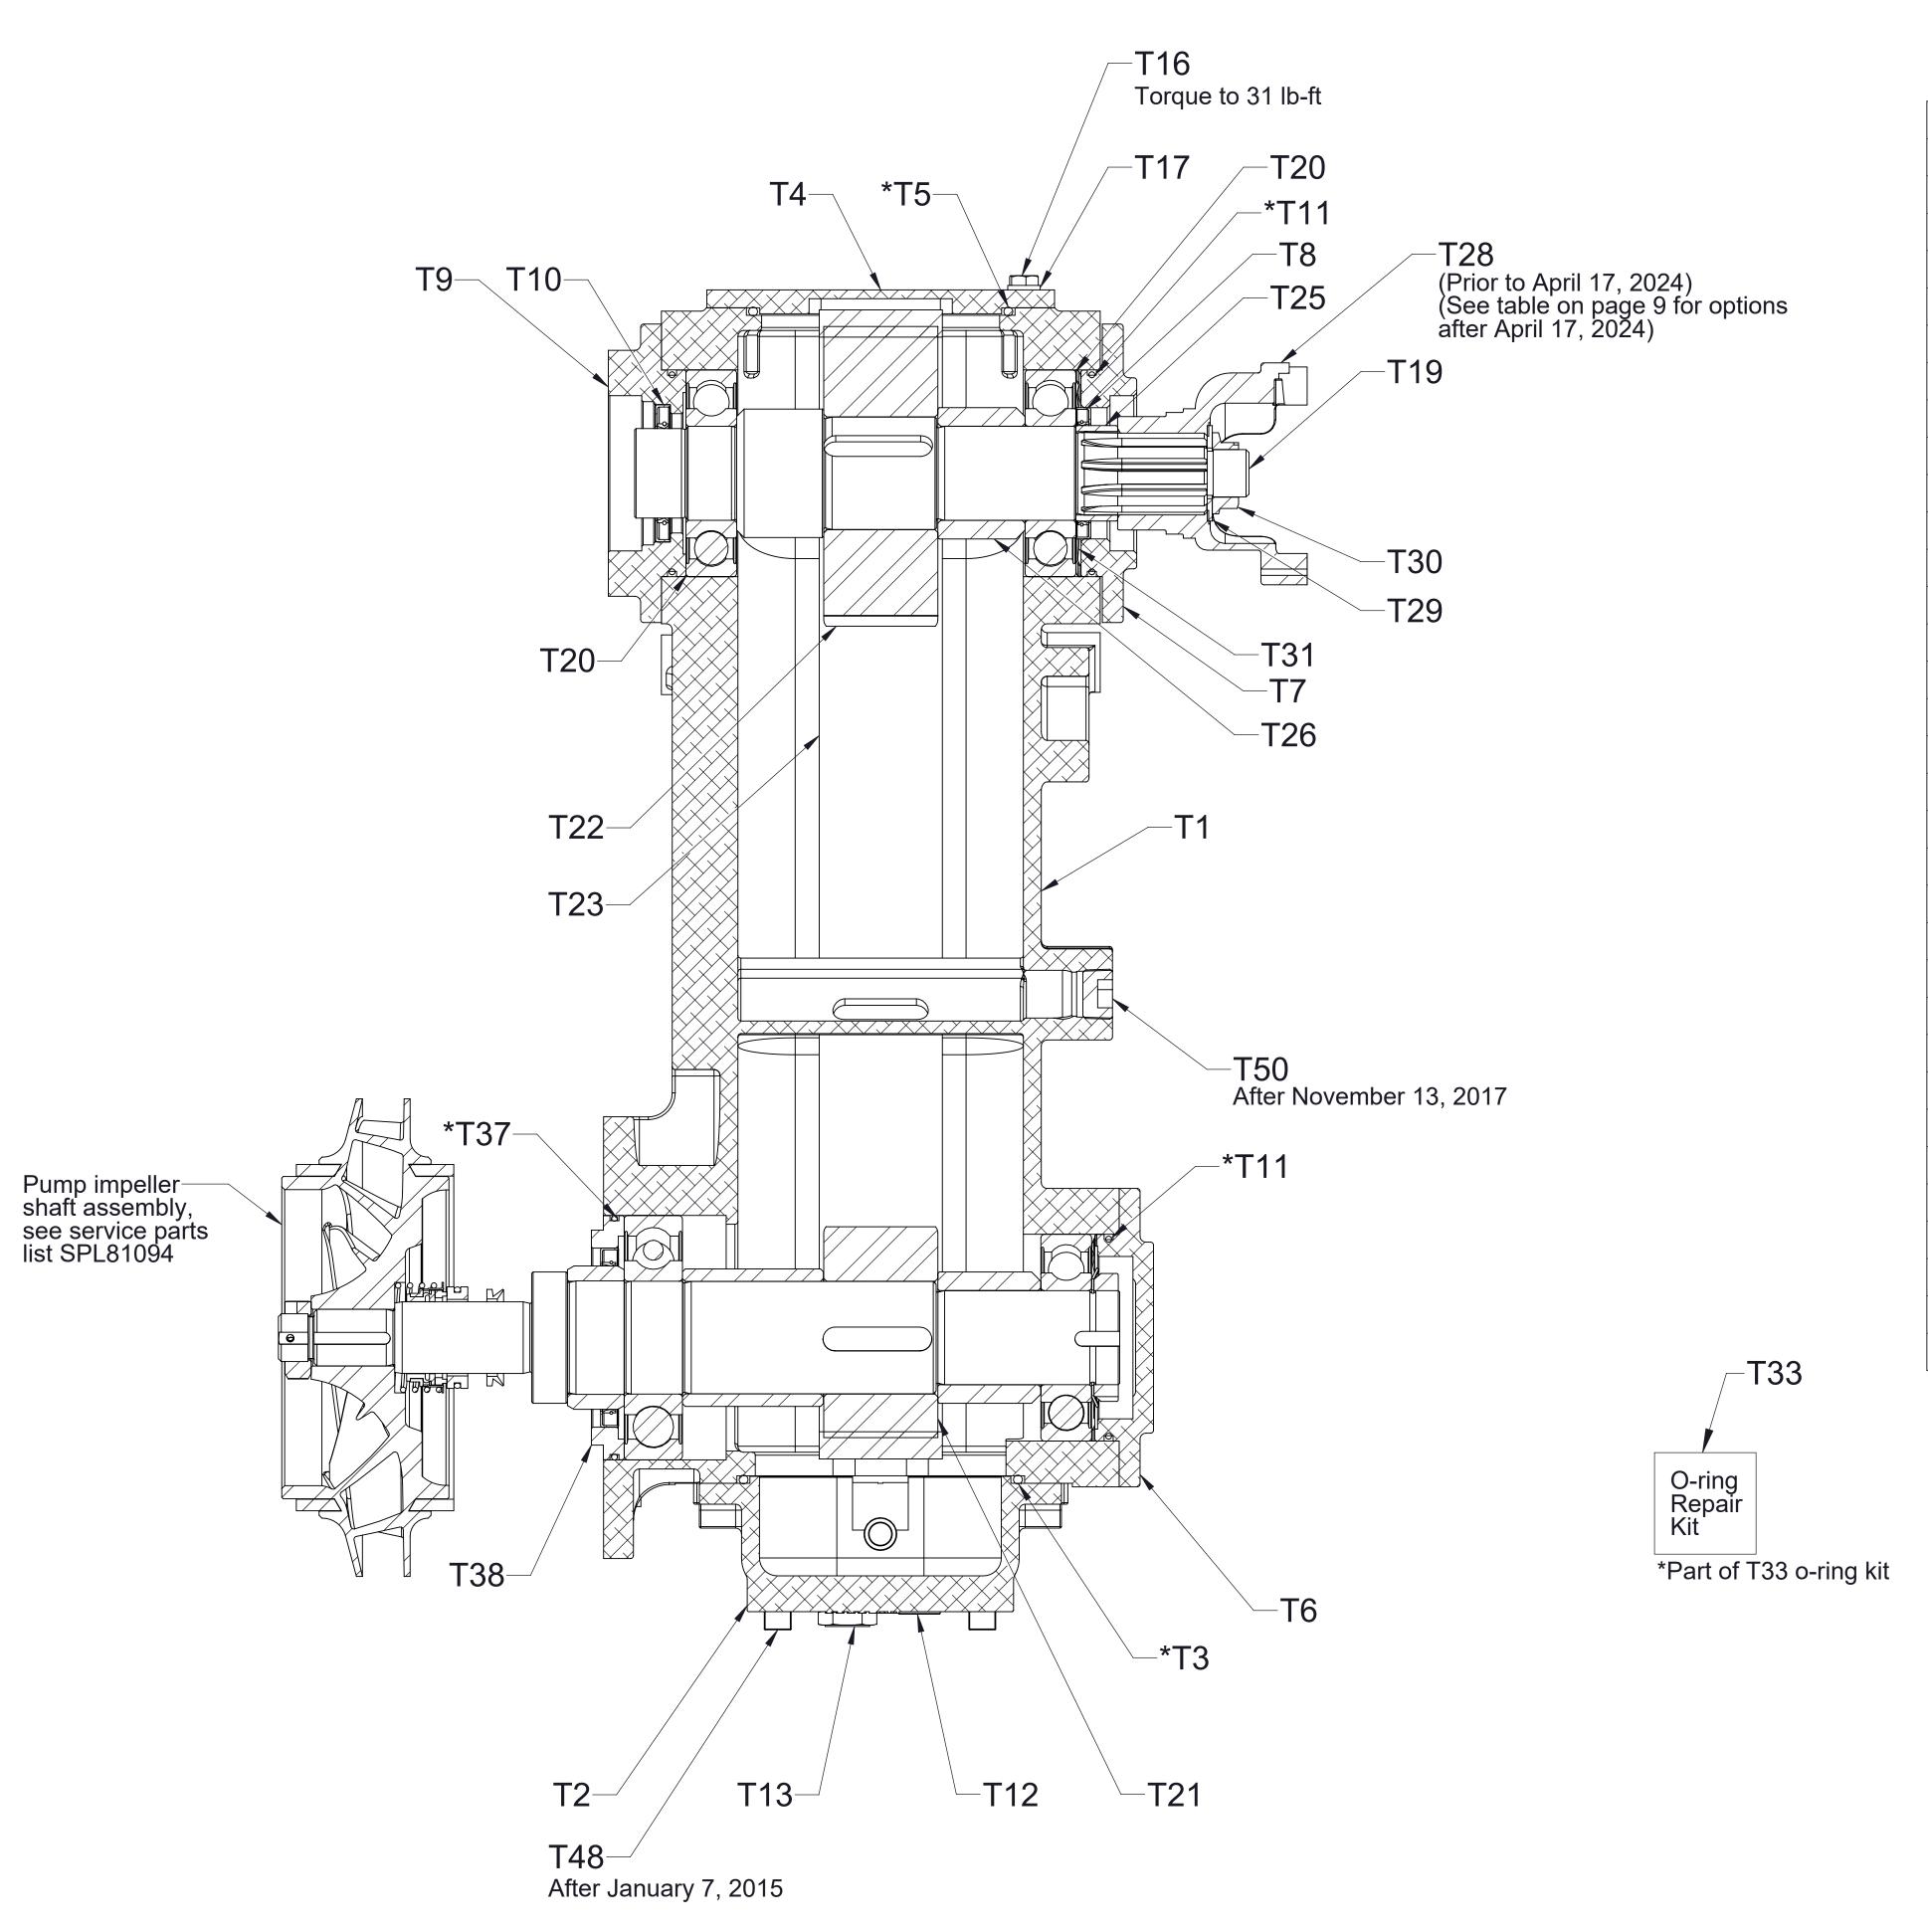

Ref No.	Description
T1	Case-Transmission
T2	Pan-Bottom Transmission
*T3	O-Ring, 10-1/2 x 10-7/8 in
T4	Cover-Case
*T5	O-Ring, 6-3/4 x 7-1/8 in
Т6	Cover-Bearing
T7	Housing-Seal, Oil
Т8	Seal-Oil, 2 x 2-3/4 in
Т9	Adapter-Pump, Hydraulic, Class A
T10	Seal-Oil, 1-7/8 x 2-7/8 in
*T11	O-Ring, 4 x 4-1/4 in
T12	Plug-Magnetic, 3/4 in (Includes T35)
T13	Plug-Site, Glass, 3/4 NPT
T16	Screw-Hex Hd, 3/8-16 x 1 in
T17	Washer-Lock, 3/8 in
T19	Shaft-Drive
T20	Bearing, Ball, Single Row, 50 x 110 x 27 mm
T21	Sprocket-30T
T22	Sprocket, 41T
T23	Chain-Drive-HV, 1/2 Pitch, 2-1/2 in Wide
T25	Sleeve-Seal, Oil
T26	Spacer-Shaft, Drive, Ø1.973 x Ø2.750 x 1.827 in
T28	Yoke-End, 1350/1410 Series, 1-3/4-10 SAE Spline
T29	Washer-Plain, 1 in
T30	Nut-Self Locking, 1-20 UNEF-2B
T31	Spring-Wave
T33	O-ring Repair Kit
*T37	O-Ring, 4-7/8 x 5-1/8 in
T38	Housing-Seal, Oil
T48	Plug-Pipe, Square Hd, 1/2 NPT
T50	Plug-Pipe, Headless, 3/4 NPT
49	Impeller
50	Ring-Wear