

Document Number	Issue Date	Rev. Date
SPL83160	03/29/11	9/11/19

Heavy Duty K Transmission Service Parts List

(As used with HL Series Fire Pumps)


Index:

			See Pages	
Item		Optional Compressor Drive (Extended Shaft)		
			With	
Casa Campananta	Exploded View	2, 3	6, 7	
Case Components	Cross-Section View	4, 5	8, 9	
Mounting on Dump	Connection to Pump	10, 11	12, 13	
Mounting on Pump	Optional Case Positions	14, 15	14, 15	
	Standard Intake Adapter (Prior to September 10, 2019)	16, 17	-	
Optional Oil Cooler	Standard Intake Adapter (After September 10, 2019)	18, 19	-	
	Short Intake Adapter	20, 21		

Case Components - Without Compressor Drive - Exploded View

REF. NO.	DESCRIPTION
T2	Serial plate
T3	Driven gear
T4	Gasket
T8	Gasket
T10	Oil seal housing
T11	Drive shaft
T13	Gear case subassembly
T14	Dowel pin, 3/8 x 1 in.
T15	Drive gear
T19	Hex hd screw, 3/8-16 x 1-1/4 in., Grade 5
T24	Oil seal, 1-5/8 x 2-7/16 in.
T25	Lock washer, 3/8 in.
T28	Retaining ring
T29	Square key, 3/8 x 1-3/4 in.
T32	Drive screw, no. 6 x 1/4 in.
T37	Bearing spacer
T39	Oil seal sleeve


REF. NO.	DESCRIPTION
T41	Bearing lock nut
T46	Shaft nut, 1-20
T47	Bearing lock washer
T49	O-ring, 3-1/4 x 3-1/2 in.
T50	Oil seal, 1-7/8 x 2-3/4 in.
T52	Ball bearing
T53	Ball bearing
T54	Ball bearing
T92	Hex hd screw, 3/8-16 x 1 in.
T96	Driven shaft
T99	Square key, 5/16 x 1-9/16 in. (all ratios except 2.83) Rectangular key, 1/4 x 5/16 x 1-9/16 in. (2.83 ratio only)
T102	Retaining strap
T103	Disk cover
T109	Companion flange or end yoke

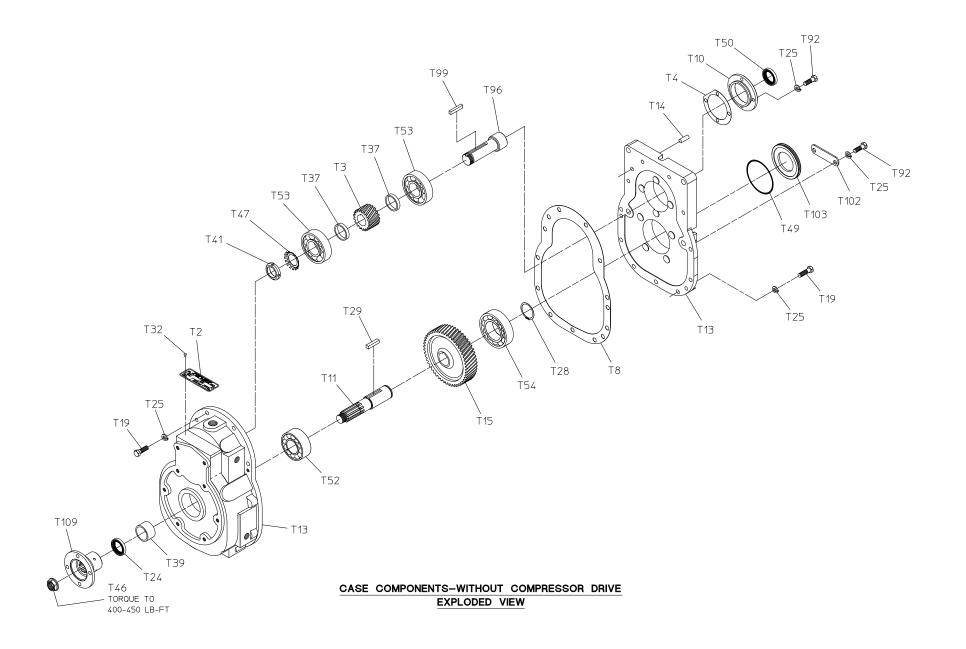

Case Components - Without Compressor Drive - Cross-Section View

REF. NO.	DESCRIPTION
T2	Serial plate
T3	Driven gear
T4	Gasket
T8	Gasket
T10	Oil seal housing
T11	Drive shaft
T13	Gear case subassembly
T14	Dowel pin, 3/8 x 1 in.
T15	Drive gear
T19	Hex hd screw, 3/8-16 x 1-1/4 in., Grade 5
T24	Oil seal, 1-5/8 x 2-7/16 in.
T25	Lock washer, 3/8 in.
T28	Retaining ring
T29	Square key, 3/8 x 1-3/4 in.
T32	Drive screw, no. 6 x 1/4 in.
T37	Bearing spacer
T39	Oil seal sleeve

REF. NO.	DESCRIPTION
T41	Bearing lock nut
T46	Shaft nut, 1-20
T47	Bearing lock washer
T49	O-ring, 3-1/4 x 3-1/2 in.
T50	Oil seal, 1-7/8 x 2-3/4 in.
T52	Ball bearing
T53	Ball bearing
T54	Ball bearing
T92	Hex hd screw, 3/8-16 x 1 in.
T96	Driven shaft
T99	Square key, 5/16 x 1-9/16 in.
T102	Retaining strap
T103	Disk cover
T109	Companion flange or end yoke

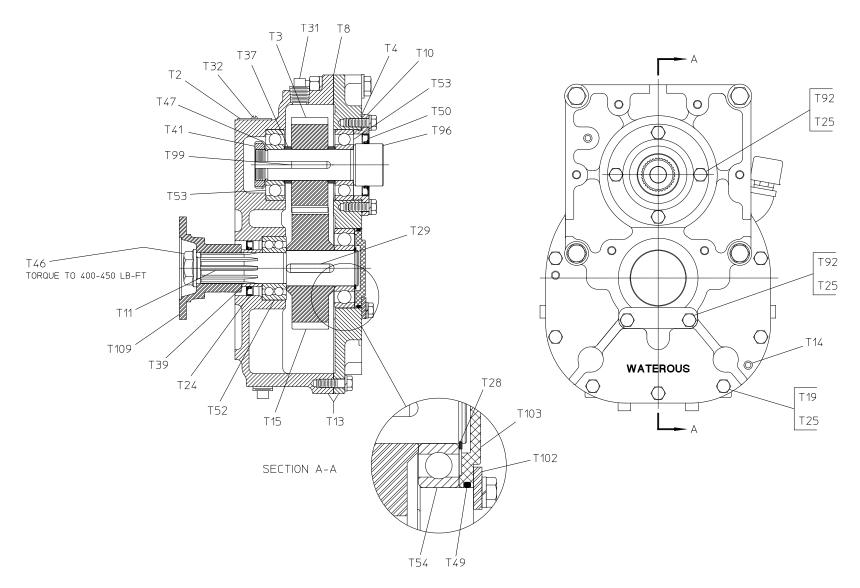


CASE COMPONENTS-WITHOUT COMPRESSOR DRIVE CROSS-SECTION VIEW

Case Components - With Compressor Drive - Exploded View

REF. NO.	DESCRIPTION
T2	Serial plate
Т3	Driven gear
T8	Gasket
T11	Drive shaft
T13	Gear case subassembly
T14	Dowel pin, 3/8 x 1 in.
T15	Drive gear
T19	Hex hd screw, 3/8-16 x 1-1/4 in., Grade 5
T24	Oil seal, 1-5/8 x 2-7/16 in.
T25	Lock washer, 3/8 in.
T28	Retaining ring
T29	Square key, 3/8 x 1-3/4 in.
T32	Drive screw, no. 6 x 1/4 in.
T37	Bearing spacer
T39	Oil seal sleeve
T41	Bearing lock nut
T46	Shaft nut, 1-20
T47	Bearing lock washer


REF. NO.	DESCRIPTION
T49	O-ring, 3-1/4 x 3-1/2 in.
T50	Oil seal, 1-7/8 x 2-3/4 in.
T52	Ball bearing
T54	Ball bearing
T92	Hex hd screw, 3/8-16 x 1 in.
T96	Driven shaft
T99	Square key, 5/16 x 1-9/16 in.
T100	Oil seal, 1-1/4 x 2 in.
T101	Drive shaft spacer
T102	Retaining strap
T103	Disk cover
T108	O-ring, 4-3/4 x 5 in.
T109	Companion flange or end yoke
T110	Ball bearing, double row
T111	Ball bearing, single row
T112	Transmission adapter plate
T113	Bearing spacer
T118	Socket head cap screw, 3/8-16 x 1-1/4 in.
T119	Copper washer, 3/8 in.

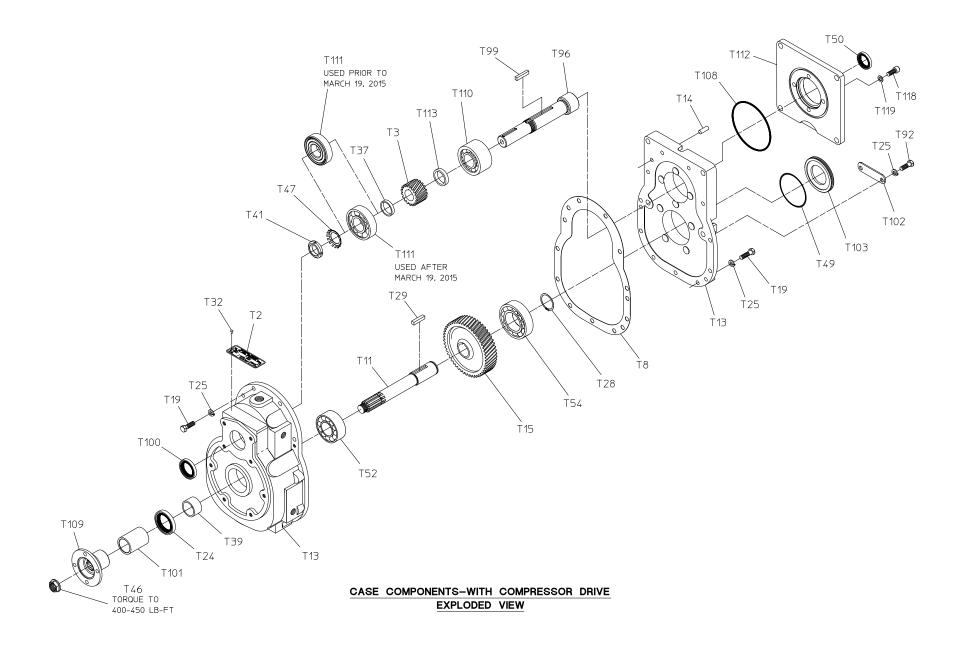

Case Components - With Compressor Drive - Cross-Section View

REF. NO.	DESCRIPTION
T2	Serial plate
Т3	Driven gear
T8	Gasket
T11	Drive shaft
T13	Gear case subassembly
T14	Dowel pin, 3/8 x 1 in.
T15	Drive gear
T19	Hex hd screw, 3/8-16 x 1-1/4 in., Grade 5
T24	Oil seal, 1-5/8 x 2-7/16 in.
T25	Lock washer, 3/8 in.
T28	Retaining ring
T29	Square key, 3/8 x 1-3/4 in.
T32	Drive screw, no. 6 x 1/4 in.
T37	Bearing spacer
T39	Oil seal sleeve
T41	Bearing lock nut
T46	Shaft nut, 1-20
T47	Bearing lock washer

REF. NO.	DESCRIPTION
T49	O-ring, 3-1/4 x 3-1/2 in.
T50	Oil seal, 1-7/8 x 2-3/4 in.
T52	Ball bearing
T54	Ball bearing
T92	Hex hd screw, 3/8-16 x 1 in.
T96	Driven shaft
T99	Square key, 5/16 x 1-9/16 in.
T100	Oil seal, 1-1/4 x 2 in.
T101	Drive shaft spacer
T102	Retaining strap
T103	Disk cover
T108	O-ring, 4-3/4 x 5 in.
T109	Companion flange or end yoke
T110	Ball bearing, double row
T111	Ball bearing, single row
T112	Transmission adapter plate
T113	Bearing spacer
T118	Socket head cap screw, 3/8-16 x 1-1/4 in.
T119	Copper washer, 3/8 in.

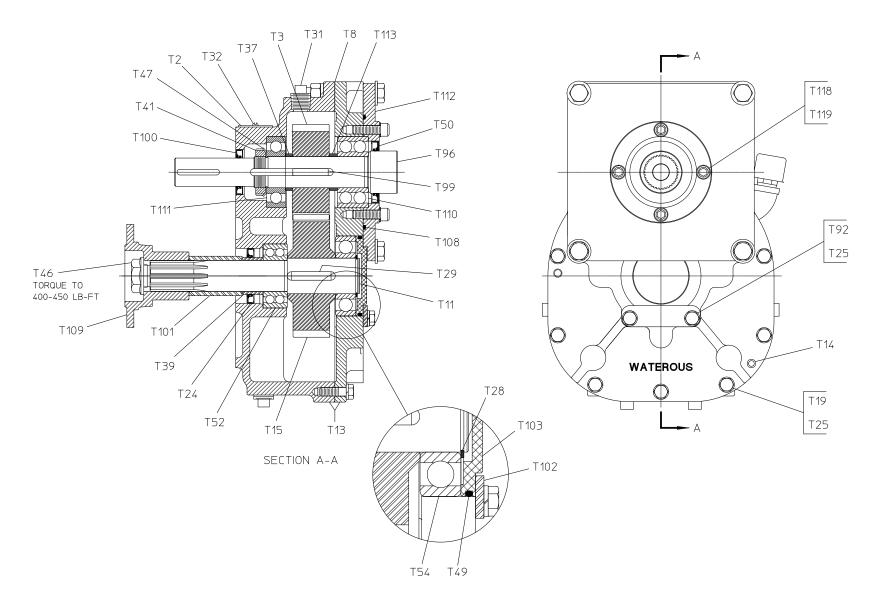


CASE COMPONENTS-WITH COMPRESSOR DRIVE CROSS-SECTION VIEW

Mounting on Pump - Connection to Pump - Without Compressor Drive

REF. NO.	DESCRIPTION
T21	Hex hd screw, 1/2-13 x 1-1/2, Grade 5
T22	Hex hd screw, 1/2-20 x 2-3/4 in., Grade 5, zinc plated
T23	Hex nut, 1/2-20
T27	Lock washer, 1/2 in.


REF. NO.	DESCRIPTION
T104	Plain washer, 1/2 in.
T105	Hex hd screw, M10 x 1.5 x 20 in.
T106	Spring lock wsaher, M10
T107	Lifting bracket
T108	O-ring, 4-3/4 x 5 in.

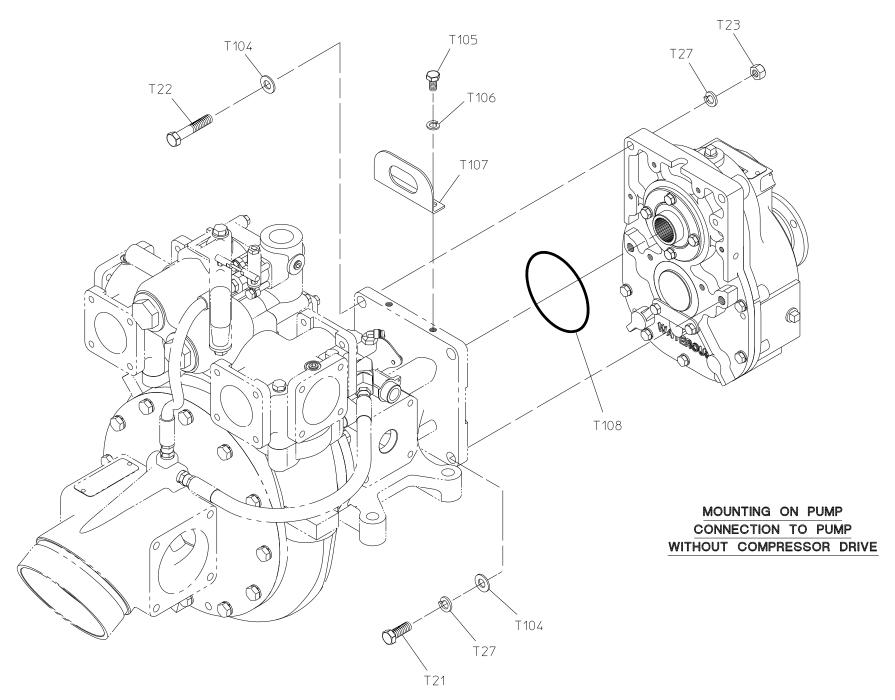

Mounting on Pump - Connection to Pump - With Compressor Drive

REF. NO.	DESCRIPTION
T23	Hex nut, 1/2-20
T27	Lock washer, 1/2 in.


REF. NO.	DESCRIPTION
T104	Plain washer, 1/2 in.
T108	O-ring, 4-3/4 x 5 in.
T116	Hex hd screw, 1/2-13 x 2, Grade 5
T117	Hex hd screw, 1/2-20 x 4-1/4 in., Grade 8, zinc plated

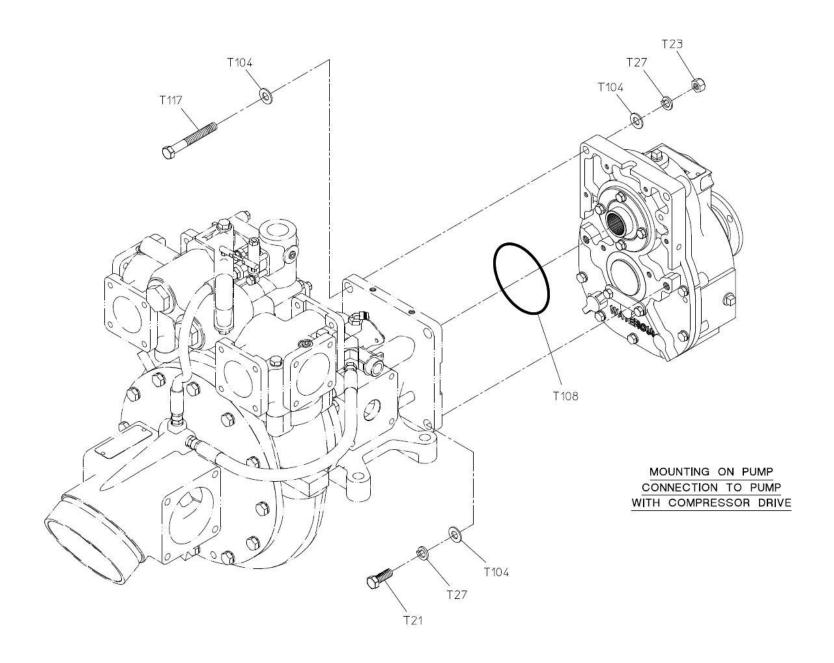



Mounting of Pump - Optional Case Positions

REF. NO.	DESCRIPTION
T17	Breather, 1/2 NPT
T18	Magnetic drain plug, 1/2 NPT
T31	Pipe plug, 1/2 NPT, steel
T32	Drive screw, no. 6 x 1/4 in.

REF. NO.	DESCRIPTION
T67	Oil level plate
T69	Street elbow, 45° x 1/2 NPT

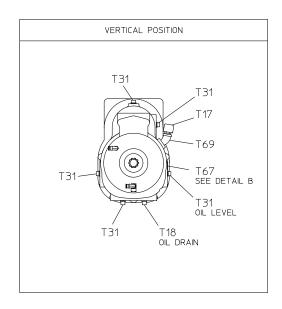

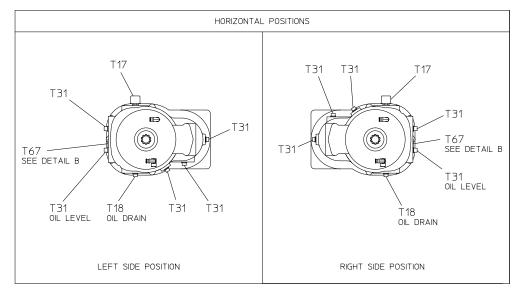

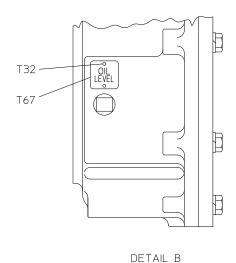


OPTIONAL CASE MOUNTING POSITIONS

Optional Oil Cooler - Without Compressor Drive (Standard Intake Adapter) (Prior to September 10, 2019)

REF. NO.	DESCRIPTION
T120	Pipe Nipple, ½ NPT x 3 in.
T121	Female Tee, ½ NPT
T122	Street Elbow, 45 Degrees x ½ NPT
T123	Reducing Bushing, ½ NPT x ¼ NPT
T124	Adapter, 3/8 PTC x 1/4 NPT
T125	90 Degree Elbow, 3/8 PTC x 1/4 NPT
T126	Reducing Bushing, 1 NPT x ¼ NPT
T127	Street Tee, 1/4 NPT


REF. NO.	DESCRIPTION
T128	Black Tubing, ¾ in.
T130	Cooling Plate
T131	Cooling Gasket
T132	O-ring, 2-3/4 x 3 in.
T133	Socket Head Screw, 7/16 x 7/8 in.
T134	Hex Head Screw, 7/16 x 1-1/2 in.
T135	Lock Washer, 7/16 in.

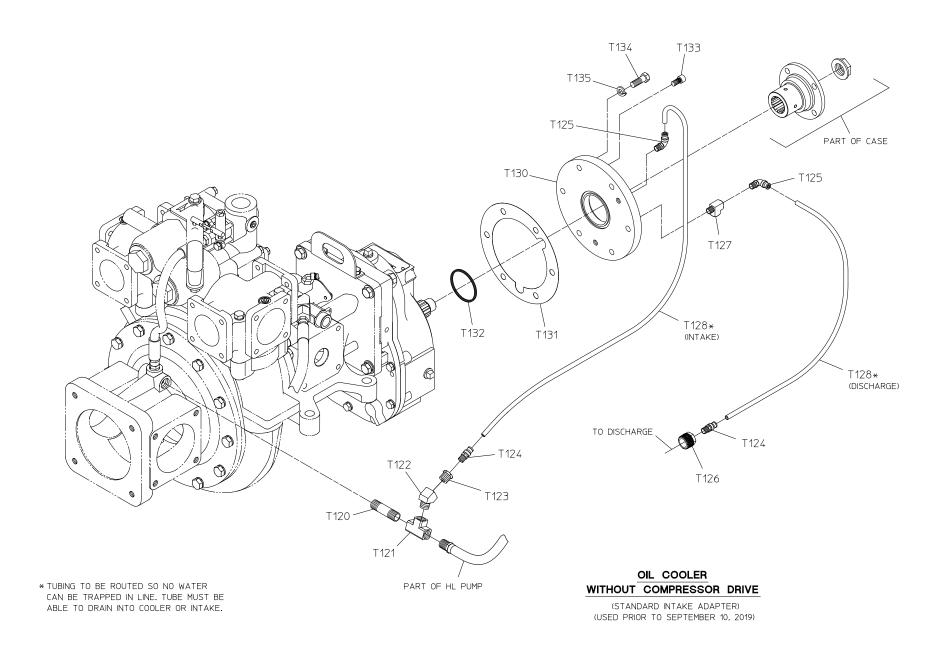

Optional Oil Cooler - Without Compressor Drive (Standard Intake Adapter) (After to September 10, 2019)

REF. NO.	DESCRIPTION
T124	Adapter, % PTC x 1/2 NPT
T125	90 Degree Elbow, ¾ PTC x ¼ NPT
T126	Reducing Bushing, 1 NPT x ¼ NPT
T127	Street Tee, 1/4 NPT

REF. NO.	DESCRIPTION
T128	Black Tubing, ¾ in.
T130	Cooling Plate
T131	Cooling Gasket
T132	O-ring, 2-3/4 x 3 in.
T133	Socket Head Screw, 7/16 x 7/8 in.
T134	Hex Head Screw, 7/16 x 1-1/2 in.
T135	Lock Washer, 7/16 in.

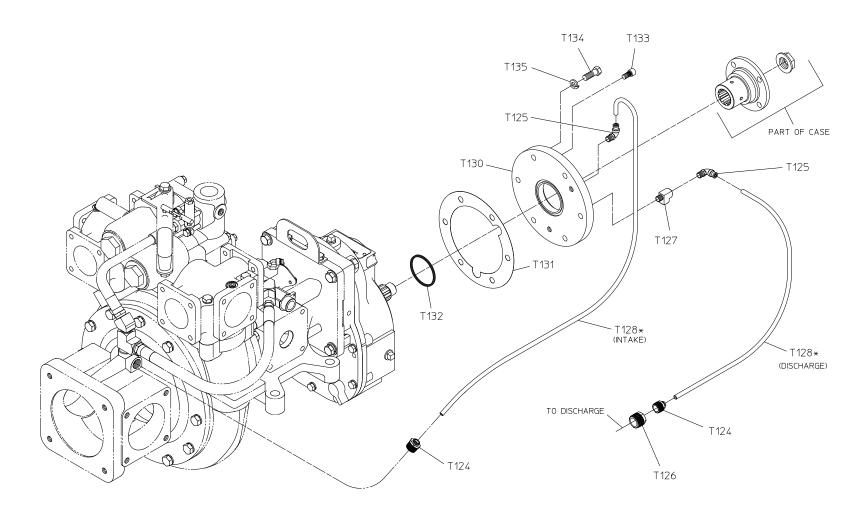

* TUBING TO BE ROUTED SO NO WATER CAN BE TRAPPED IN LINE. TUBE MUST BE ABLE TO DRAIN INTO COOLER OR INTAKE.

OIL COOLER WITHOUT COMPRESSOR DRIVE

(STANDARD INTAKE ADAPTER) (USED AFTER SEPTEMBER 10, 2019)

> SPL83160 PAGE 19 OF 21

Optional Oil Cooler - Without Compressor Drive (Short Intake Adapter)

REF. NO.	DESCRIPTION
T120	Pipe Nipple, 1/2 NPT x 3 in.
T122	Street Elbow, 45 Degrees x 1/2 NPT
T124	Adapter, 3/8 PTC x 1/4 NPT
T125	90 Degree Elbow, 3/8 PTC x 1/4 NPT
T126	Reducing Bushing, 1 NPT x 1/4 NPT
T127	Street Tee, 1/4 NPT
T128	Black Tubing, 3/8 in.
T130	Cooling Plate

REF. NO.	DESCRIPTION
T131	Cooling Gasket
T132	O-ring, 2-3/4 x 3 in.
T133	Socket Head Screw, 7/16 x 7/8 in.
T134	Hex Head Screw, 7/16 x 1-1/2 in.
T135	Lock Washer, 7/16 in.
T136	1/2 in. Brass Coupler
T137	3/8 x 1/2 in. MPT DOT PTC

