



**Tank to Pump Valve with Manual Actuator
Service Parts List**

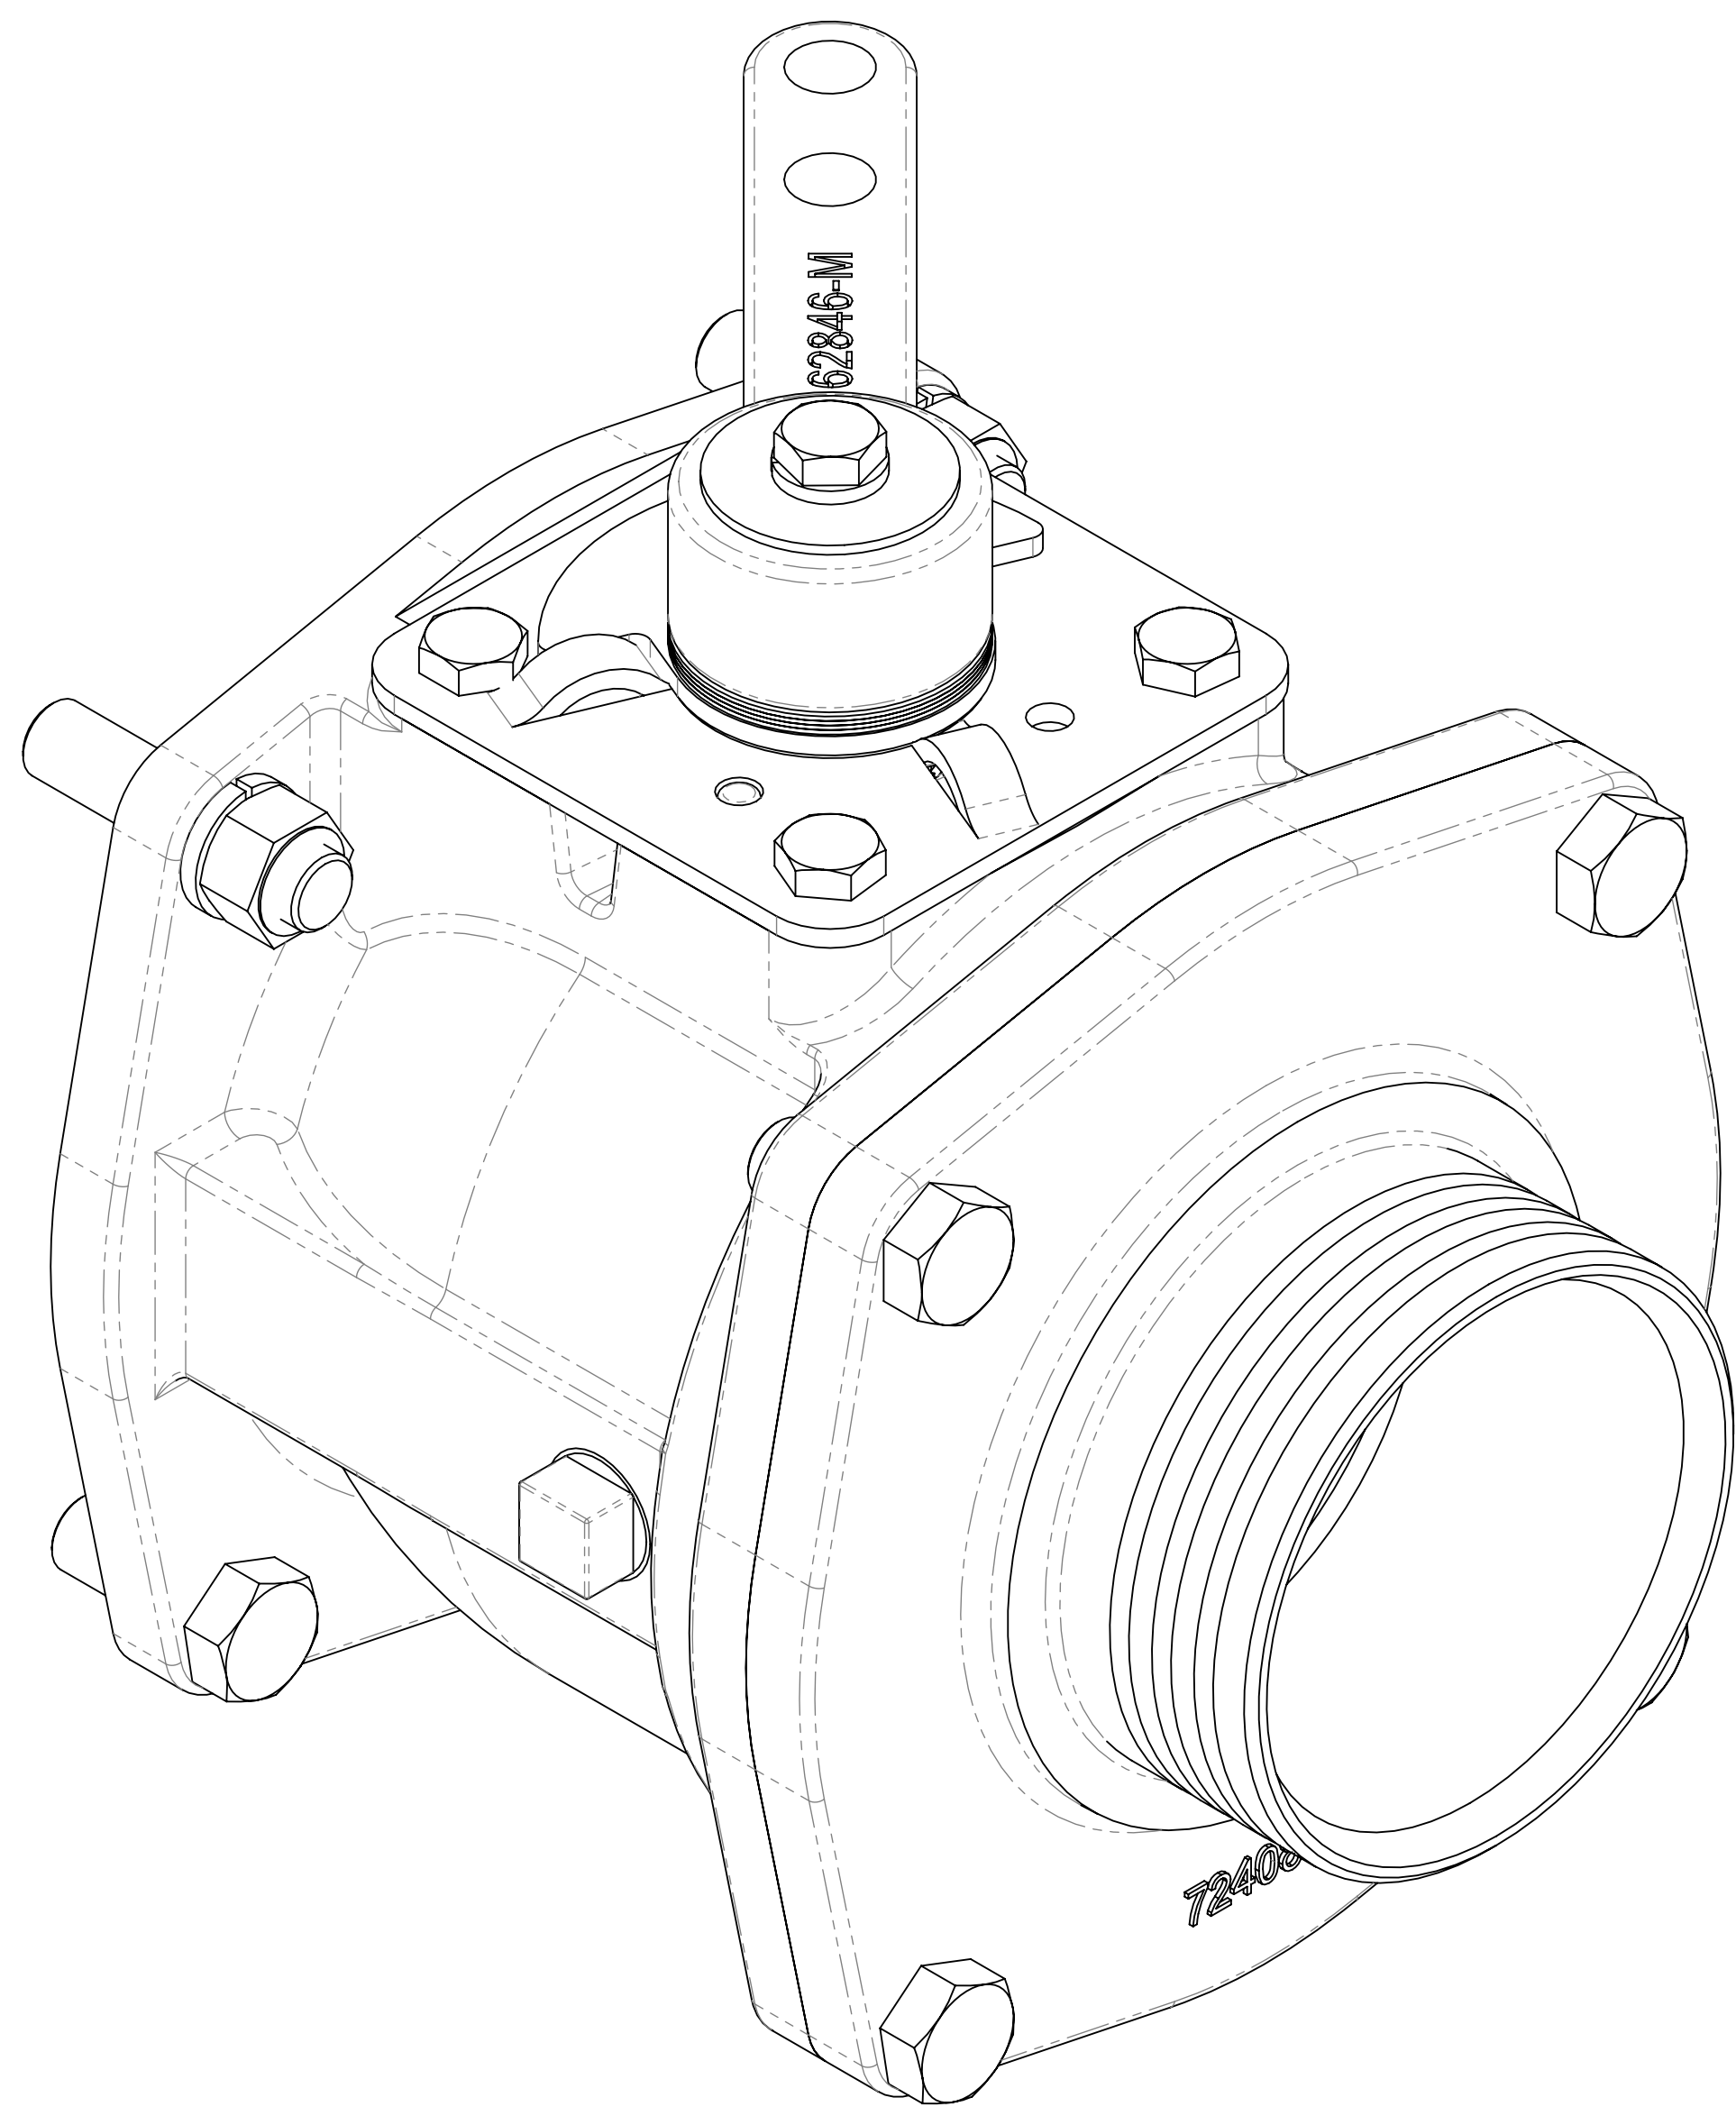

Index:

Component	See Page
Complete Valve	2

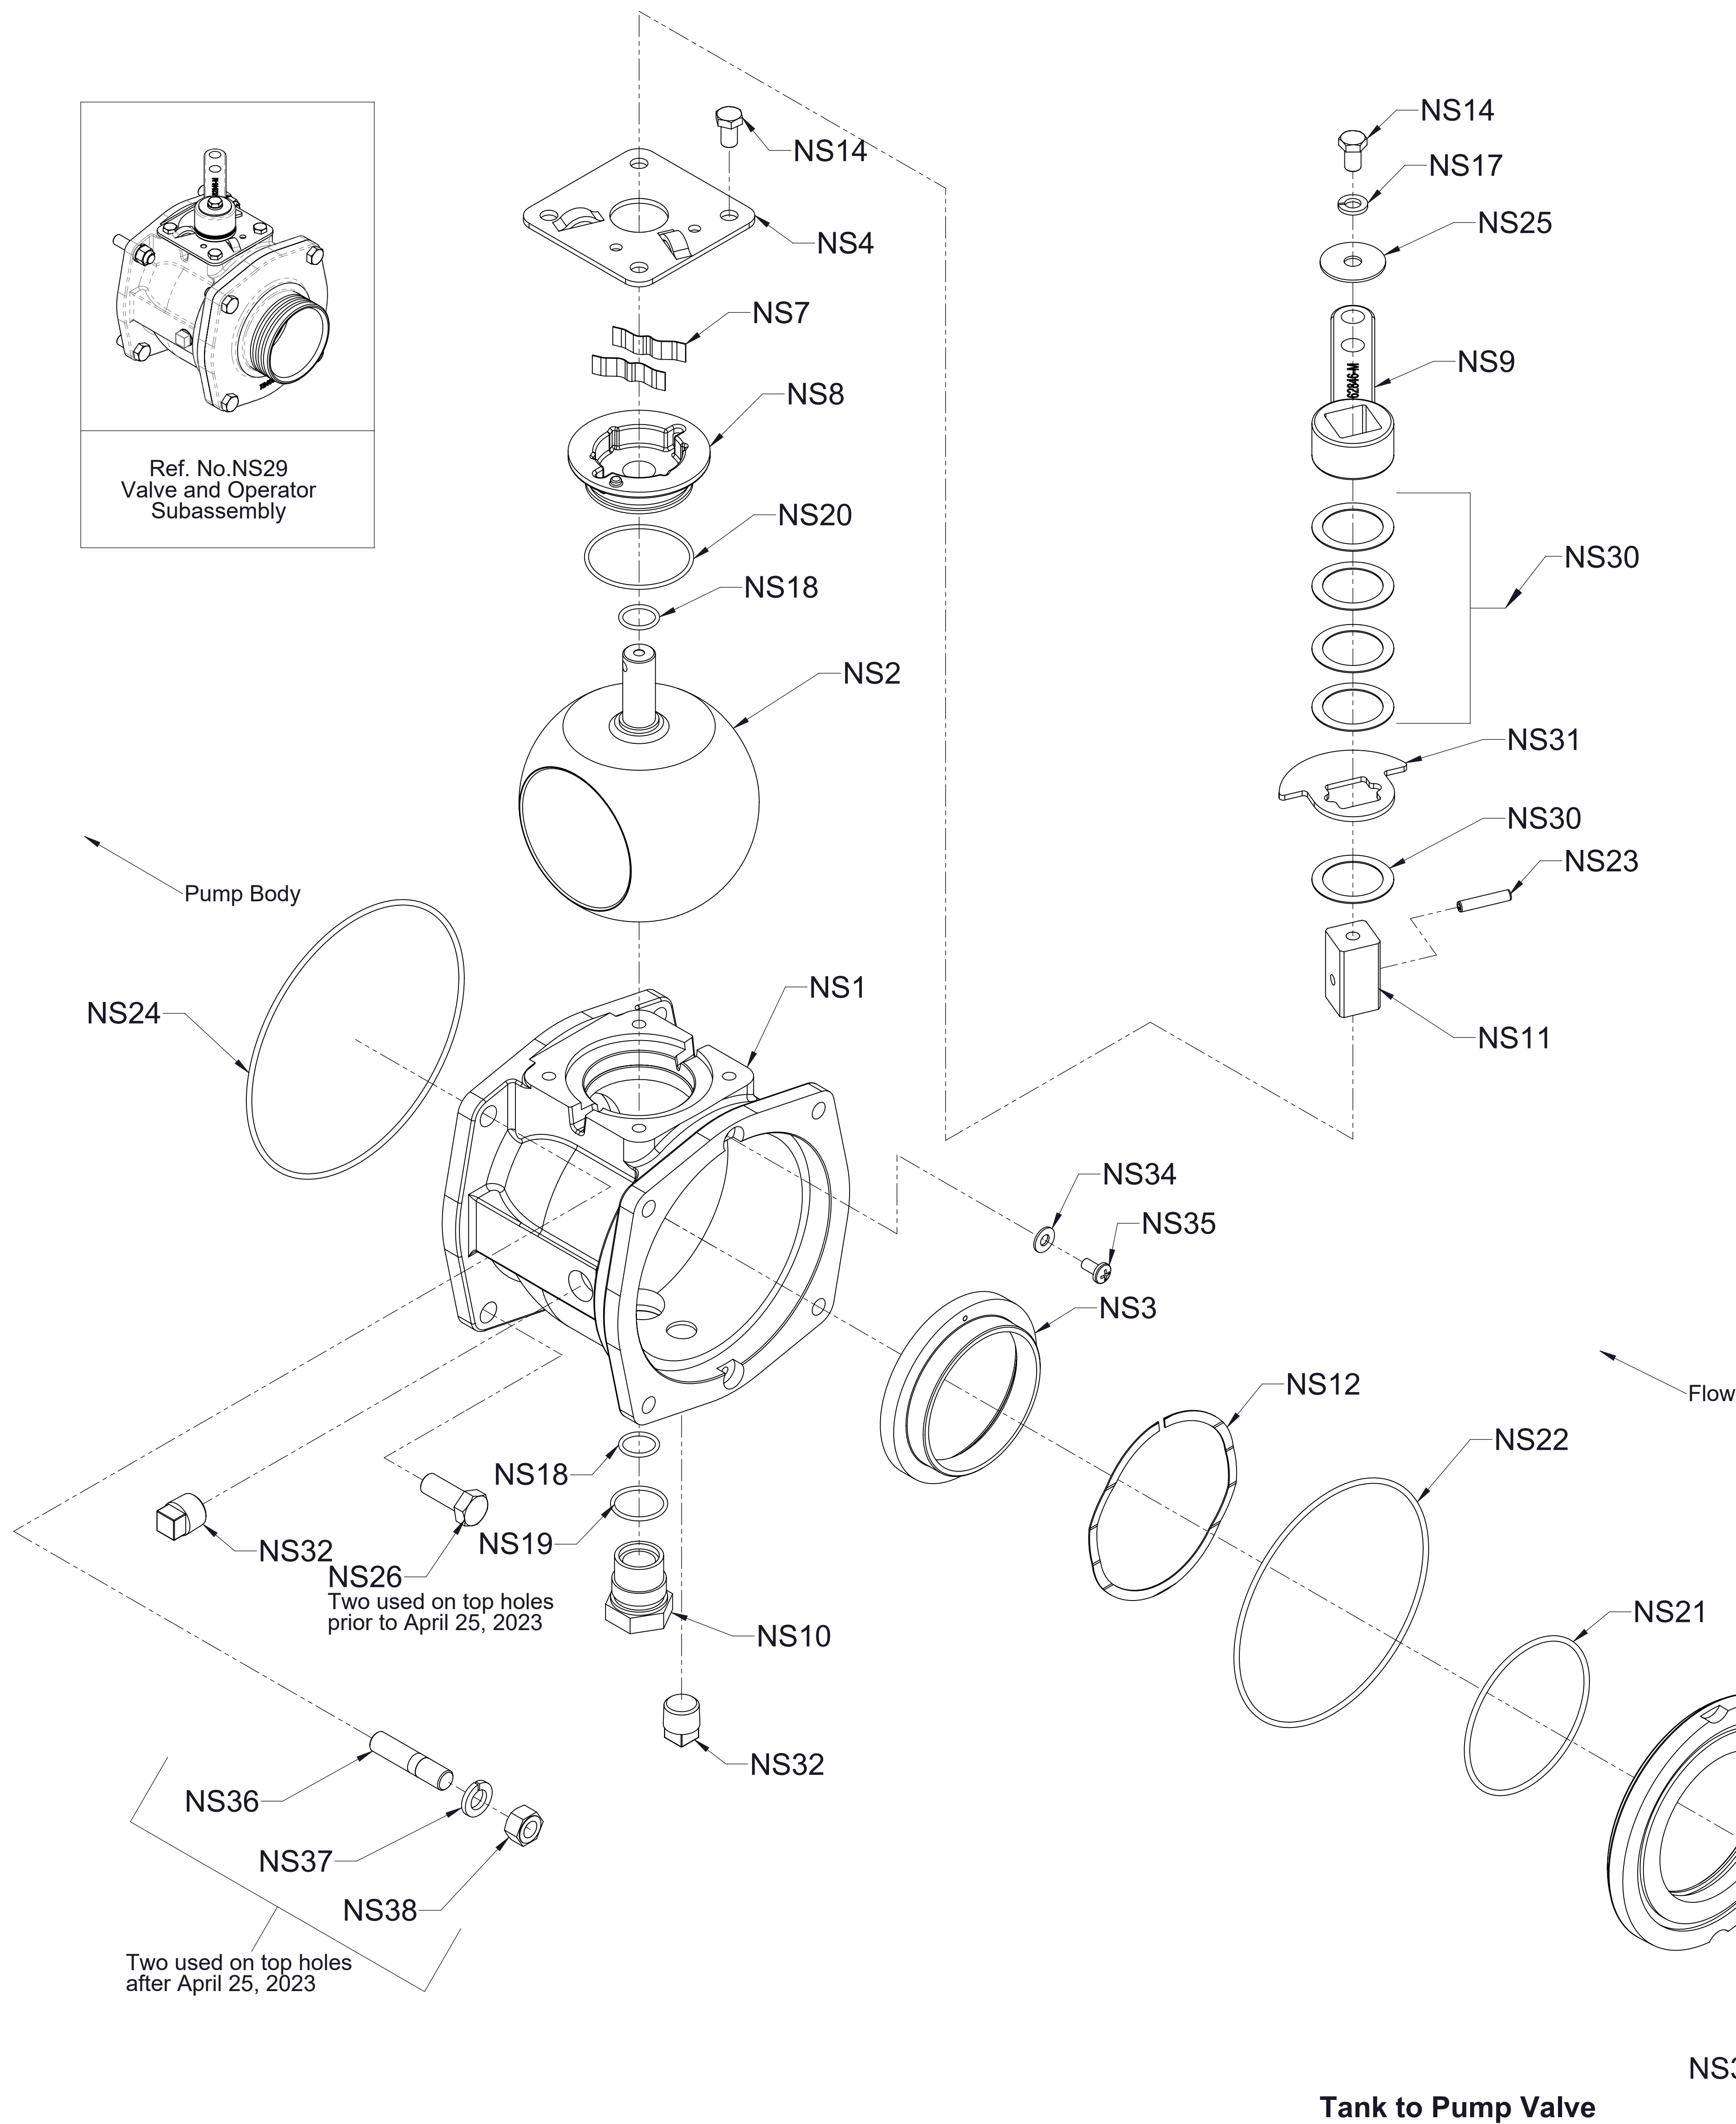

Ref No.	Description	Included In NS99
NS1	Body-Valve, 3-1/2 in	
NS2	Ball-Tank, Intake Valve	
NS3	Seal-Valve, Ball	X
NS4	Plate-Cover (TSBV)	X
NS5	Nipple-Hose, 4 in OD, Straight	
NS5	Nipple-Hose, 4 in OD, Angle Compensated	
NS5	Nipple-Hose, 3-1/2 in OD, Angle Compensated	
NS6	Retainer-Seal	X
NS7	Spring-Detent	X
NS8	Bushing-Upper	X
NS9	Handle	
NS10	Plug-Pivot, Ball Valve	
NS11	Sleeve	
NS12	Spring-Wave	X
NS14	Screw-Hex Hd, 3/8-16 x 5/8 in	
NS17	Washer-Lock, 3/8 in	
NS18	O-Ring, 3/4 x 15/16 in	X
NS19	O-Ring, 1-1/8 x 1-5/16 in	X
NS20	O-Ring, 2-5/16 x 2-1/2 in	X
NS21	O-Ring, 3-3/4 X 4 in	X
NS22	O-Ring, 6 x 6-1/4 in	X
NS23	Spring Pin, 1/4 x 1-1/4 in., Stainless Steel	X
NS24	O-Ring, 6-3/4 x 7 in	X
NS25	Washer-Fender, 3/8 in	
NS26	Screw-Hex Hd, 1/2-13 x 1-1/4 in	
NS29	Valve and Operator Subassembly	
NS30	Washer-Thrust, Gate Valve, 1-3/8 in I.D.	X
NS31	Cam-Stop, Tank Suction Ball Valve	X
NS32	Plug-Pipe, Square Hd, 1/2 NPT	
NS33	O-ring, 5 x 5-1/4 in	X
NS34	Washer-Plain, 1/4 in	
NS35	Screw-Machine, Pan Hd, 1/4-20 x 1/2 in	
NS36	Stud-Coarse, 1/2-13 x 2-1/4 in	X
NS37	Washer-Lock, 1/2 in	X
NS38	Nut-Hex, 1/2-13	X
NS99	Repair Kit	

