

Model VPO and VPOS Priming Pump Service Parts List

Configuration as used with VAP Priming Valves

Index:

F	Priming Pump		Pu	Pump Transmission or P.T.O. Model (Located on Serial Plate)				See Page					
	Mounting Location		Pump Transmission		P.T.O.			Priming Pump Components		Panel Switch and Wiring		Prime-Safe™ Lubricant	
Model			Series	Model	Series	Model	Mounting	Exploded View	Cross-Sec- tion View	Standard Push-But- ton Switch	Optional Oversize Push-But- ton Switch	Configuration when Used	Configuration when Not Used
	On Pump VPO Transmission or P.T.O.		C20	C20B C20C C20D C20E C20F	-	-	2, 3		1 12, 13	14, 15	18, 19	22, 23	22, 23
VPO			-	-	TC10	TC10B TC10C TC10D TC10E TC10F	2, 3 or 4, 5*	10, 11					
					TC21	TC21							
			C21	C21	-	-	2, 3						
			QC	QC	-	-	6, 7						
			w	WB WBX	-	-	8, 9						
	Separately Mounted	Single Pump		All			-						
VPOS	(Not on Transmis- sion or P.T.O.)	Dual Pumps		Ą	All		-	10, 11	12, 13	16, 17 20	20, 21		


*Note: Pages 4 and 5 apply to TC20 Series PTO's with a mounted CAFS compressor

Model VPO

Mounting on C20 and C21Series Transmissions and TC20 and TC21Series P.T.O.'s

REF. NO.	DESCRIPTION		
K12	Primer Sub-assembly		
K13	Mounting Bracket		
K16	Lock Washer, 3/8 in.		

REF. NO.	DESCRIPTION		
K17	Socket Hd Screw, 5/16-18 x 1 in.		
K18	Lock Washer 5/16 in.		
K28	Cable Extension		
K34	Hex Hd Screw, 3/8-16 x 1 in.		

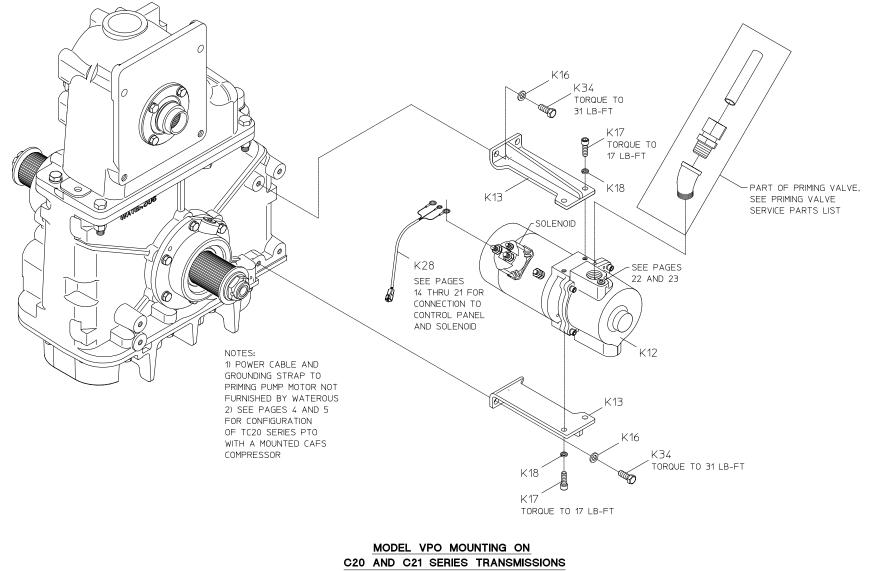


AND TC20 AND TC21 SERIES PTO'S

Model VPO

Mounting on TC20 Series P.T.O.'s with a Mounted CAFS Compressor

REF. NO.	DESCRIPTION		
K12	Primer Sub-assembly		
K13	Mounting Bracket		
K15	Hex Hd Screw, 3/8-16 x 1-1/4 in.		
K16	Lock Washer, 3/8 in.		

REF. NO.	DESCRIPTION		
K17	Socket Hd Screw, 5/16-18 x 1 in.		
K18	Lock Washer 5/16 in.		
K28	Cable Extension		
K35	Bottom Mounting Bracket Spacer		

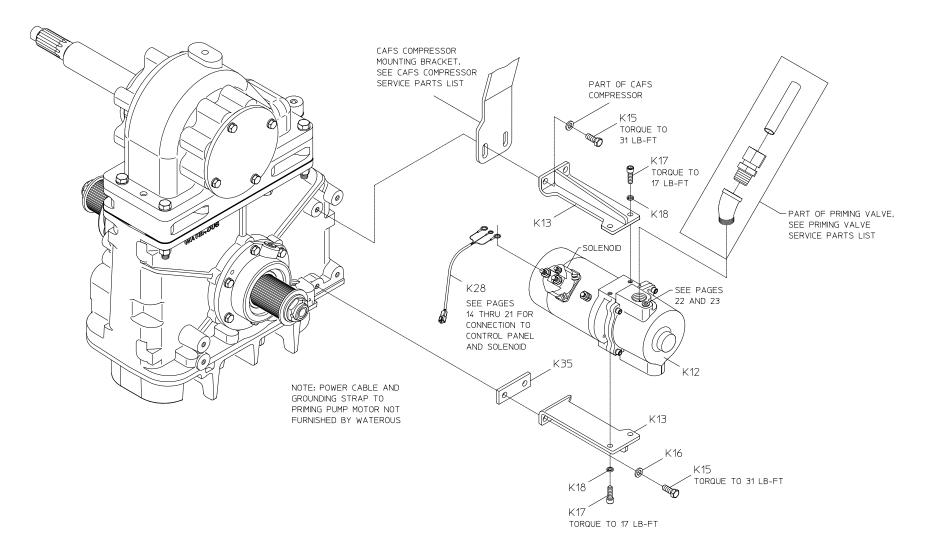


MODEL VPO MOUNTING ON TC20 SERIES PTO WITH A MOUNTED CAFS COMPRESSOR

Model VPO Mounting on QC Series Transmission

REF. NO.	DESCRIPTION		
K12	Primer Sub-assembly		
K15	Hex Hd Screw 3/8-16 x 1-1/4 in.		
K16	Lock Washer, 3/8 in.		
K17	Socket Hd Screw, 5/16-18 x 1 in.		
K18	Lock Washer 5/16 in.		
K 28	Cable Extension		

REF. NO.	DESCRIPTION		
K34	Hex Hd Screw, 3/8-16 x 1 in.		
K36	Lower Primer Bracket		
K37	Upper Primer Bracket		
K38	3/4 NPT x 3/4 Tubing Fitting		

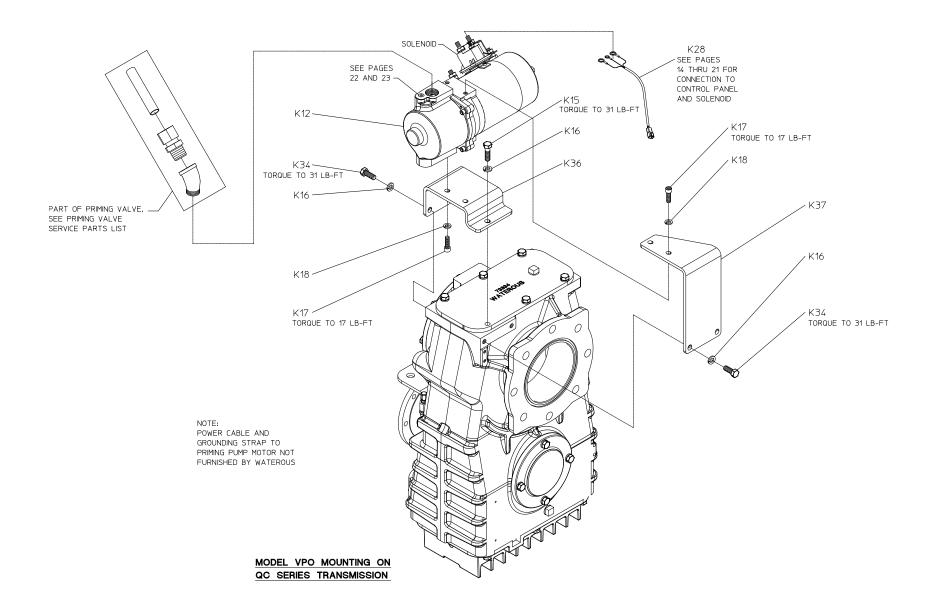


Model VPO

Mounting on W Series Transmissions

REF. NO.	DESCRIPTION		
K12	Primer Sub-assembly		
K13	Mounting Bracket		
K14	Bottom Mounting Bracket		
K15	Hex Hd Screw, 3/8-16 x 1-1/4 in.		

REF. NO.	DESCRIPTION		
K16	Lock Washer, 3/8 in.		
K17	Socket Hd Screw, 5/16-18 x 1 in.		
K18	Lock Washer 5/16 in.		
K28	Cable Extension		

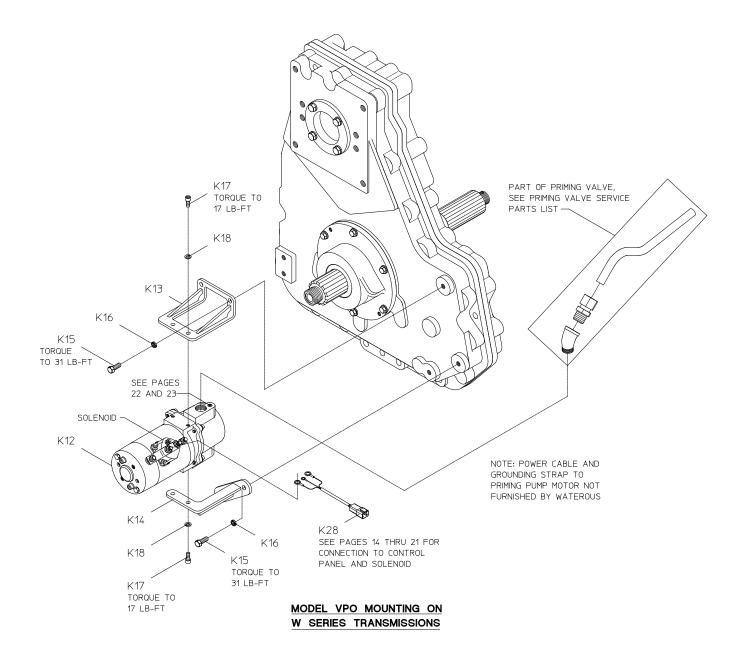


SPL83632 PAGE 9 OF 23

Priming Pump Components

Models VPO and VPOS (Exploded View)

REF. NO.	DESCRIPTION		
K1	Vane		
K2	Oilite Bearing		
K3	Rotor Assembly (Includes Shaft)		
K4	Adapter Assembly, (Includes K2, K6 and K8)		
K5	Motor Assembly (Includes K2, K4, K6, K8, K23 and (2) 1/4-20 x 6-1/2 in. Hex Hd Mounting Screws)		
K6	O-ring, .612 x .818 in.		
K7	O-ring, 3.859 x 4.137 in.		
K8	Dowel Pin, 3/15 x 3/4 in.		

REF. NO.	DESCRIPTION		
K10	Housing Assembly (Includes K2)		
K12	Primer Sub-assembly		
K19	Repair Kit		
K21	Socket Hd Screw, 1/4-20 x 1 in.		
K22	Lock Washer, 1/4 in.		
K23	Solenoid		
K24	Wire Clamp		

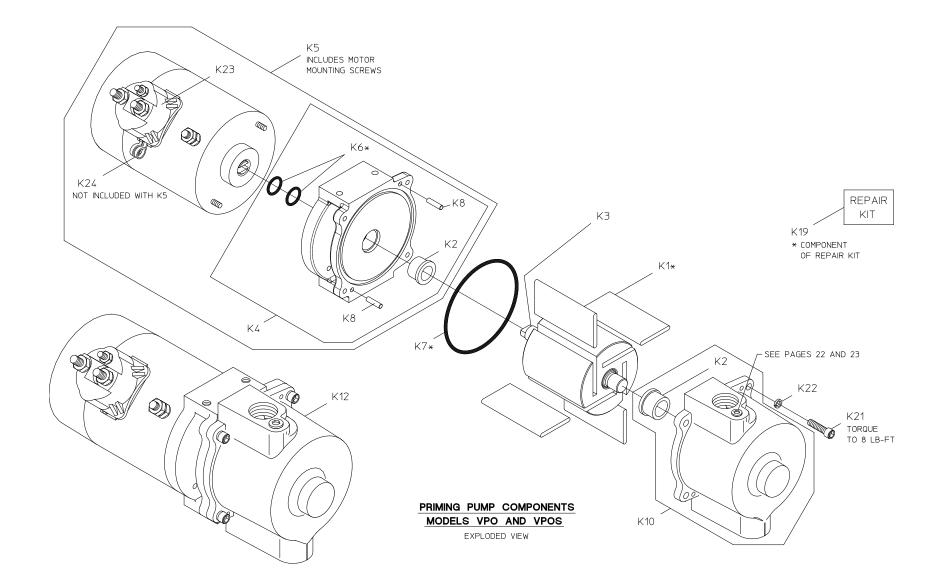


Priming Pump Components

Models VPO and VPOS (Cross-Section View)

REF. NO.	DESCRIPTION		
K1	Vane		
K2	Oilite Bearing		
K3	Rotor Assembly (Includes Shaft)		
K4	Adapter Assembly, (Includes K2, K6 and K8)		
K5	Motor Assembly (Includes K2, K4, K6, K8, K23 and(2) 1/4-20 x 6-1/2 in. Hex Hd Mounting Screws)		
K6	O-ring, .612 x .818 in.		
K7	O-ring, 3.859 x 4.137 in.		
K8	Dowel Pin, 3/15 x 3/4 in.		

REF. NO.	DESCRIPTION
K10	Housing Assembly (Includes K2)
K21	Socket Hd Screw, 1/4-20 x 1 in.
K22	Lock Washer, 1/4 in.
K23	Solenoid
K24	Wire Clamp

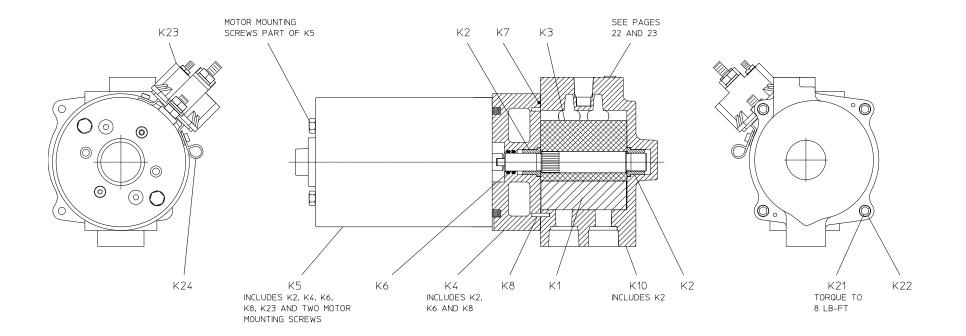


PRIMING	PUMP	COM	PONENTS
MODEL	S VPO	AND	VPOS
CR	OSS-SEC	TION VIE	W

Panel Switch and Wiring

Standard Push-Button Switch – Single Primer

REF. NO.	DESCRIPTION
K20	Control Panel with Integral Switch (Includes K29 Mounting Screw and Nuts)
K28	Cable Extension

REF. NO.	DESCRIPTION
K29	Flat Hd Screw, 6-32 x 3/4 in. and 6-32 Hex Nut (For Control Panel)

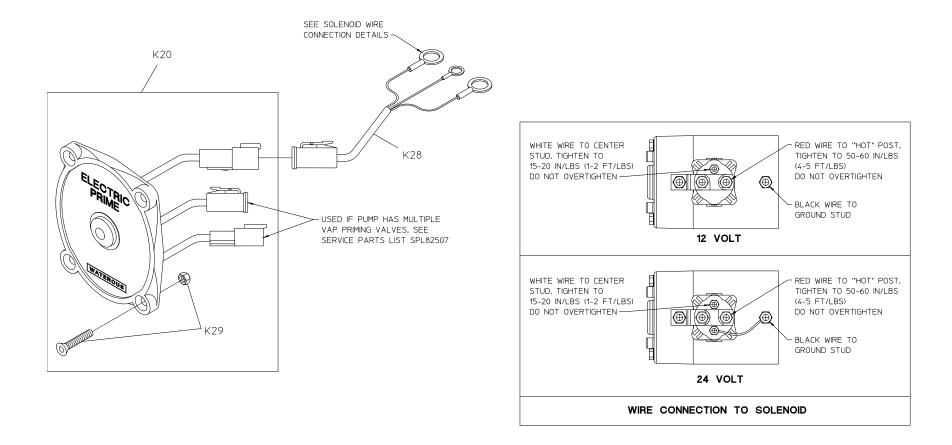

PANEL SWITCH AND WIRING STANDARD PUSH-BUTTON SWITCH


SINGLE PRIMER

Panel Switch and Wiring

Standard Push-Button Switch – Dual Primers

REF. NO.	DESCRIPTION
K20	Control Panel with Integral Switch (Includes K29 Mounting)
K28	Cable Extension


REF. NO.	DESCRIPTION
K29	Flat Hd Screw, 6-32 x 3/4 in. and 6-32 Hex Nut (For Control Panel)
K40	Jumper Wire

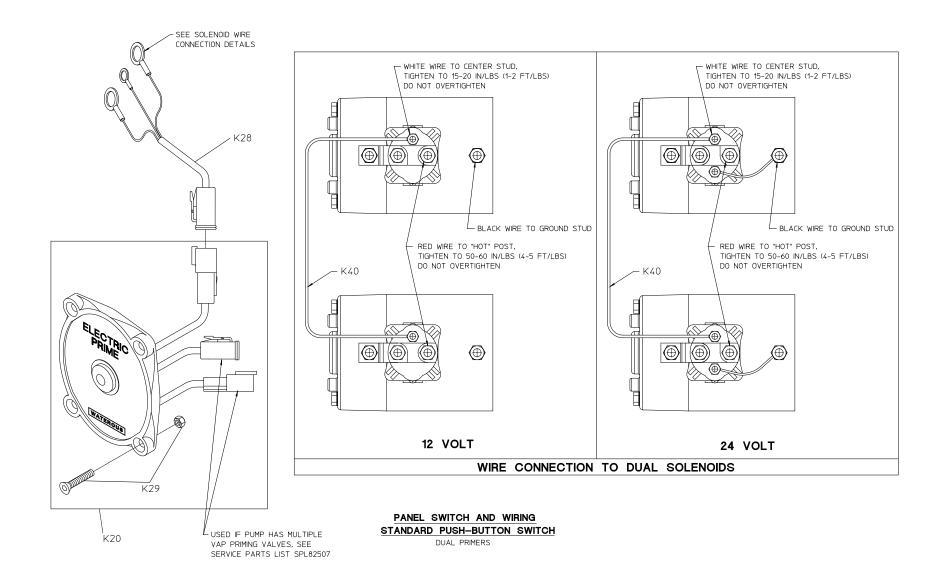

Panel Switch and Wiring Oversize Push-Button Switch – Single Primer

REF. NO.	DESCRIPTION
K28	Cable Extension
K29	Flat Hd Screw, 6-32 x 3/4 in. and 6-32 Hex Nut (For Control Panel)

REF. NO.	DESCRIPTION
K30	Control Panel with Integral Switch (Includes K29 Mounting Screws and Nuts)

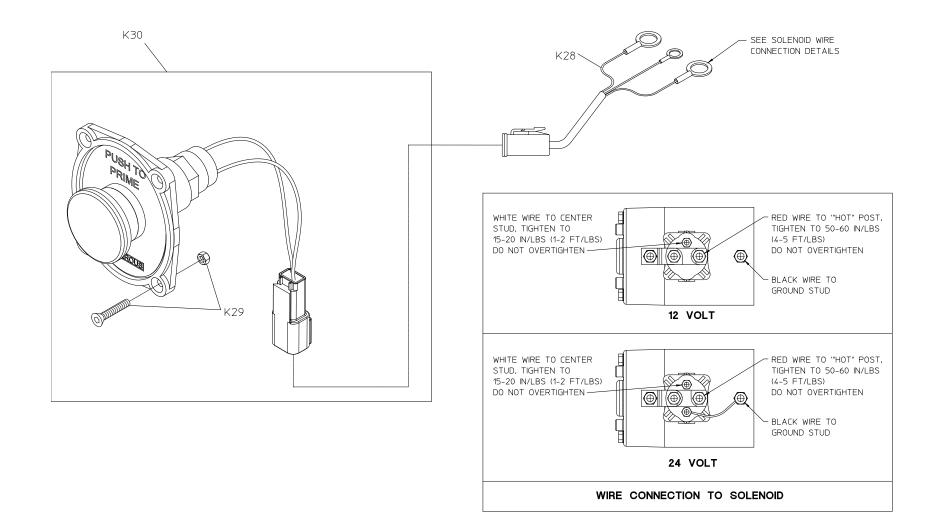


PANEL SWITCH AND WIRING OVERSIZE PUSH-BUTTON SWITCH

SINGLE PRIMER

Panel Switch and Wiring Oversize Push Button Switch - Dual Primers

REF. NO.	DESCRIPTION
K28	Cable Extension
K29	Flat Head Screw, 6-32 x 3/4 in. and 6-32 Hex Nut (For Control Panel)
K30	Control Panel with Integral Switch (Includes K29 Mounting Screws and Nuts)

REF. NO.		DESCRIPTION	
K40	Jumper Wire		

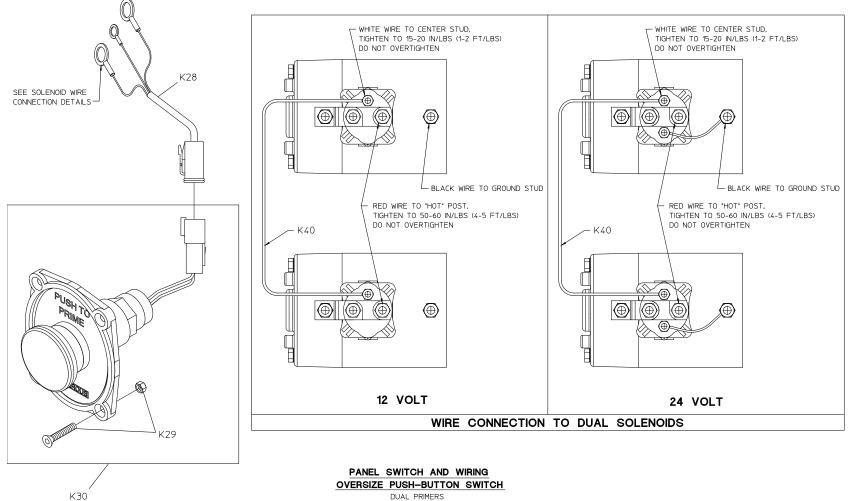

DUAL PRIMERS

SPL83632 PAGE 21 OF 23

Prime-Safe™ Lubricant

REF. NO.	DESCRIPTION
K9	Headless Pipe Plug, 1/8 NPT
K25	Check Valve, 1/8 NPT

REF. NO.	DESCRIPTION
K26	Compression Fitting, 1/8 in.
K27	Prime-Safe™ Decal

PRIME-SAFETM LUBRICANT

