


C23 Series Fire Pump Transmissions TC23 Series Power Take-Off's Service Parts List

Document Number SPL83756

Issue Date 3/13/2023

Rev. Date 12/05/24

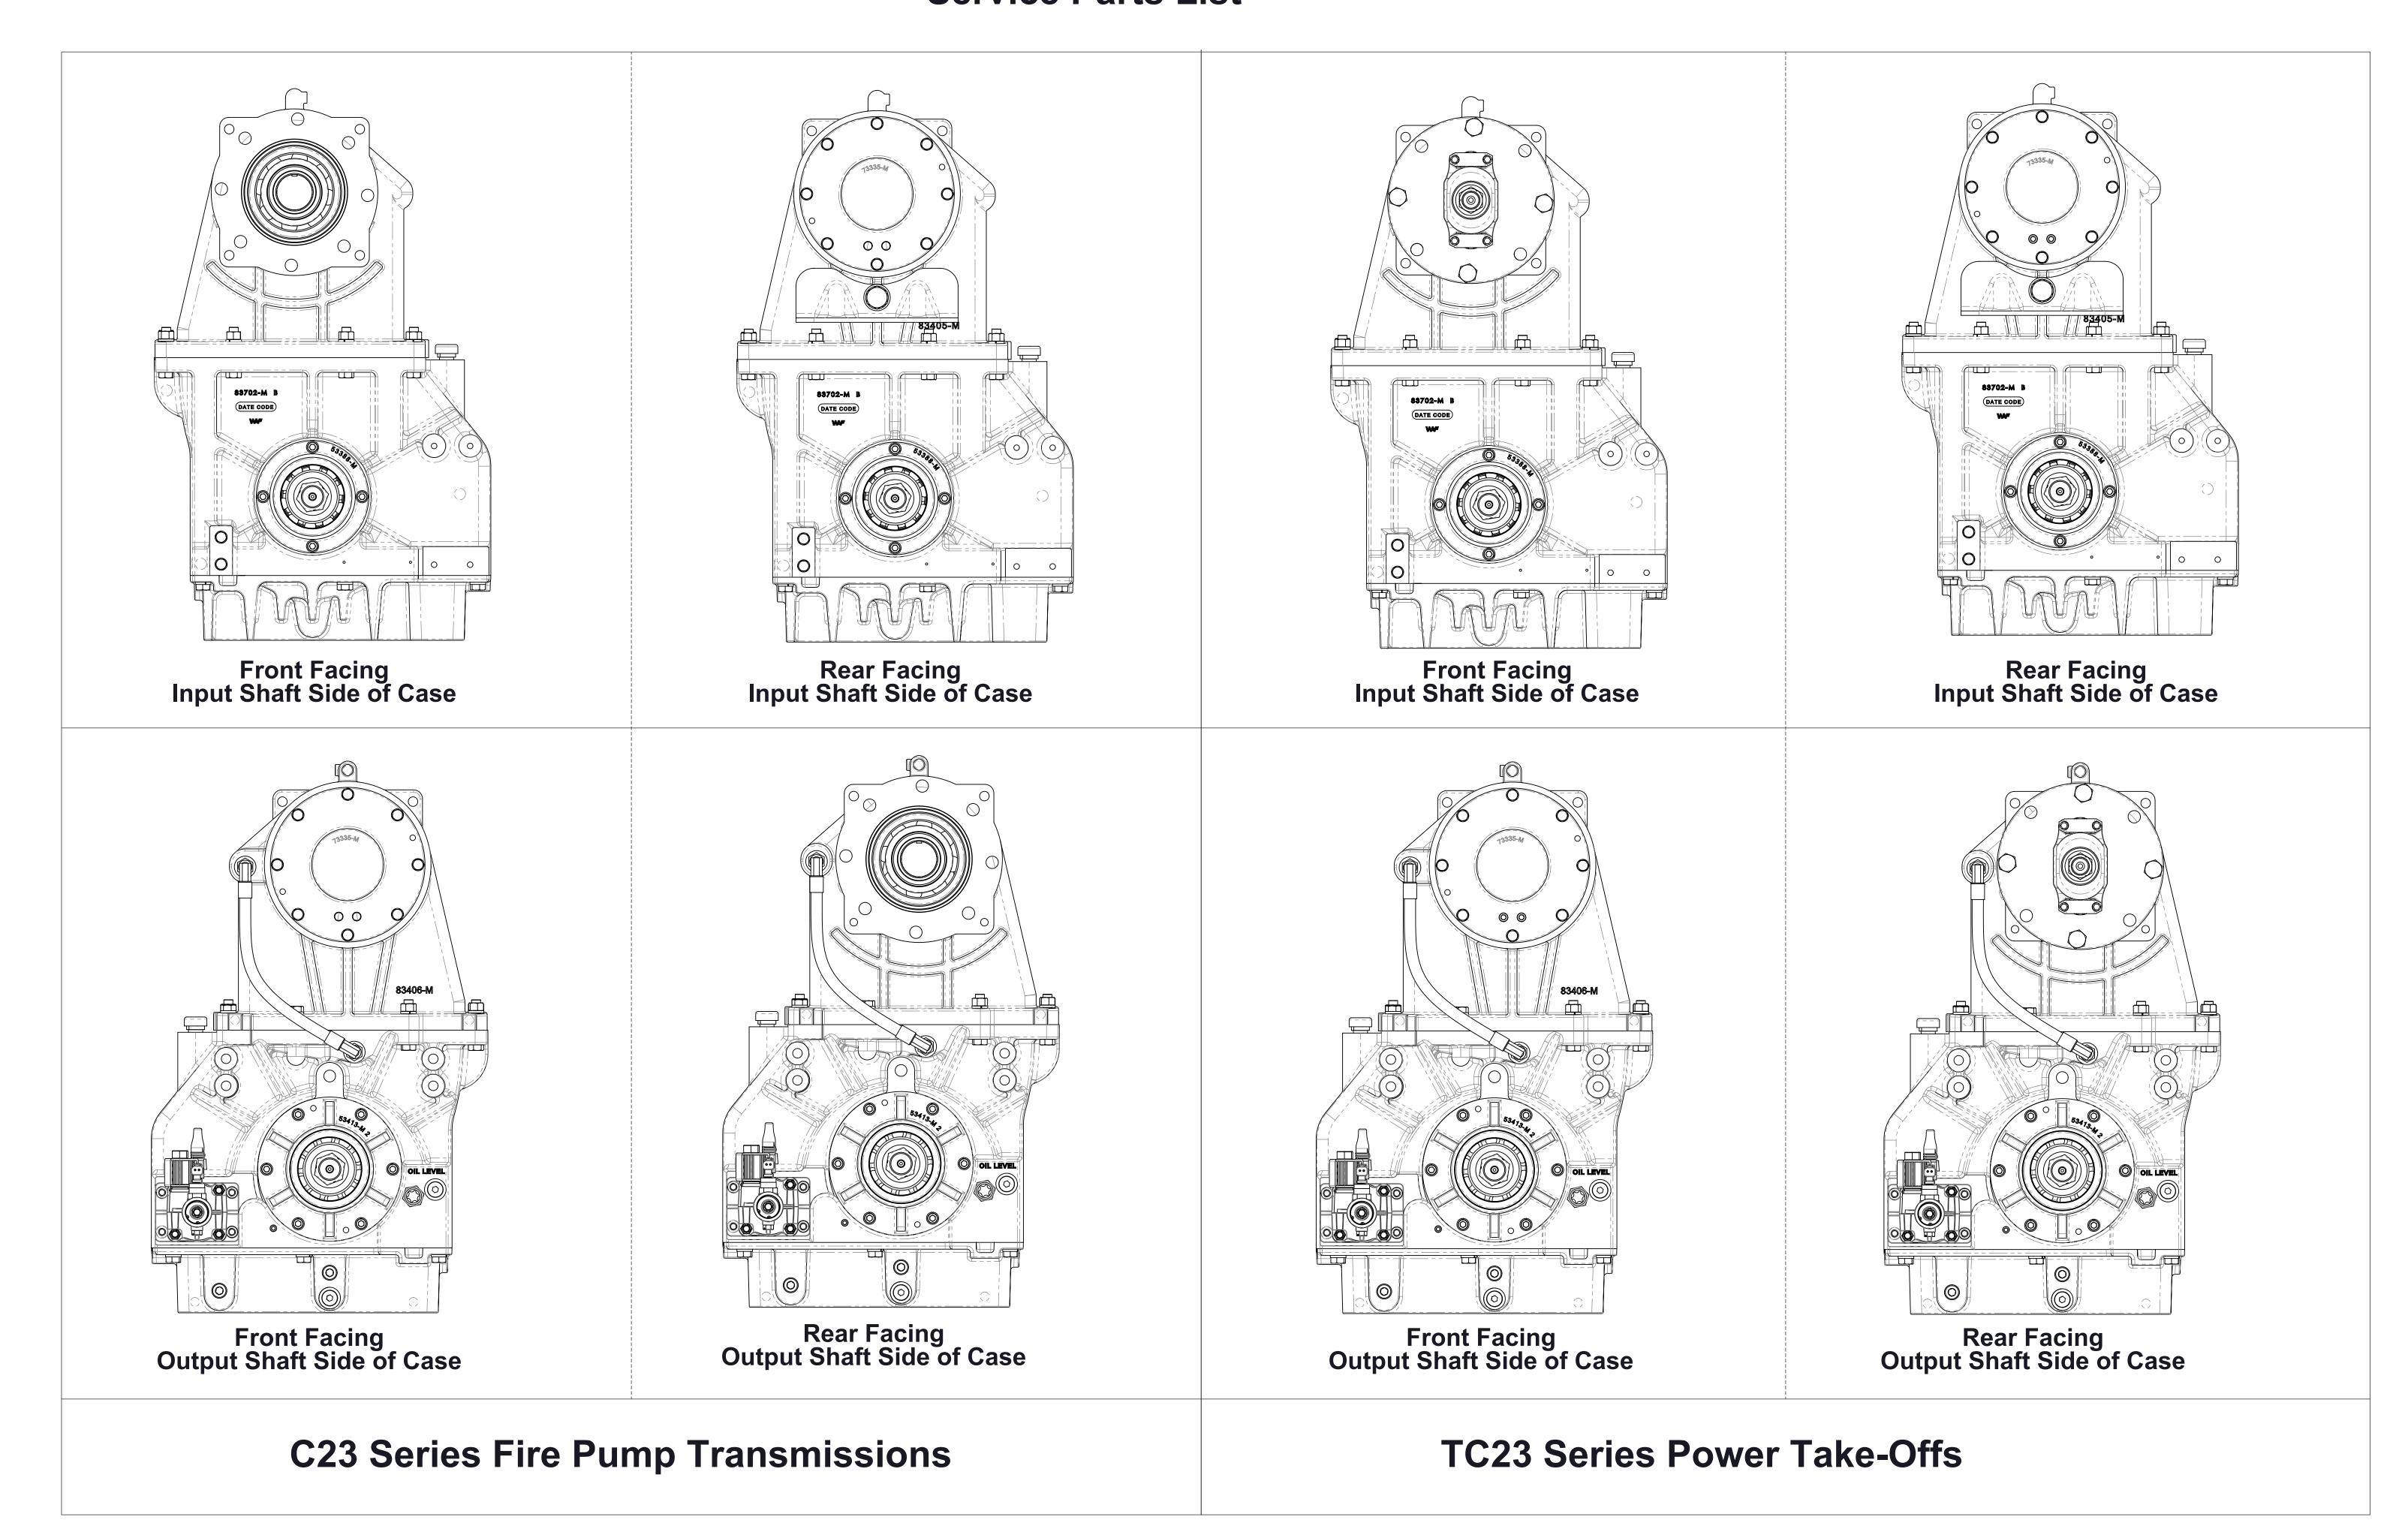


Index:

Component	Pump Model	Transmission	Driven Shaft		
Component	i dilip Model	Mounting on Pump	Location	Configuration	Page
		Front (Input Shaft Side)		None	3
	CRU-2	Rear (Output Shaft Side)	Extends through Transmission Cap)		4
		Front (Input Shaft Side)	Rear (Output Shaft Side) Hydraulic Pump Adapter		5
		Rear (Output Shaft Side)	Front (Input Shaft Side)	SAE Class C, 4 Bolt	6
			Driven (Output) Shat	ft	See
Driven Shaft	PTO Model	Туре	Front (Input Shaft Side)	Rear (Output Shaft Side)	Page
		Single	End Yoke	None (Cooler Connection)	7
		J	None (Cooler Connection)	End Yoke	8
	TC23	Dual	End Yoke	Hydraulic Pump Adapter SAE Class C, 4 Bolt (Cooler Connection)	9
		Dual	Hydraulic Pump Adapter	,	40
	llood	\A/:4b	SAE Class C, 4 Bolt (Cooler Connection)	End Yoke	10
Case	Pump Model	PTO Model	Configuration		See Page
•	CRU-2 TC23		A	All	11
Driveline	Drive		Shift		See Page
	Size	Type			
	2.35-46T Involute	Input and Output Shaft	With Pneaumatic (Required)		12
		Input Shaft Only Without Shift (Not Available		(Not Available)	13
	COO Transmission	Used on:	2 DTO		See
	Pump Model and Mounting Location	Front Connection (Input Shaft Side)	Rear Connection (Output Shaft Side)	Ratio	Page
Сар	CRU-2	1550 Series End Yoke	None or Hydraulic Adapter 1550 Series	1.77	14
	Front Mounted (Input Shaft Side)			1.95	
	CRU-2	None or		1.77	
	Rear Mounted (Output Shaft Side)	Hydraulic Adapter	End Yoke	1.95	
Sprockets a	nd Chain				15
			Ratio		See Page
Cap Hardwa	ire	1.77			16
•		1.95			
Pump Mounting Hardware					17
Internal Cooler					
Optional Driveline End Yokes and Companion Flanges All					
Transmission	on Mounted Shift Unit natic Shift Unit Service F			eline)	
_	ansmission Mounted D		· ·		
Optional Tra	ansmission Mounted F	Priming Pump See Pri	iming Pump Service Pa	rts List	
Gasket and	O-ring Kit Ref No. T27	, :	n overhaul. Componen	ta inalizatad in tha liit ana	

NOTE: When ordering parts, provide Pump, Transmission or PTO Serial Number.

Ref No.	Description
T25	Screw-Hex Hd, 3/8-16 x 1 in
T26	Washer-Lock, 3/8 in
T60	Seal-Oil, 3 x 3-3/4 in
T64	Bearing, Ball, Single Row, 50 x 110 x 27 mm
T65	Bearing, Ball, Single Row, 60 x 130 x 31 mm
T66	Spacer-Shaft, Impeller
T67	Cover-Bearing
* T68	Washer-Lock, Bearing, W10
T69	Nut-Lock, Bearing, N10
T70	Spring-Wave
T71	Spacer-Shaft, Impeller
T72	Sleeve-Seal, Oil
* T73	O-Ring, 5-5/8 x 5-7/8 in
* T74	O-Ring, 6-3/4 x 7-1/8 in
* T75	O-Ring, 4 x 4-1/4 in




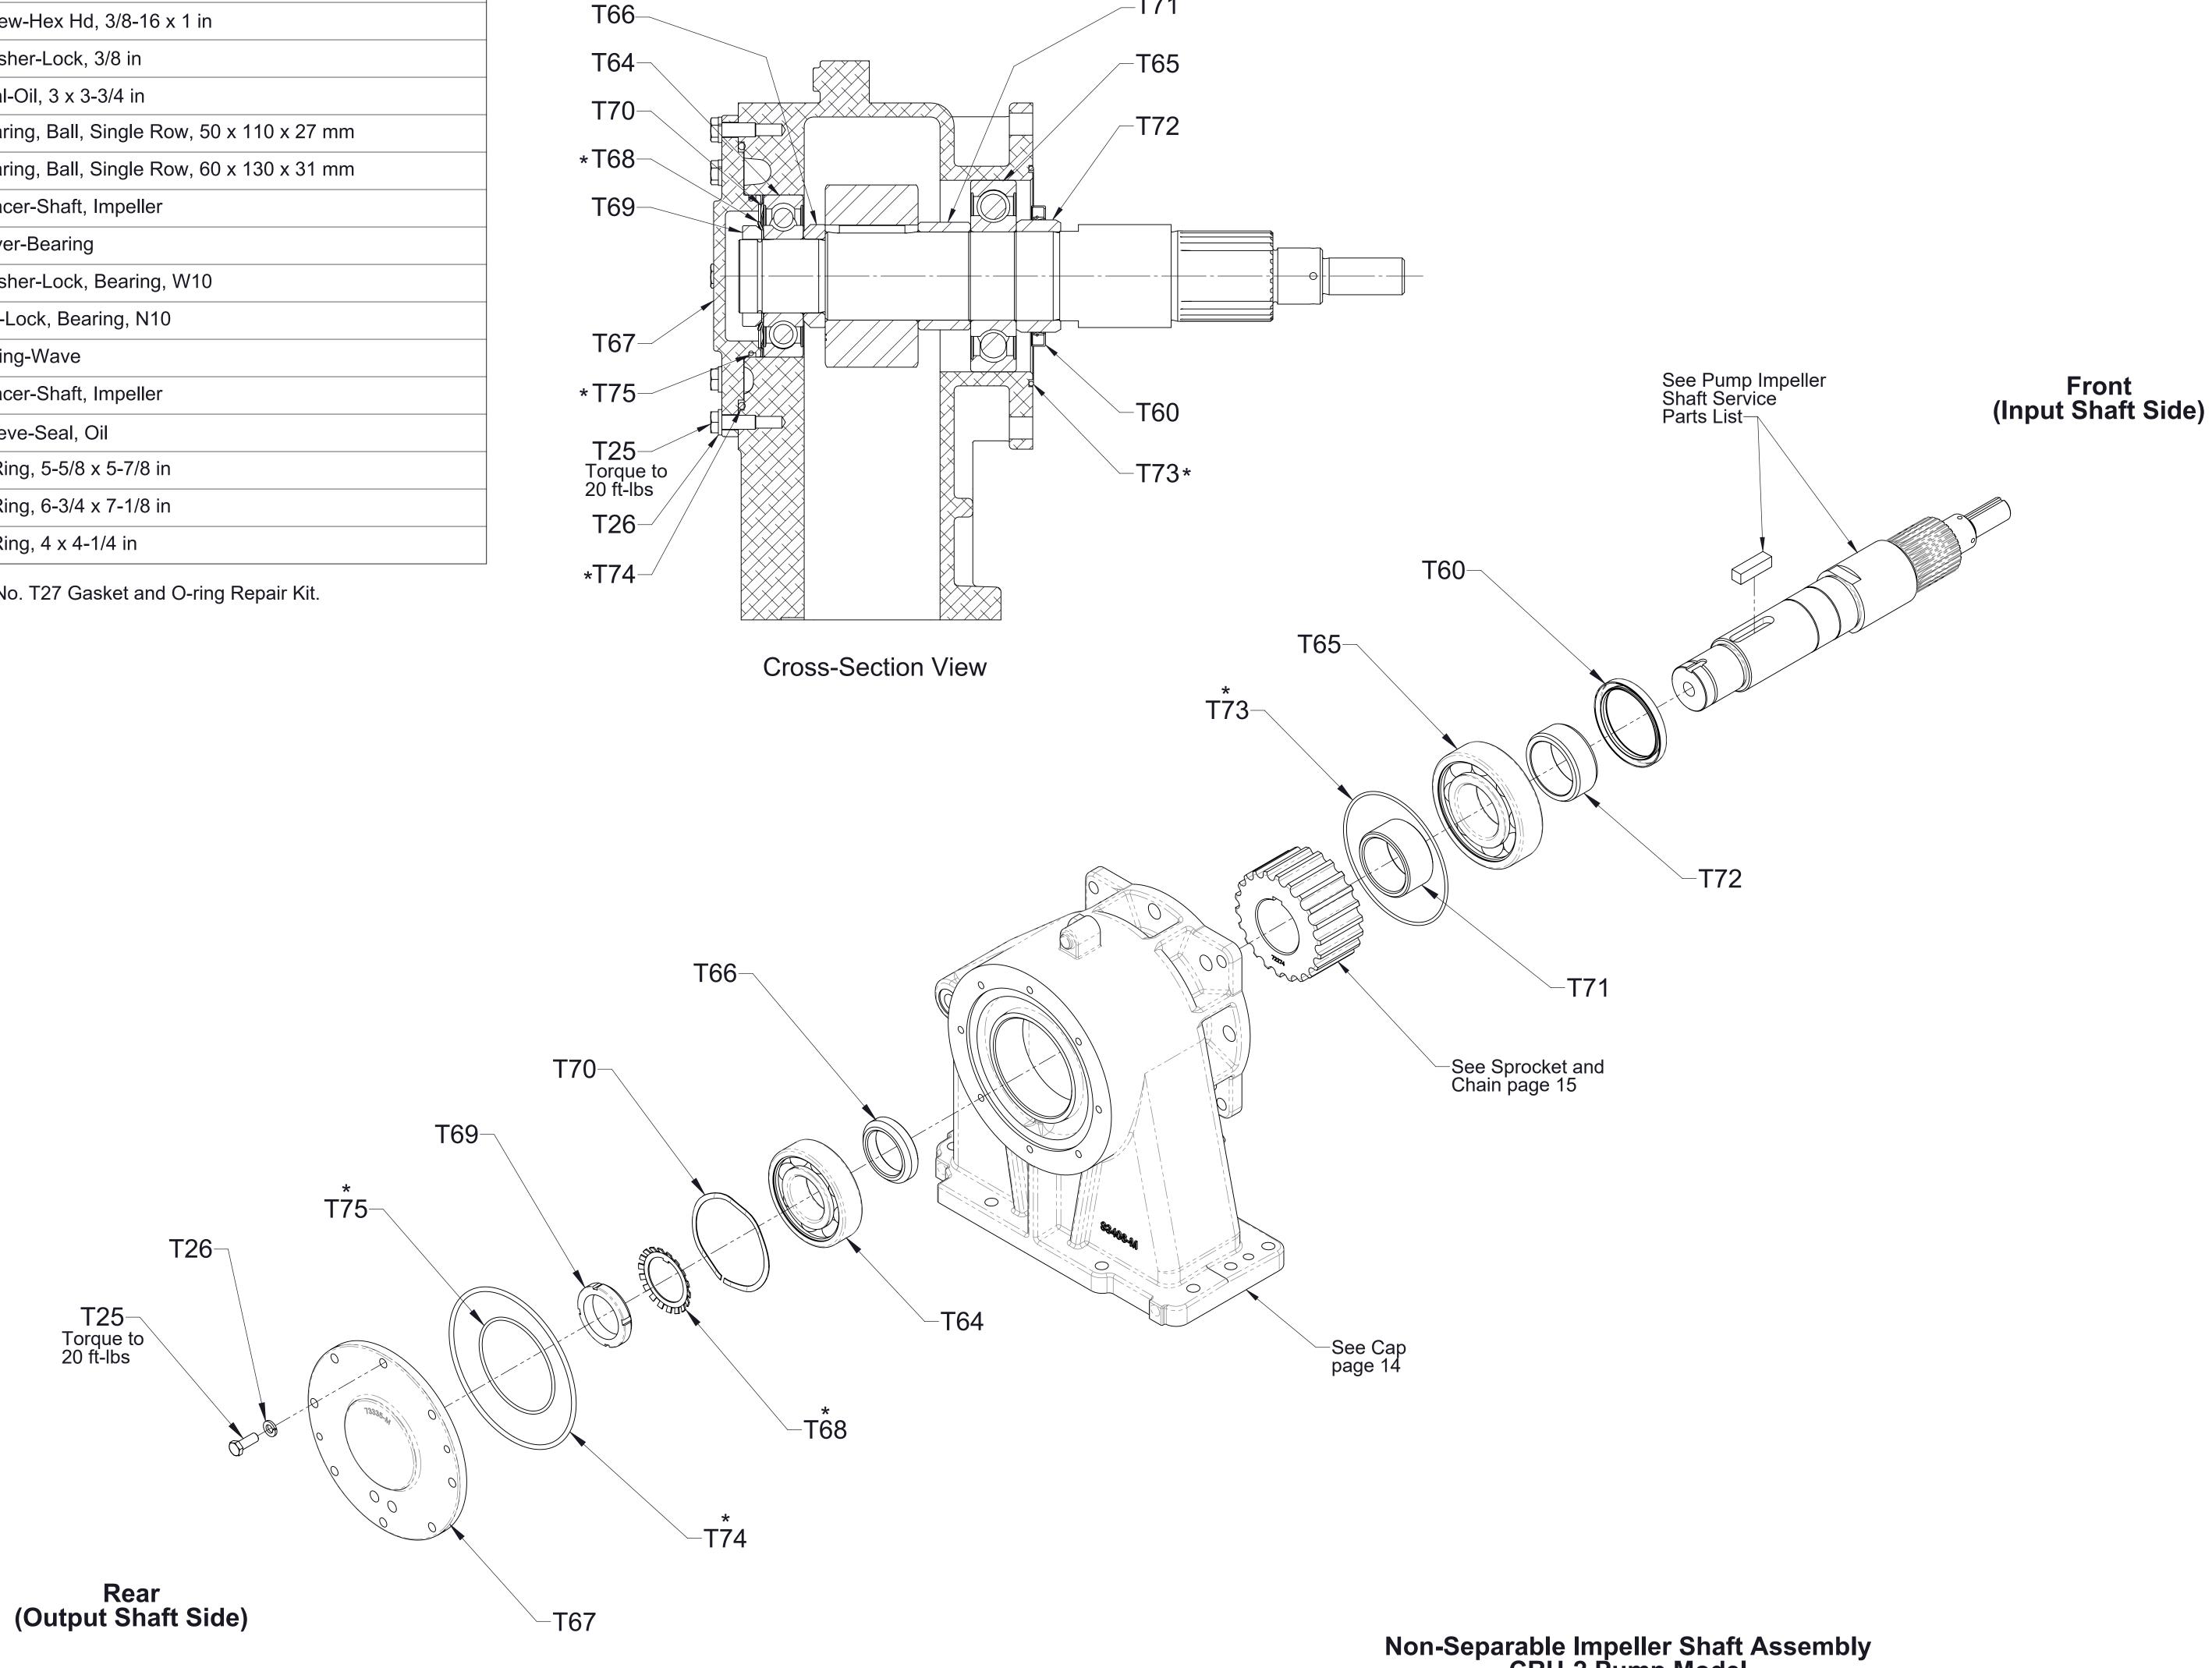

Non-Separable Impeller Shaft Assembly CRU-2 Pump Model Pump Mounted on Front of Transmission with No Rear Facing Output

Ref No.	Description
T25	Screw-Hex Hd, 3/8-16 x 1 in
T26	Washer-Lock, 3/8 in
T60	Seal-Oil, 3 x 3-3/4 in
T64	Bearing, Ball, Single Row, 50 x 110 x 27 mm
T65	Bearing, Ball, Single Row, 60 x 130 x 31 mm
T66	Spacer-Shaft, Impeller
T67	Cover-Bearing
* T68	Washer-Lock, Bearing, W10
T69	Nut-Lock, Bearing, N10
T70	Spring-Wave
T71	Spacer-Shaft, Impeller
T72	Sleeve-Seal, Oil
* T73	O-Ring, 5-5/8 x 5-7/8 in
* T74	O-Ring, 6-3/4 x 7-1/8 in
* T75	O-Ring, 4 x 4-1/4 in

^{*}Included in Ref No. T27 Gasket and O-ring Repair Kit.

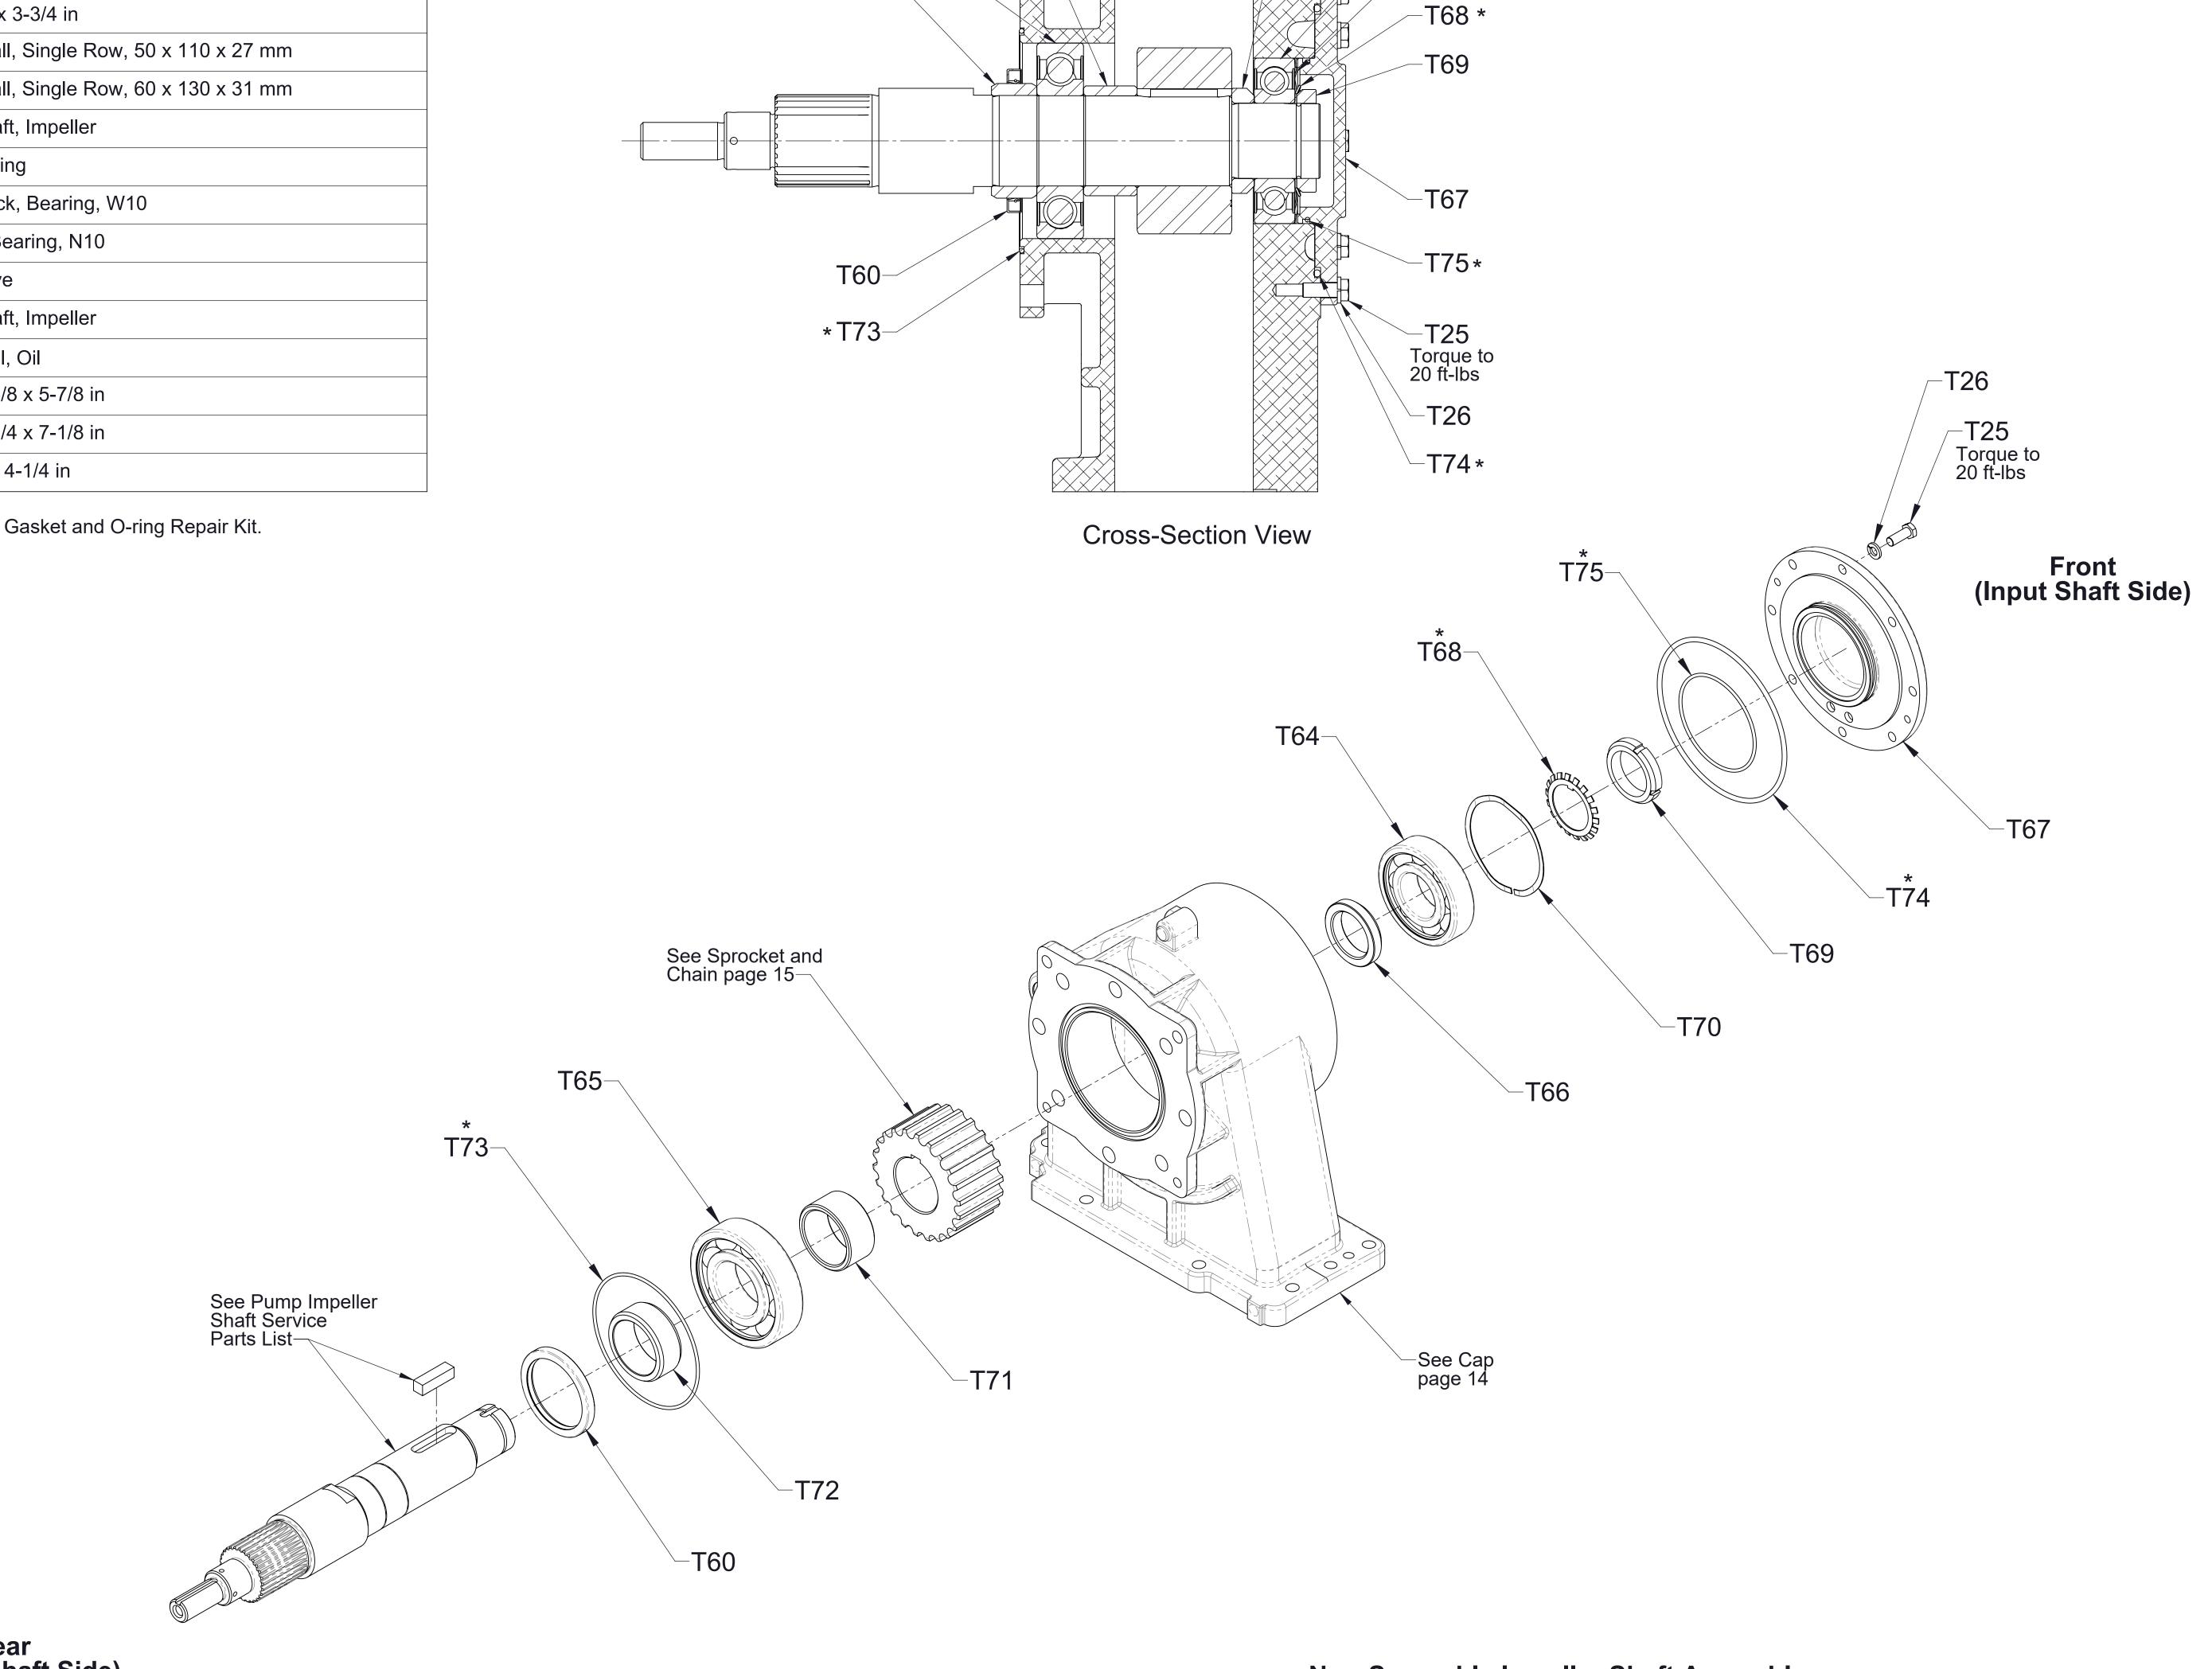

T71-

T65

T72~

Rear (Output Shaft Side)

Non-Separable Impeller Shaft Assembly CRU-2 Pump Model Pump Mounted on Rear of Transmission with No Front Facing Output


-T66

-T64


-T70

Ref No.	Description
T60	Seal-Oil, 3 x 3-3/4 in
T61	Screw-Cap, Hex Soc Hd, 3/8-16 x 2-1/4 in
T62	Adapter-Hydraulic, SAE Class C 4-Bolt
T63	Seal-Oil, 1-25/32 x 2-5/8 in
T64	Bearing, Ball, Single Row, 50 x 110 x 27 mm
T65	Bearing, Ball, Single Row, 60 x 130 x 31 mm
T66	Spacer-Shaft, Impeller
* T68	Washer-Lock, Bearing, W10
T69	Nut-Lock, Bearing, N10
T70	Spring-Wave
T71	Spacer-Shaft, Impeller
T72	Sleeve-Seal, Oil
* T73	O-Ring, 5-5/8 x 5-7/8 in
* T74	O-Ring, 6-3/4 x 7-1/8 in
* T75	O-Ring, 4 x 4-1/4 in

^{*}Included in Ref No. T27 Gasket and O-ring Repair Kit.

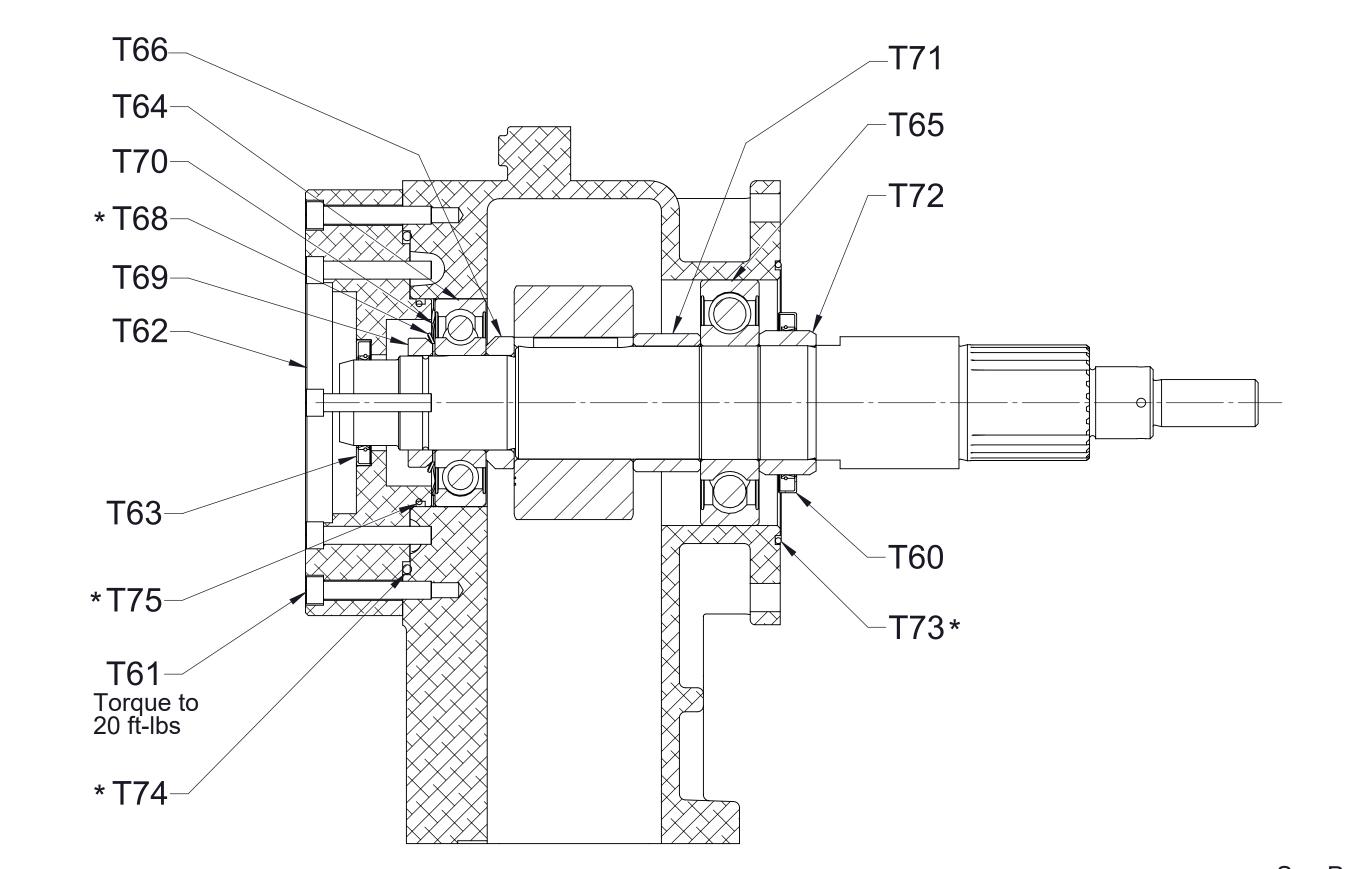


Front (Input Shaft Side)

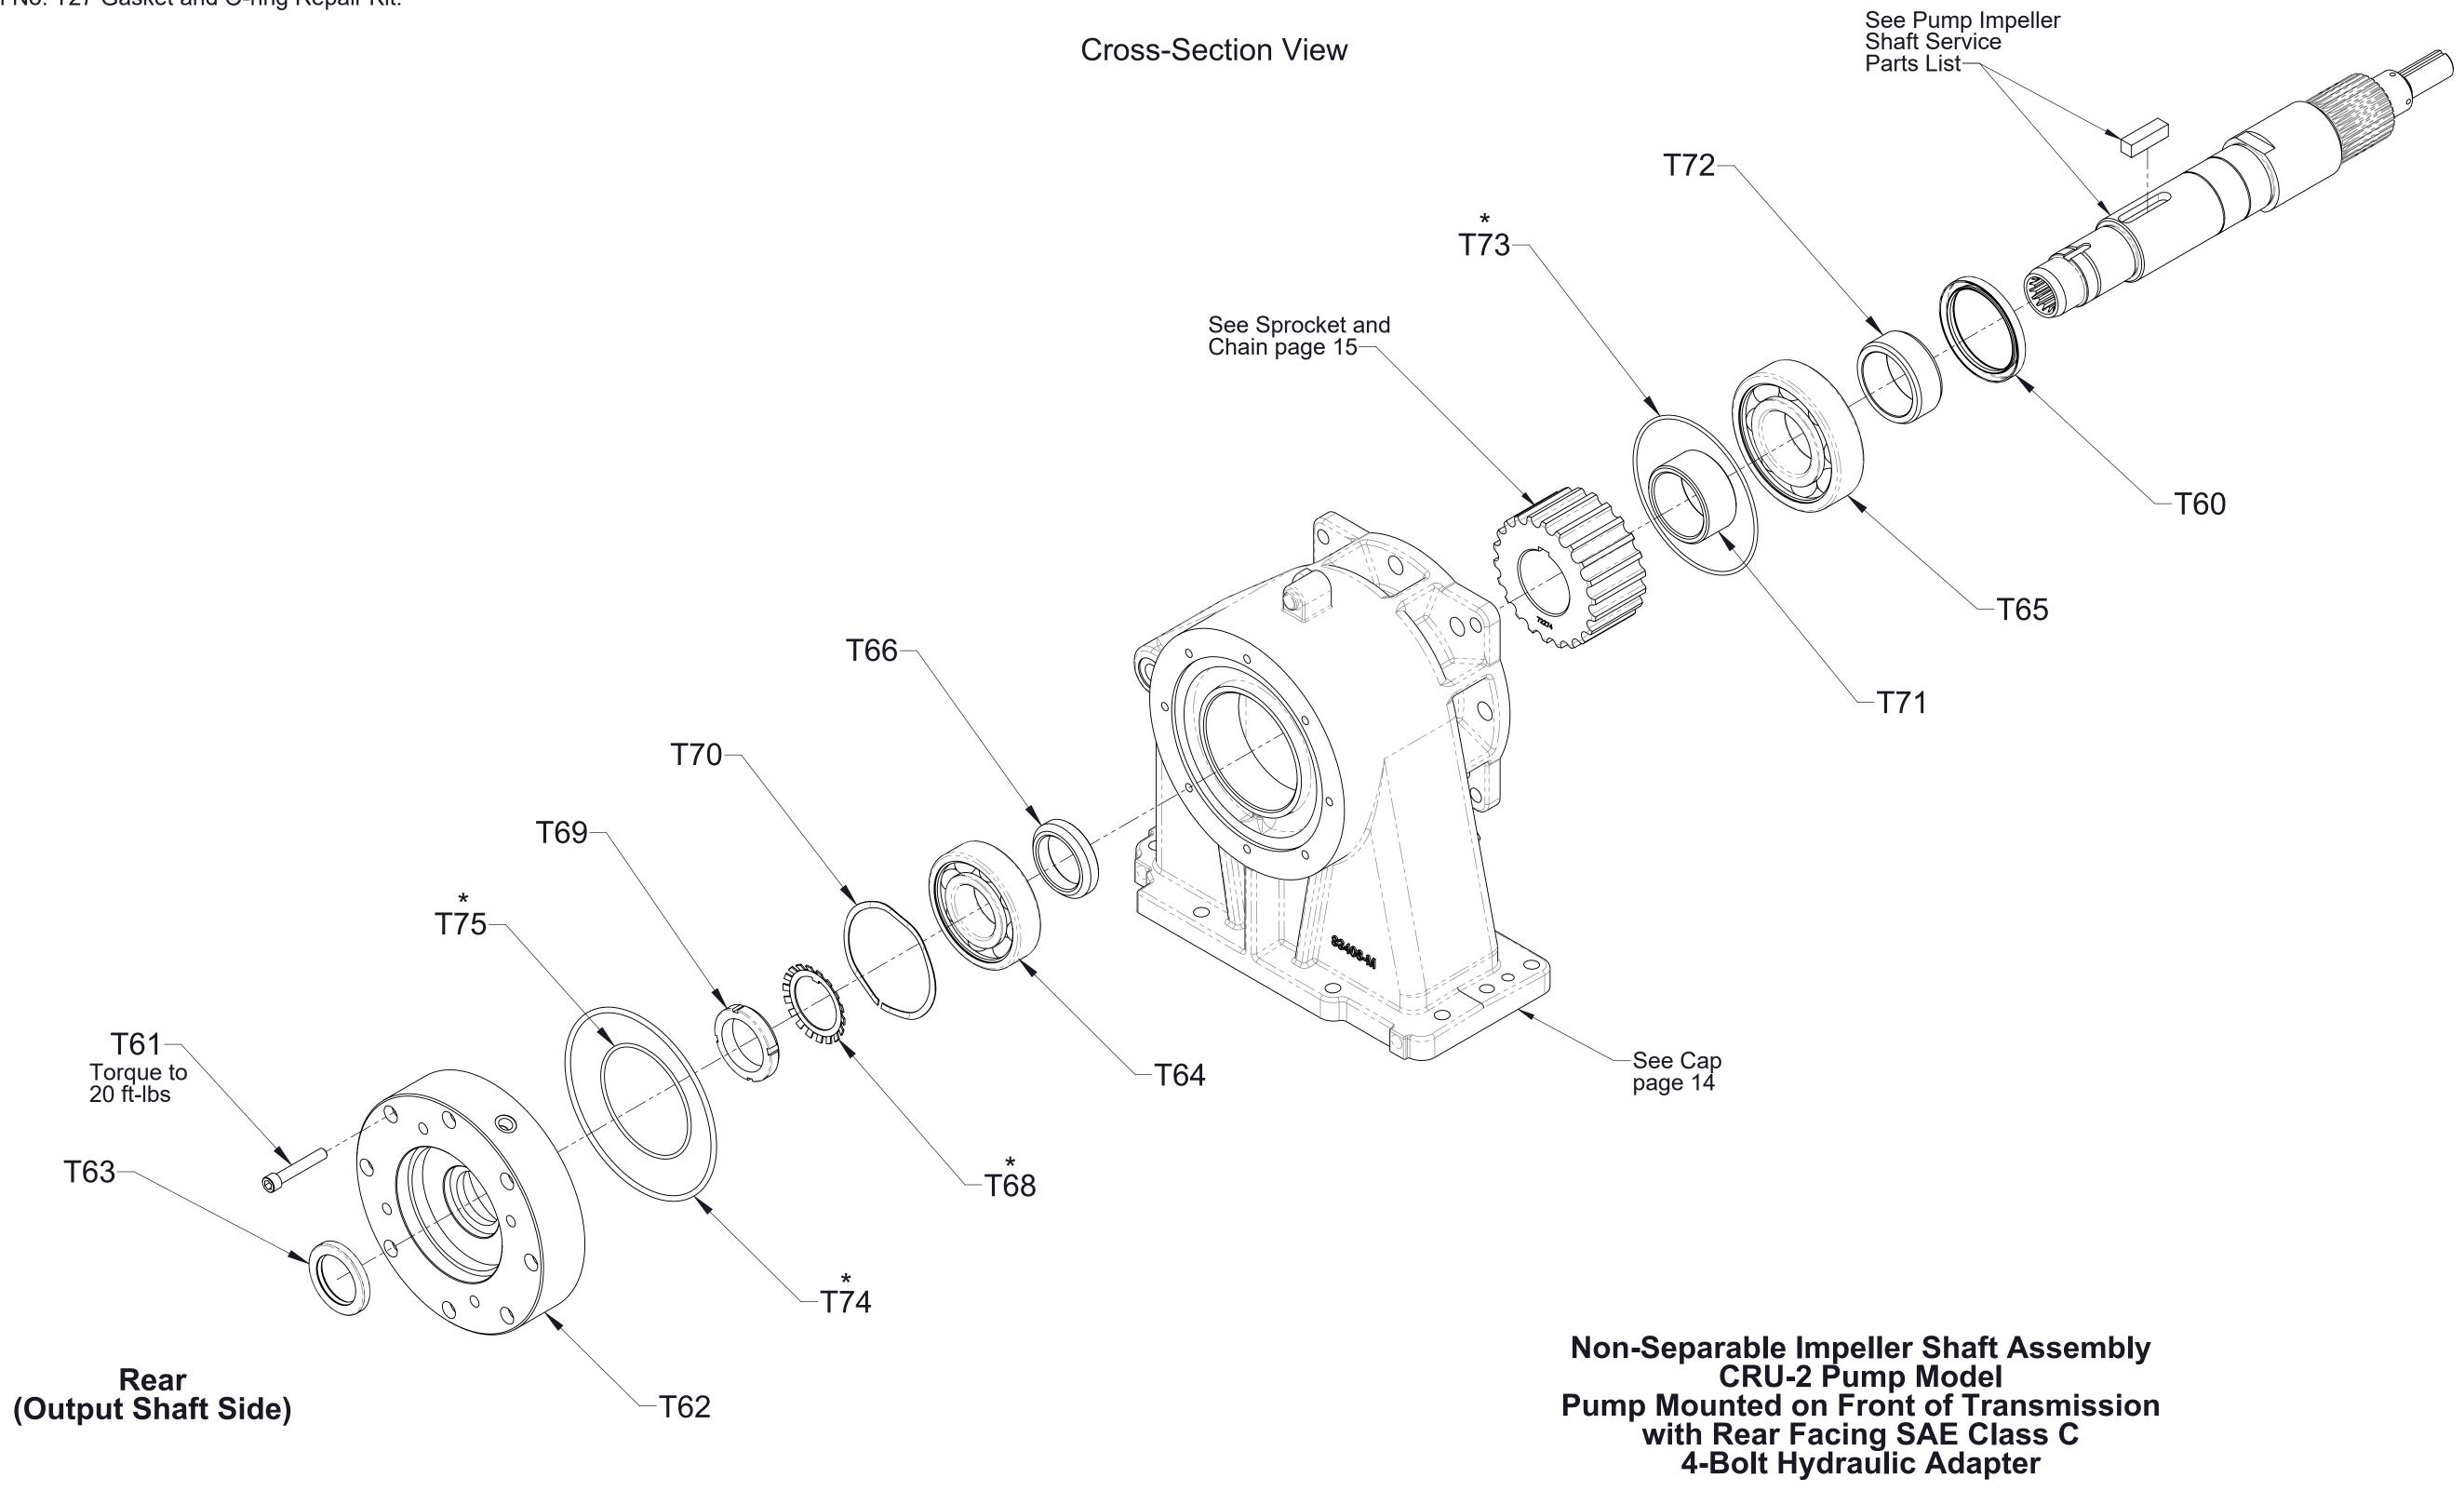



Ref No.	Description
T60	Seal-Oil, 3 x 3-3/4 in
T61	Screw-Cap, Hex Soc Hd, 3/8-16 x 2-1/4 in
T62	Adapter-Hydraulic, SAE Class C 4-Bolt
T63	Seal-Oil, 1-25/32 x 2-5/8 in
T64	Bearing, Ball, Single Row, 50 x 110 x 27 mm
T65	Bearing, Ball, Single Row, 60 x 130 x 31 mm
T66	Spacer-Shaft, Impeller
* T68	Washer-Lock, Bearing, W10
T69	Nut-Lock, Bearing, N10
T70	Spring-Wave
T71	Spacer-Shaft, Impeller
T72	Sleeve-Seal, Oil
* T73	O-Ring, 5-5/8 x 5-7/8 in
*T74	O-Ring, 6-3/4 x 7-1/8 in
*T75	O-Ring, 4 x 4-1/4 in


^{*}Included in Ref No. T27 Gasket and O-ring Repair Kit.

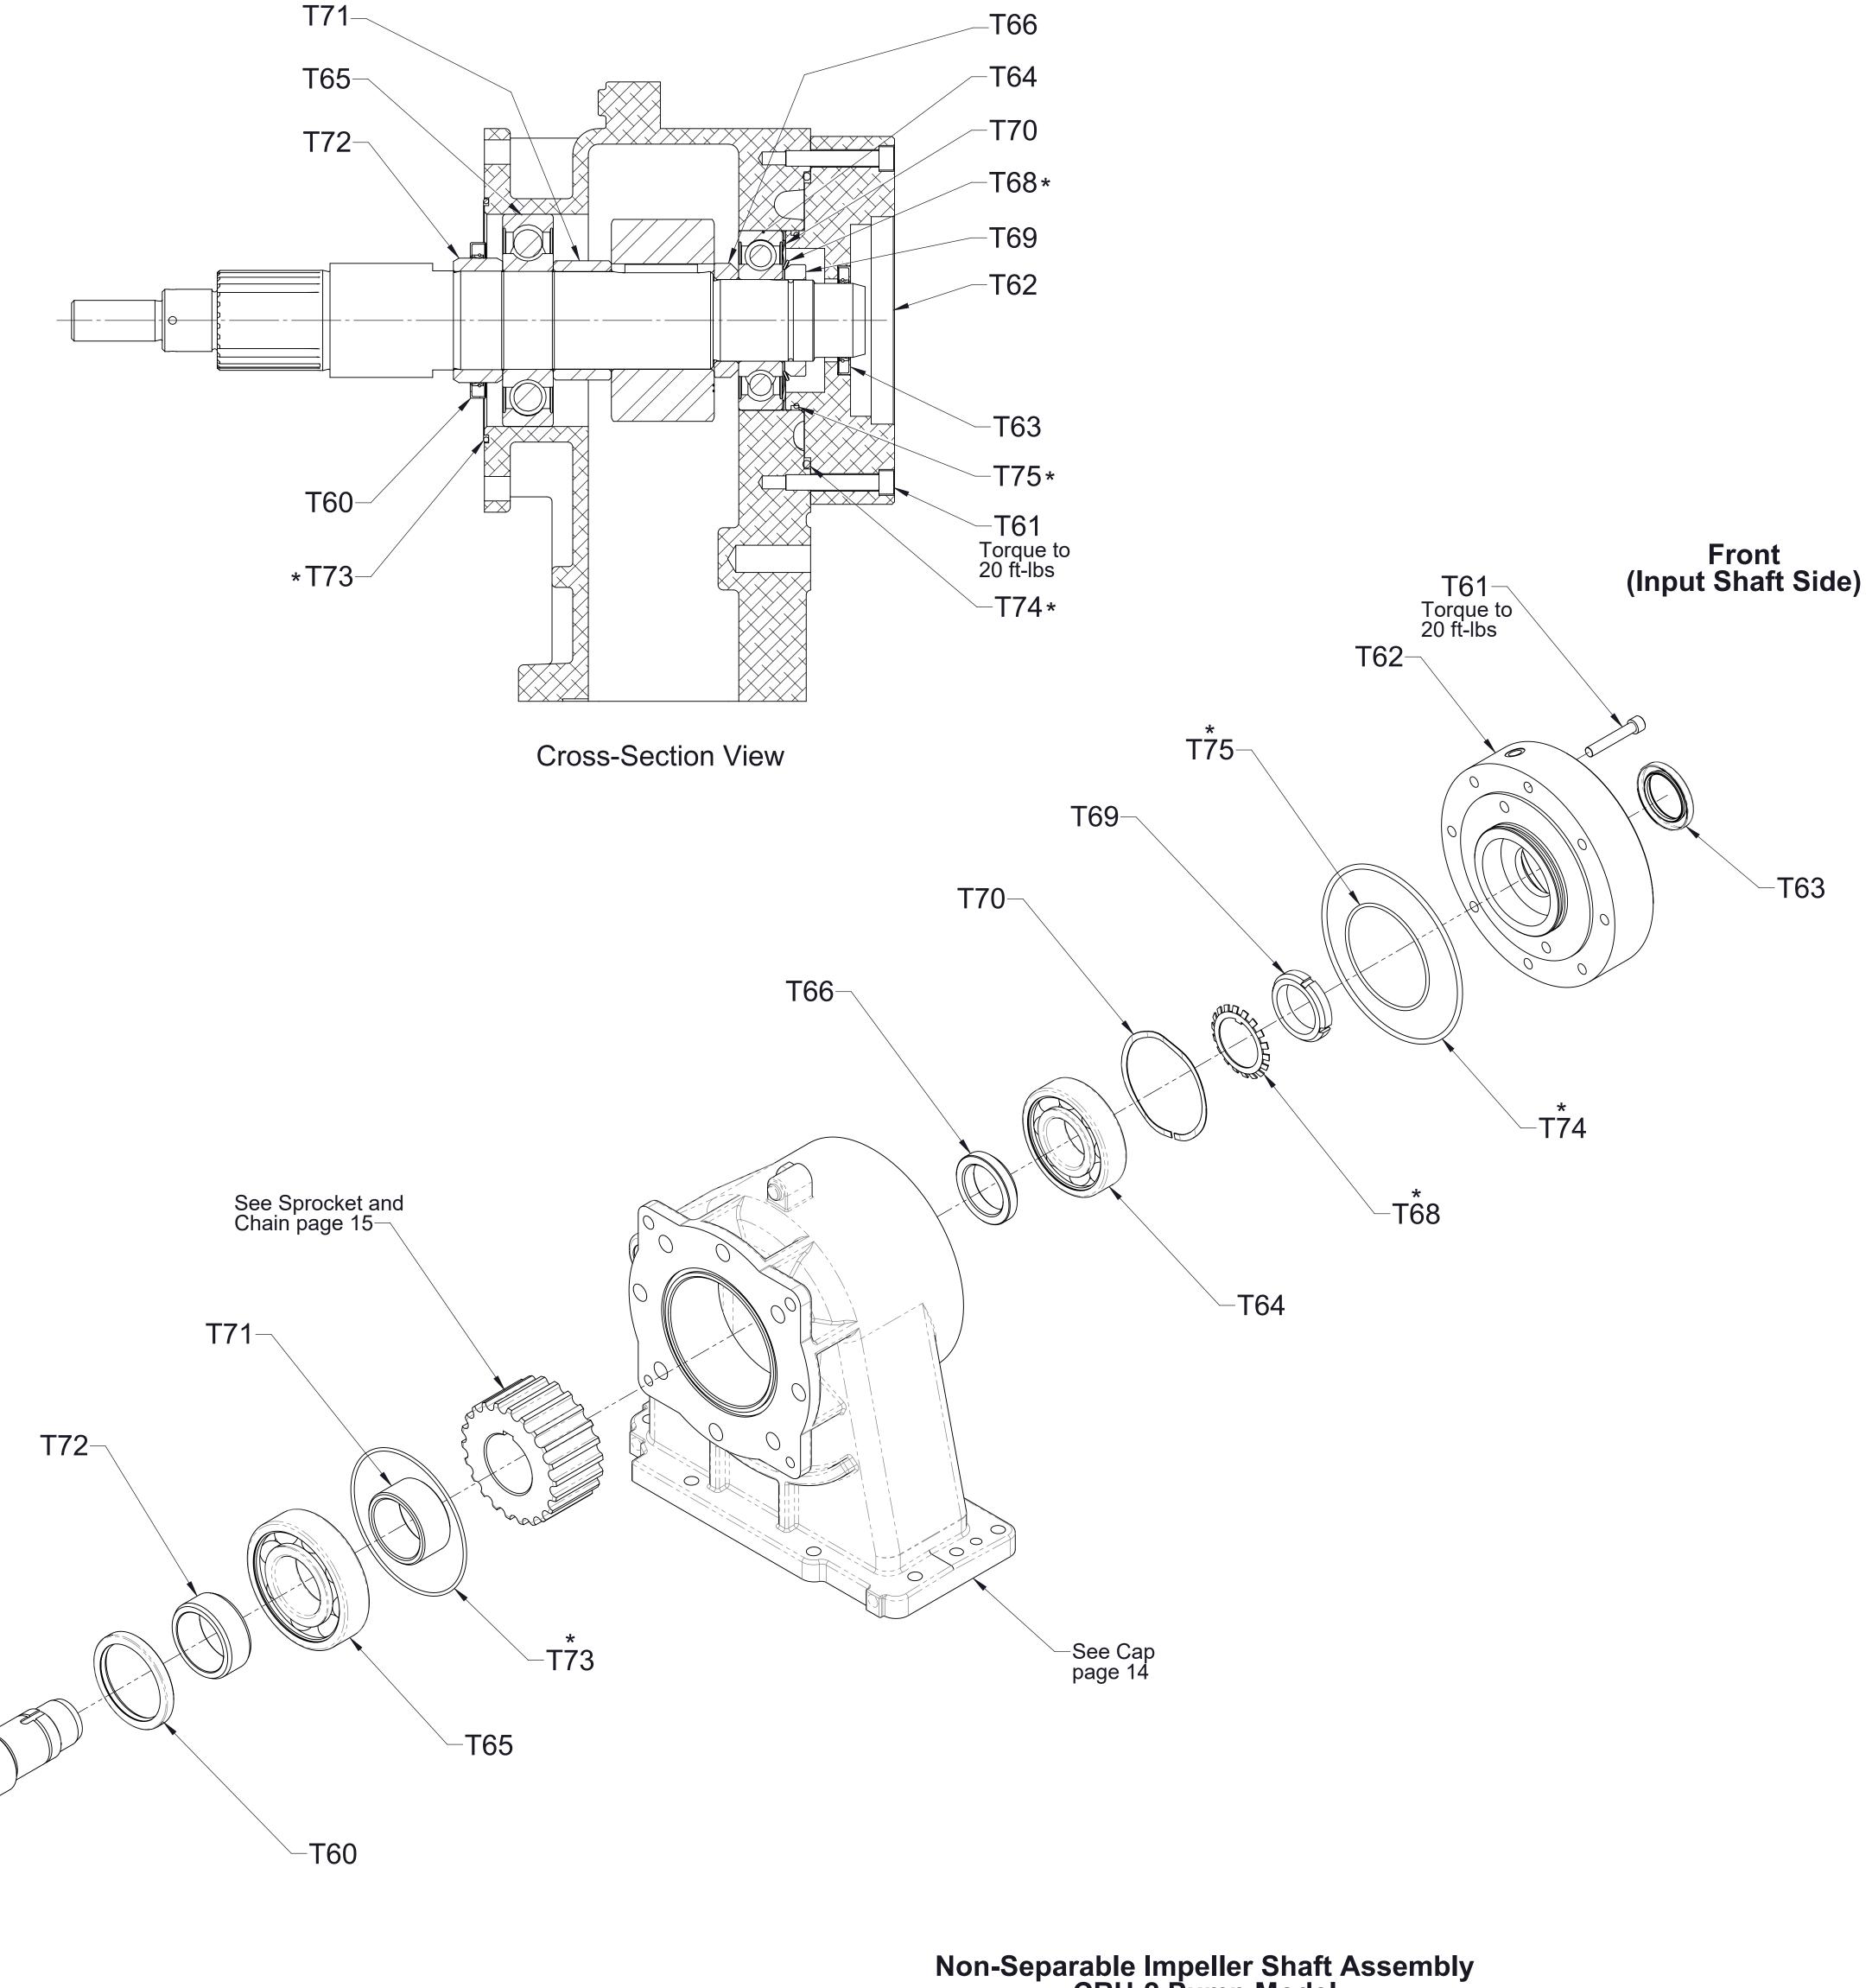


See Pump Impeller Shaft Service Parts List

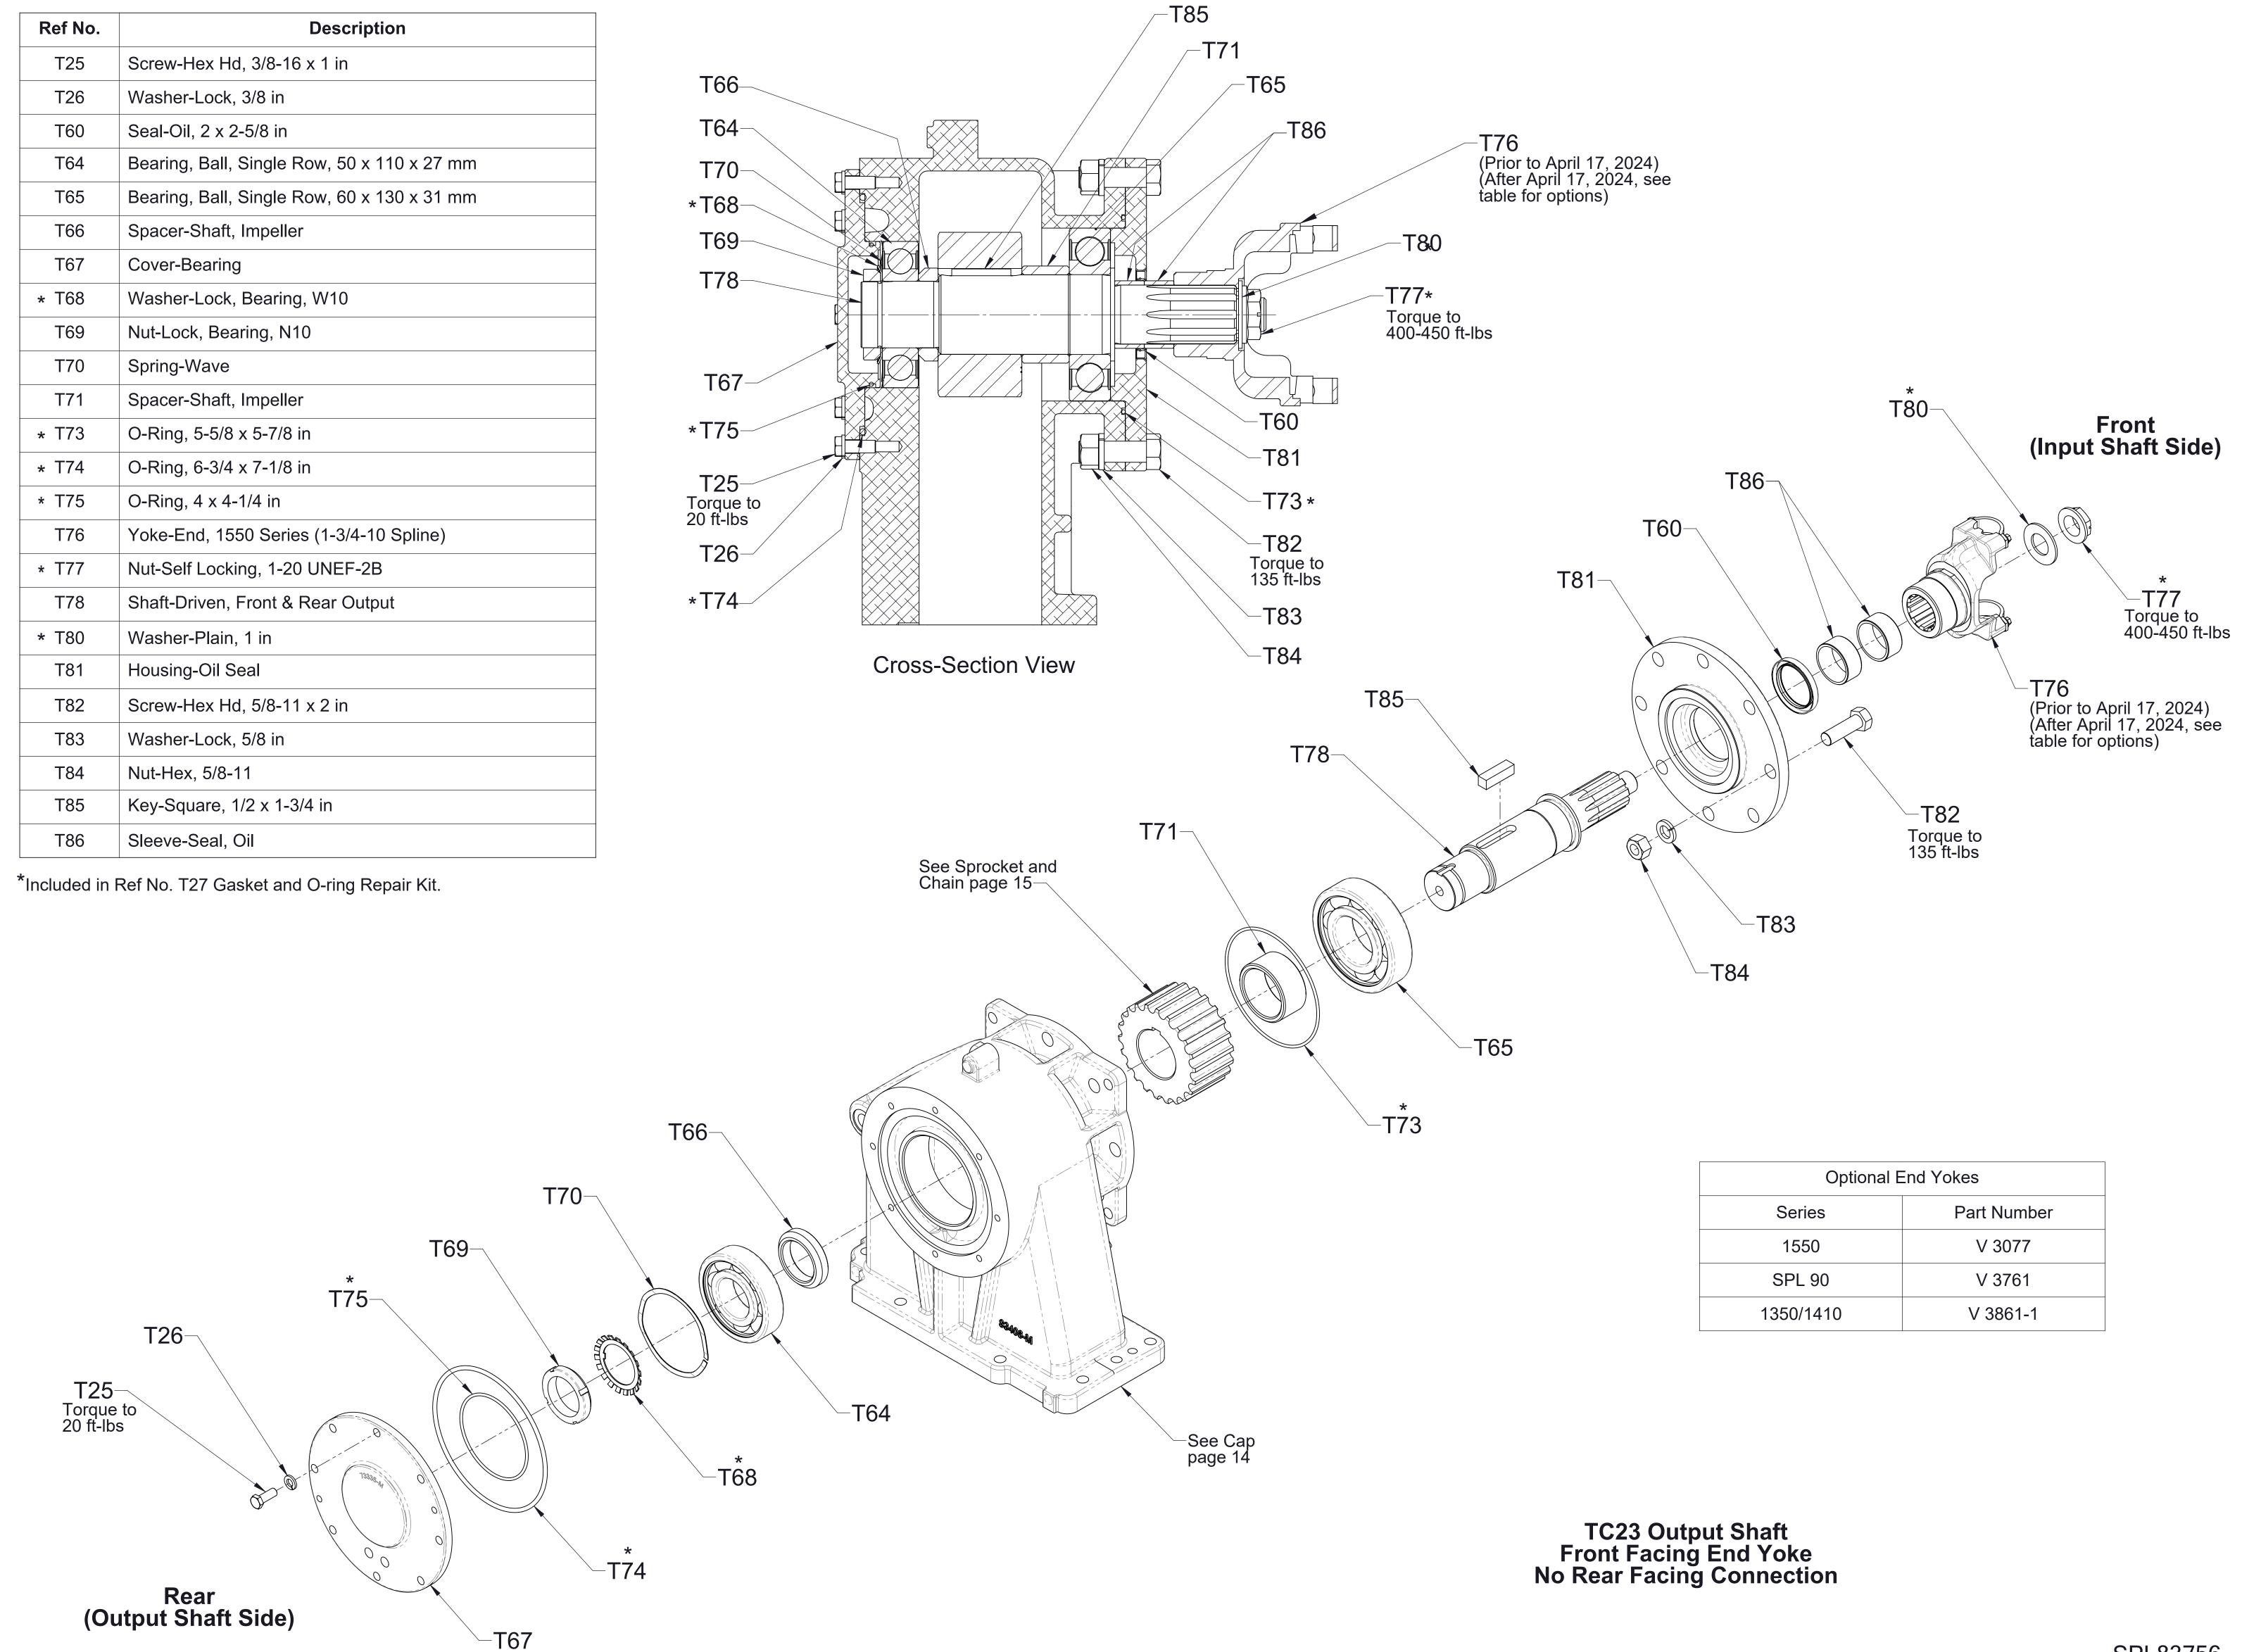


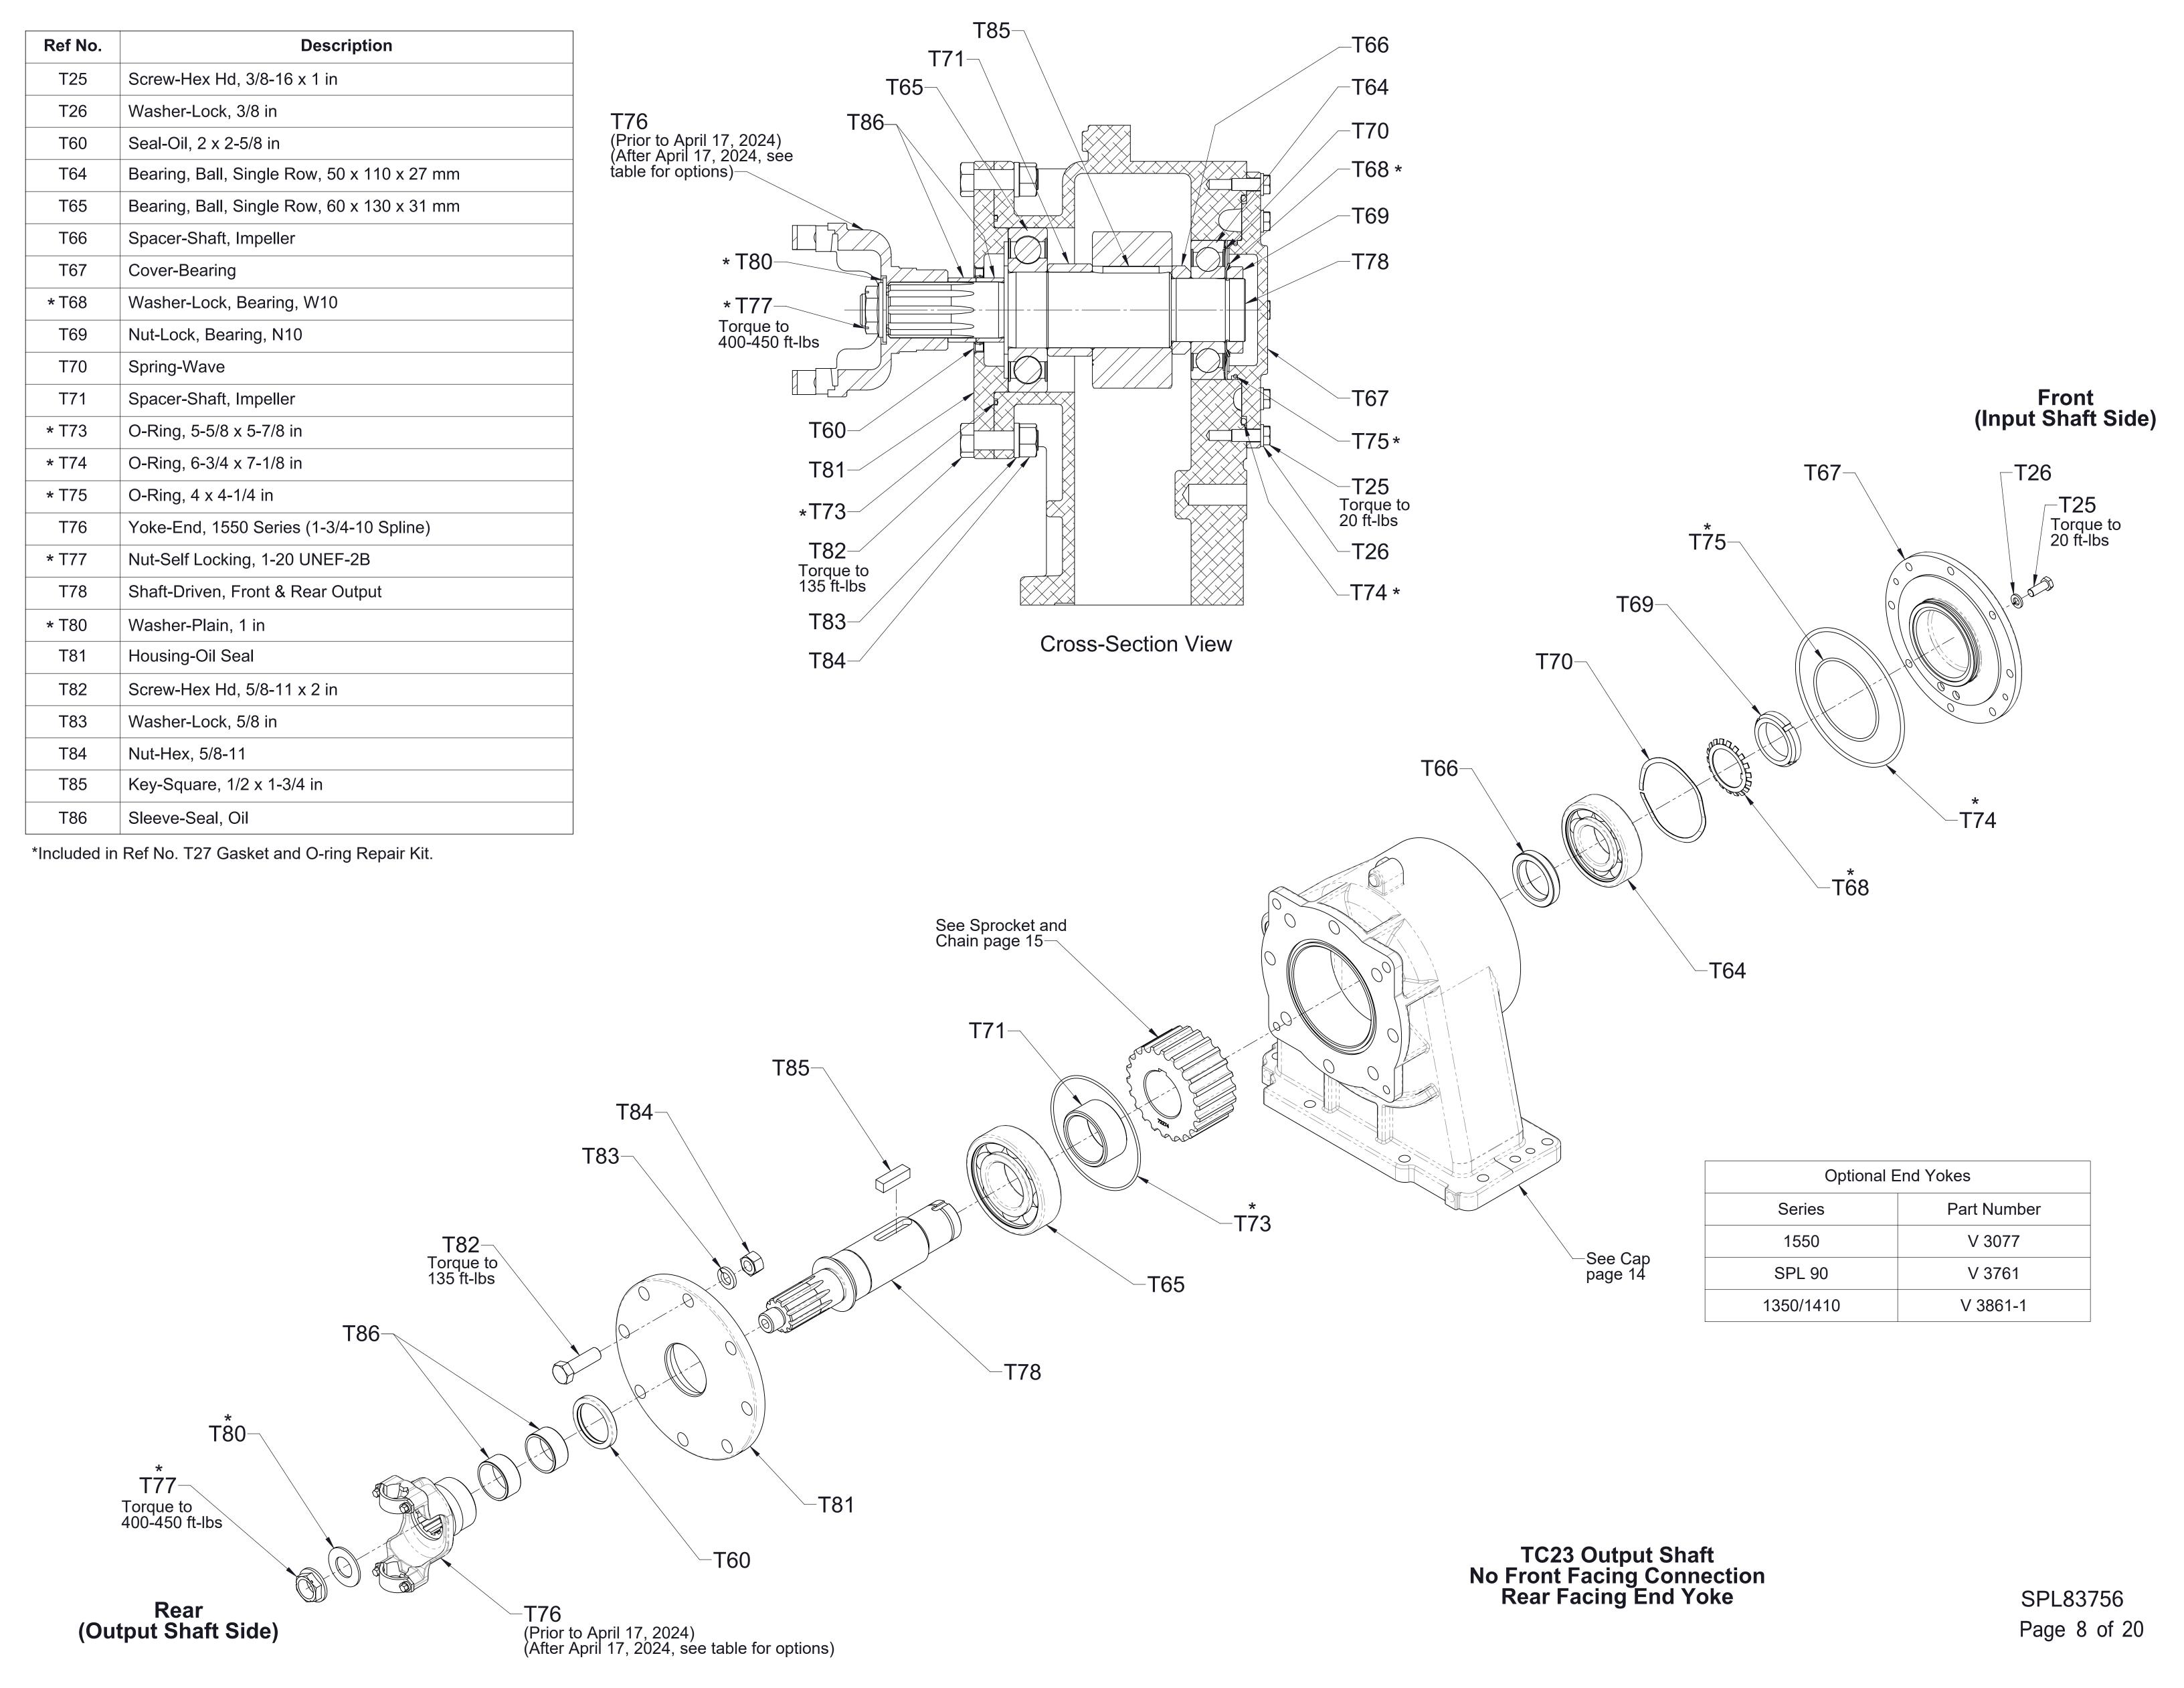

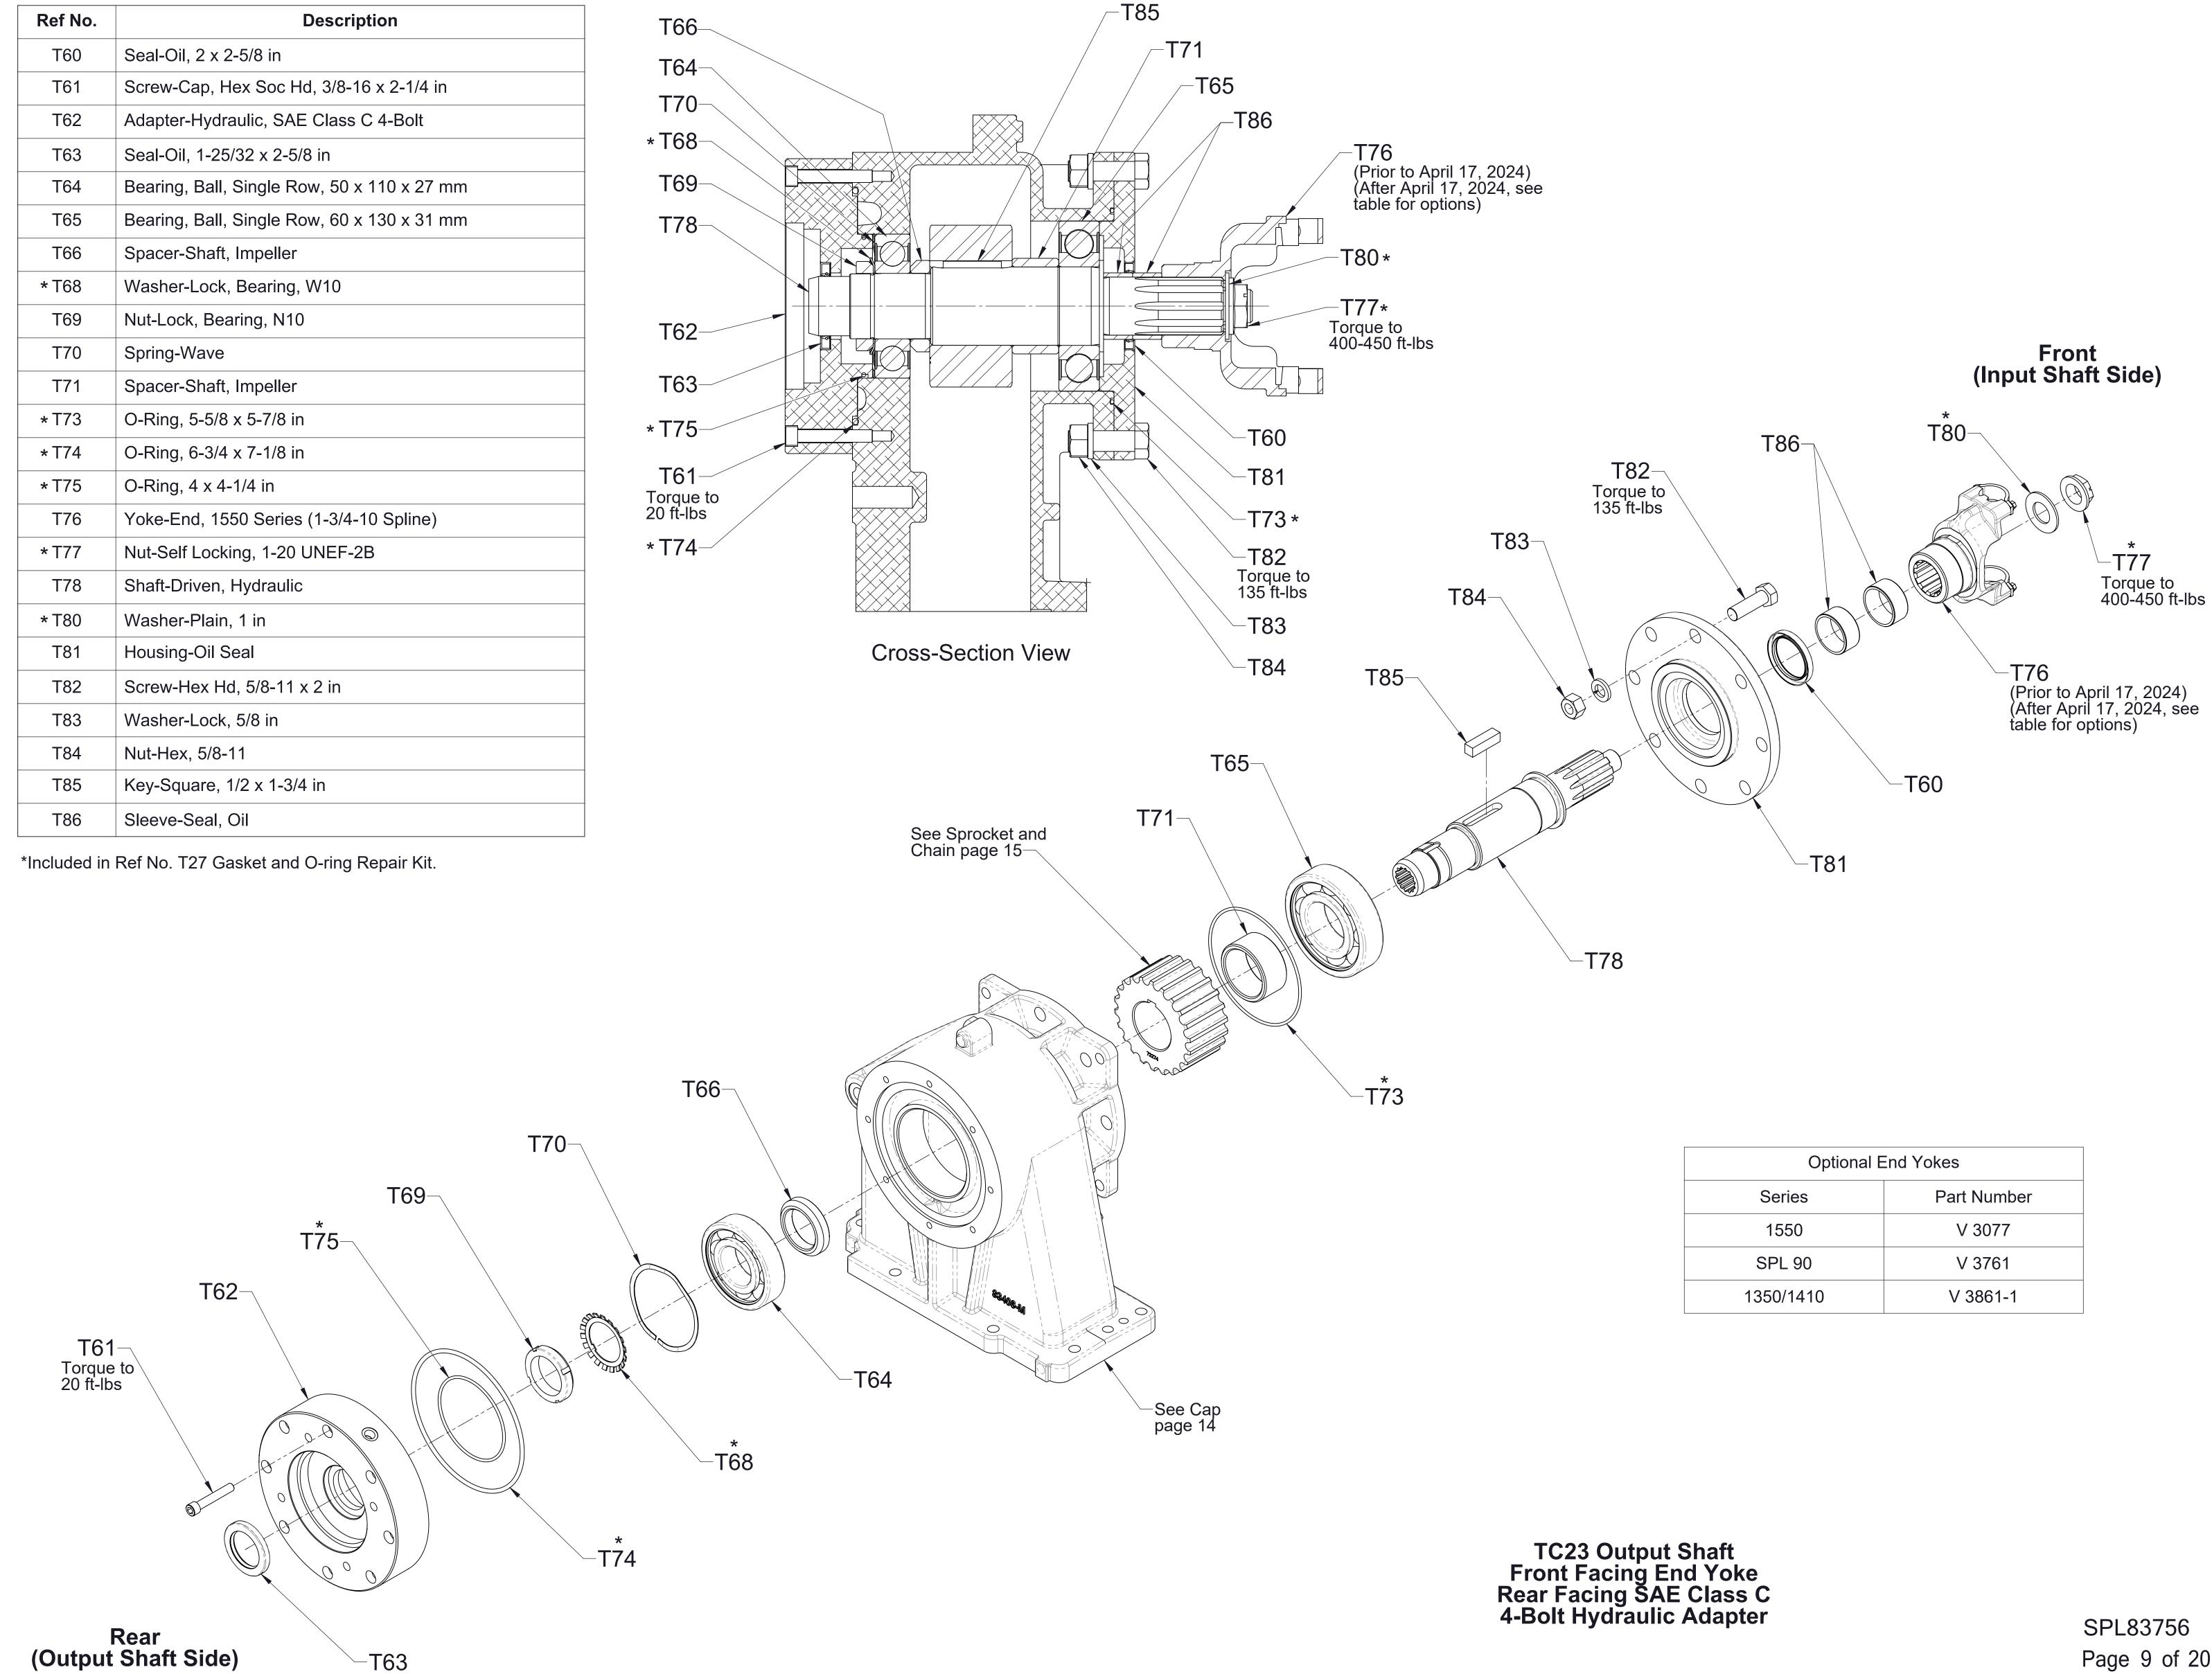

Page 9 of 20

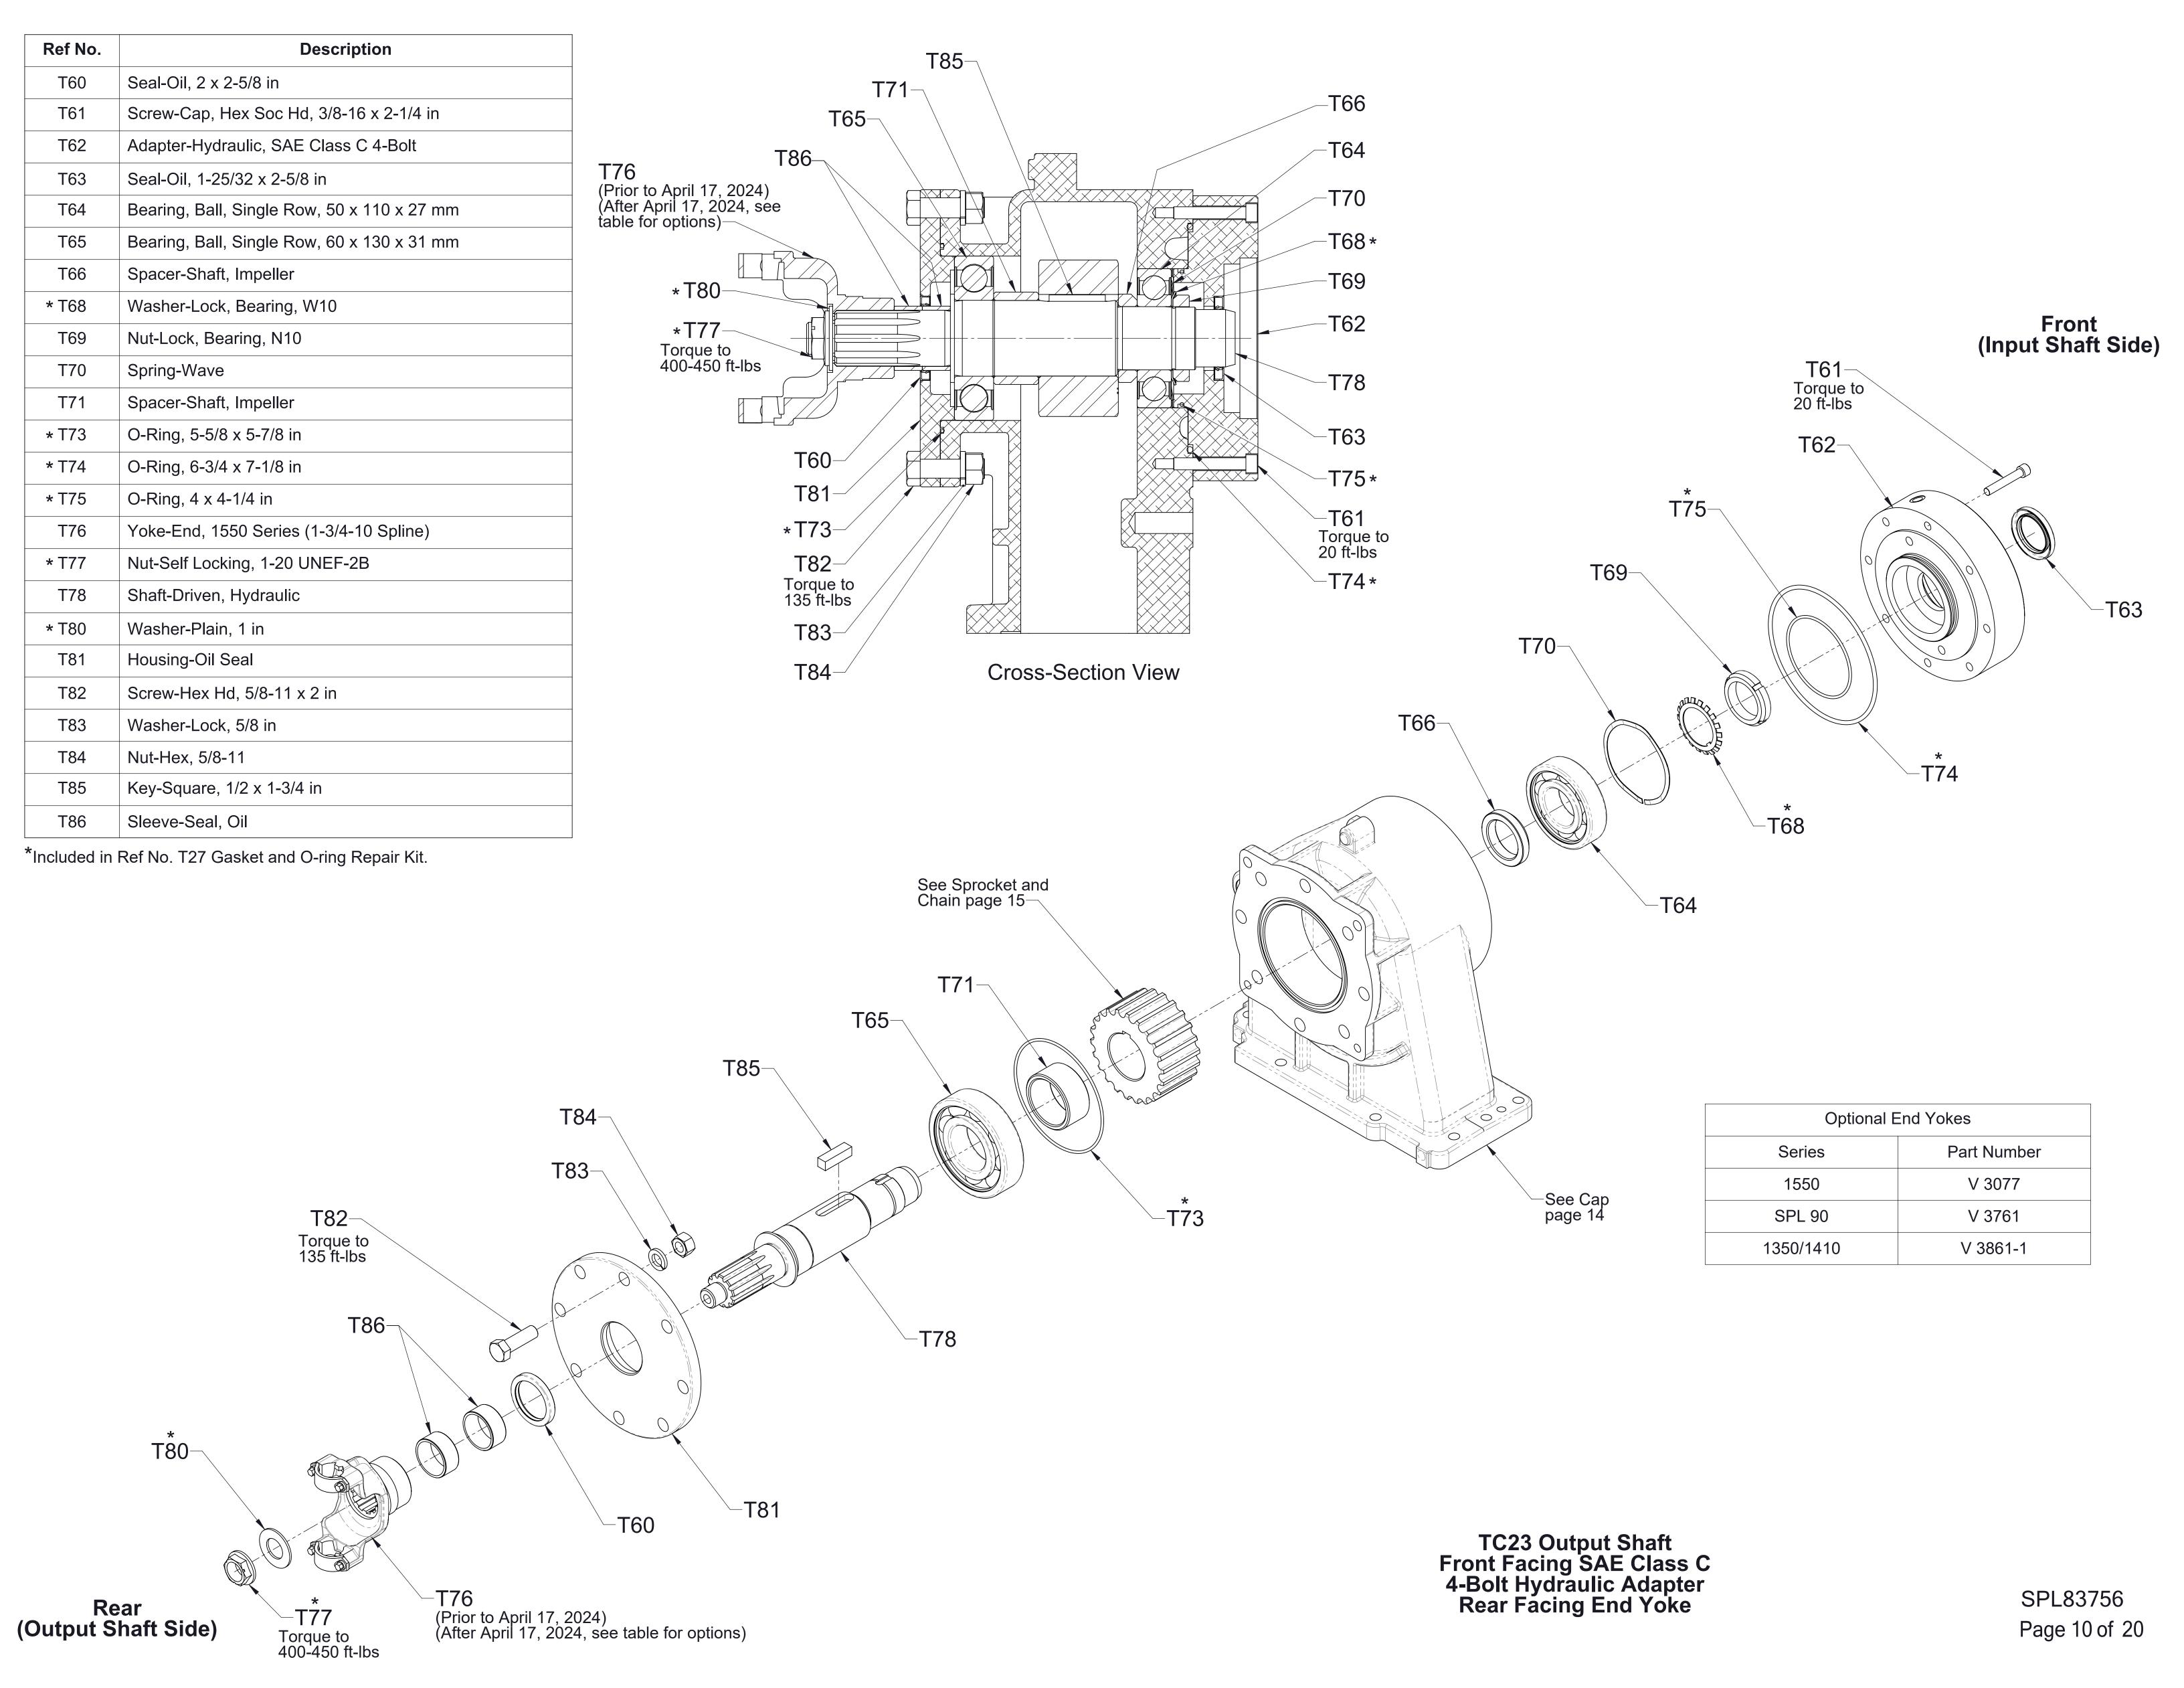


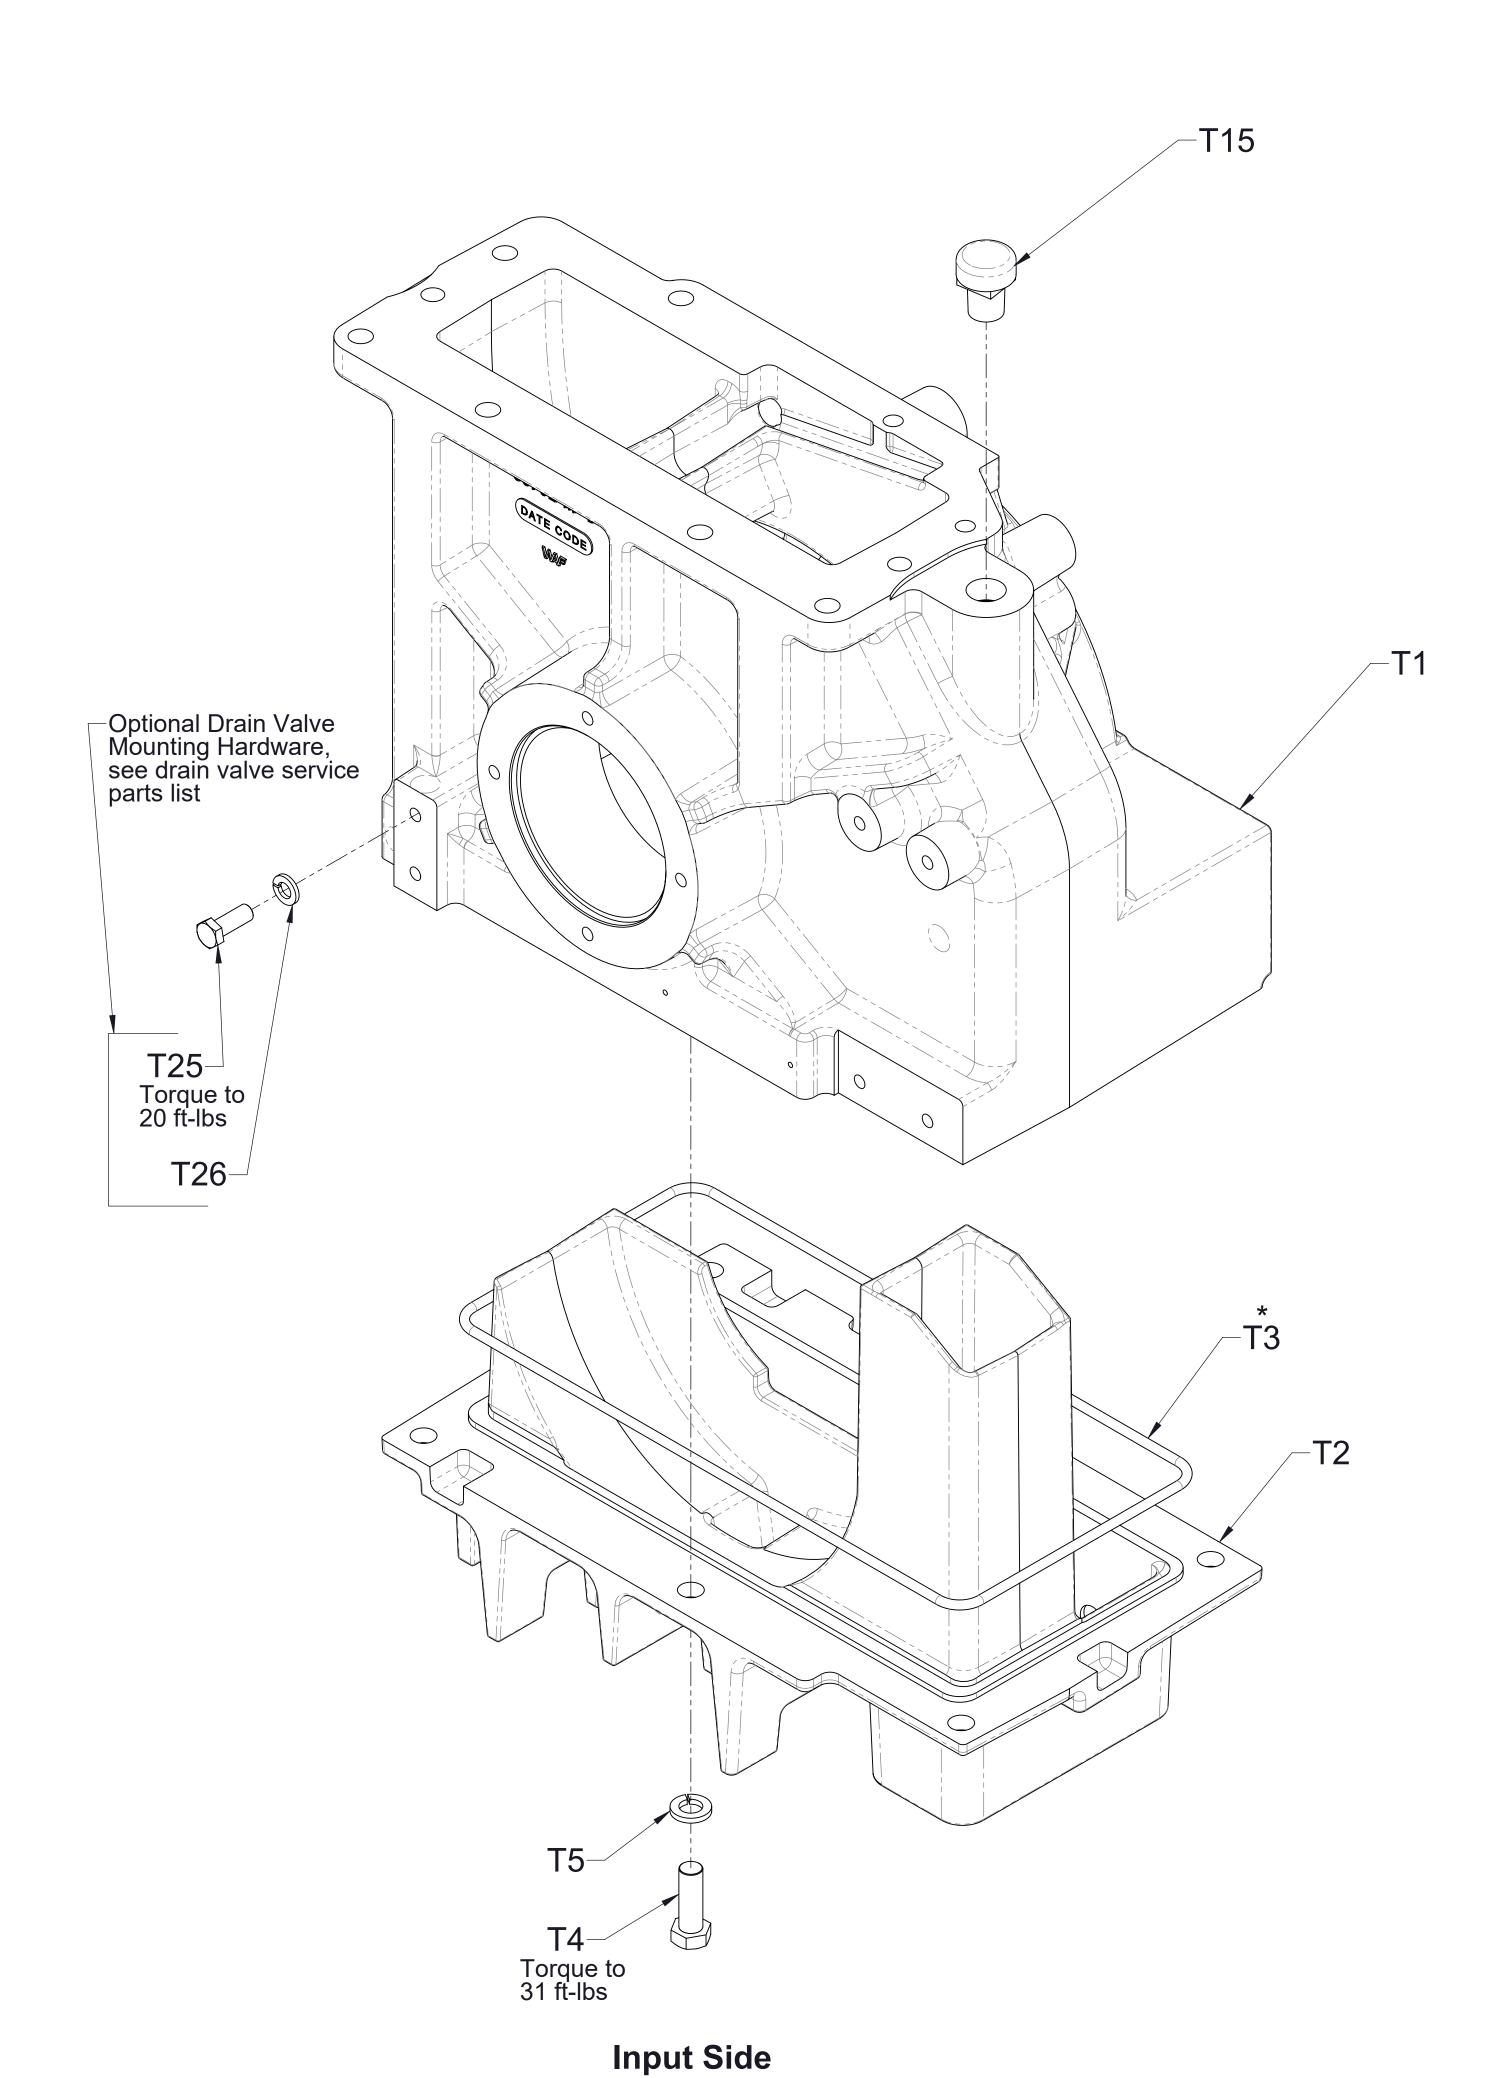

Ref No.	Description
T1	Case-Transmission
T2	Pan-Transmission
Т3	Gasket-Molded
T4	Screw-Hex Hd, 1/2-13 x 1-1/2 in
T5	Washer-Lock, 1/2 in
T15	Breather, 1/2 NPT
T20	Plug-Site, Glass, 3/4 NPT
T21	Plug-Magnetic, 3/4 in
T22	O-ring, 16.2mm x 20.8mm
T23	Plug-Pipe, Headless, 1/2 NPT
T24	Plug-Pipe, Headless, 1/8 NPT
*T25	Screw-Hex Hd, 3/8-16 x 1 in
T26	Washer-Lock, 3/8 in
H4	O-ring, 2-1/4 x 2-1/2 in.

*Included in Ref No. T27 Gasket and O-ring Repair Kit.

Note: 1. Apply thread sealant to pipe threads.

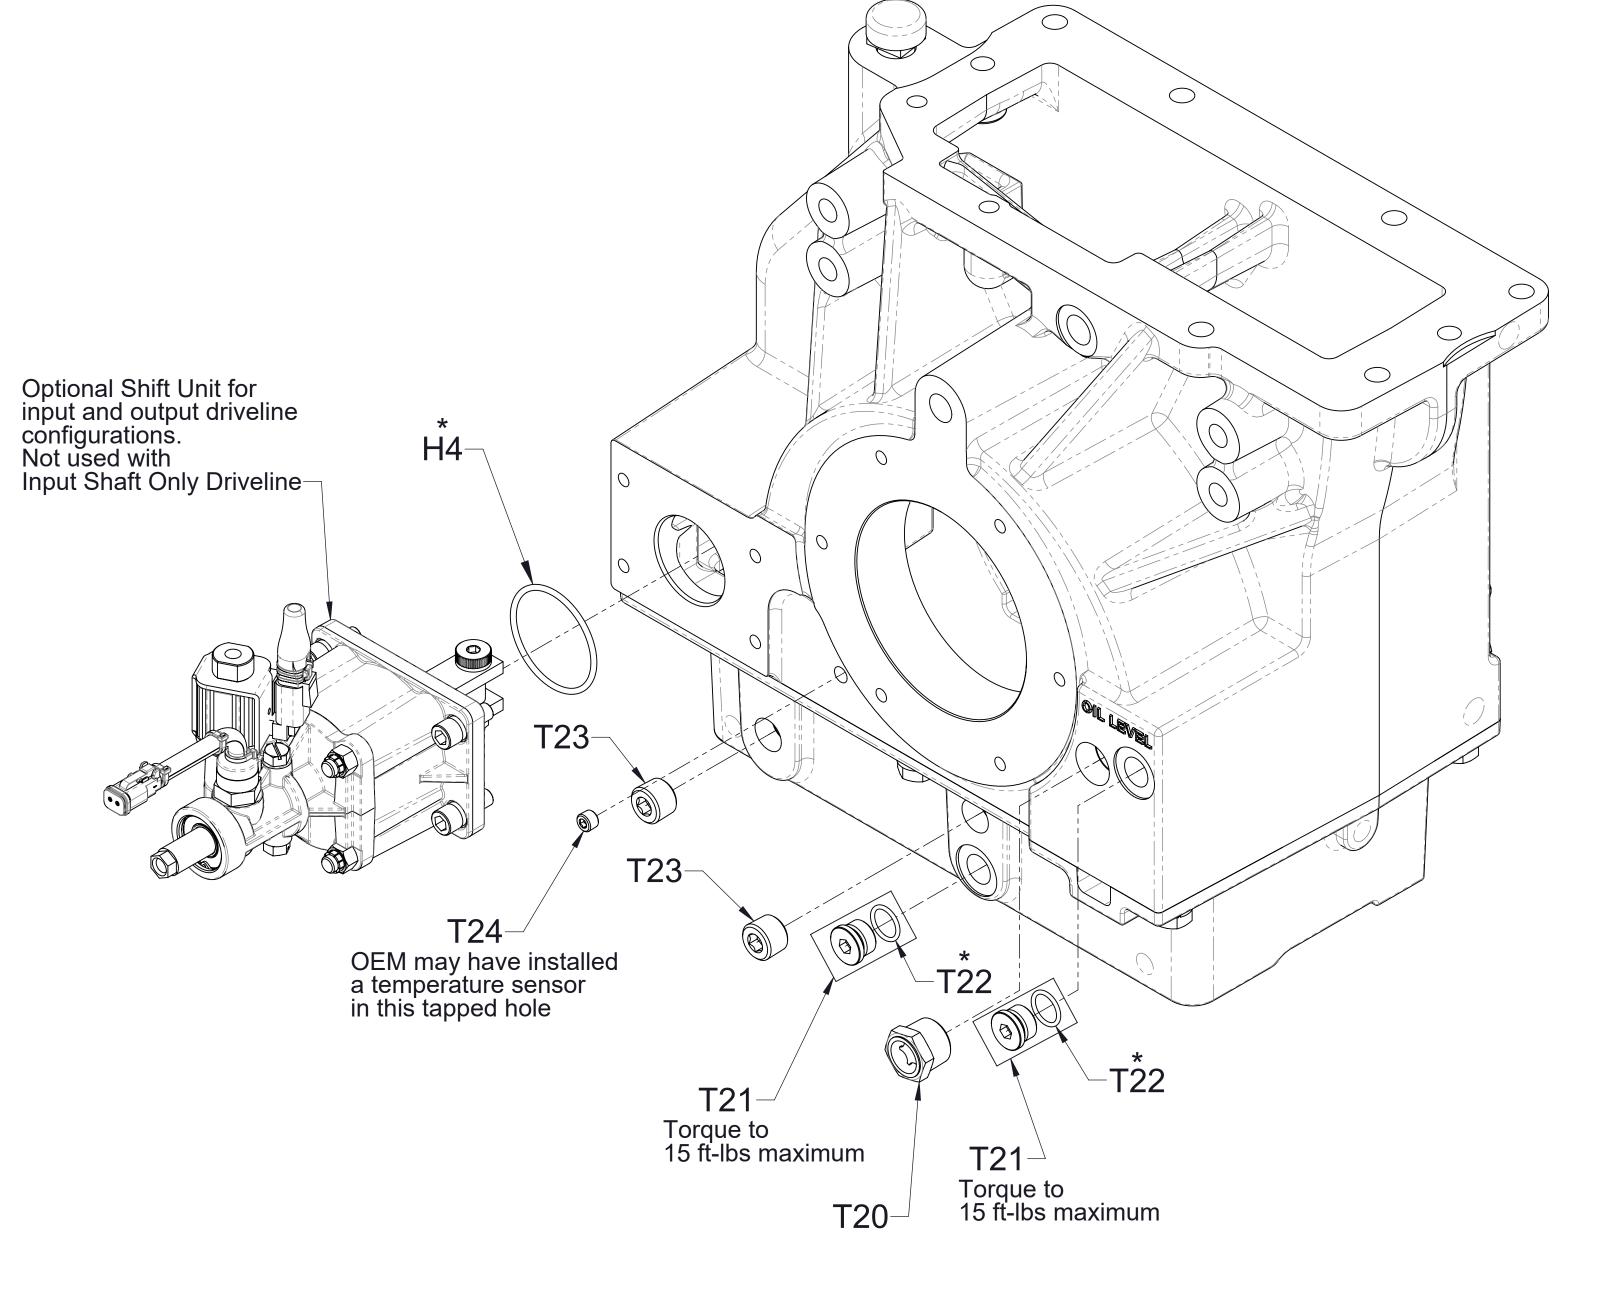

Output Side

Ref No.	Description
T26	Washer-Lock, 3/8 in
* T31	Nut-Self Locking, 1-1/4-18 UNEF-2B
* T32	Washer-Plain, 1-1/4 in
T33	Shaft-Drive, 2.35-46 Spline
T34	Spacer-Bearing
T35	Ring-Retaining, External, 3-15/16 in Shaft Dia
T36	Seal-Oil, 3-1/2 x 4-3/8 x 3/8
T37	Bearing, Ball, Single Row, 60 x 110 x 22 mm
T38	Housing - Drive Shaft
* T39	O-Ring, 4-1/4 x 4-1/2 in
T40	Screw-Cap, Hex Soc Hd, 3/8-16 x 1-1/4 in
T42	Ring-Retaining, Internal, 3-3/4 in Bore Dia
T43	Bearing, Ball, Single Row, 60 x 95 x 18 mm
T44	Spacer-Drive Shaft
T45	Collar-Shift
T46	Shoe-Shift
T47	Fork-Shift
* T48	Screw-Shoulder, Soc Hd, 3/4 x 2-1/2 in
T49	Bearing, Ball, Single Row, 30 x 72 x 19 mm
T50	Shaft-Coupling, 2.35-46 Spline
T52	Spacer-Shaft, Coupling
* T53	O-Ring, 4-3/4 x 5 in
* T54	Shim-Coupling Shaft Housing
T57	Housing-Coupling Shaft

^{*}Included in Ref No. T27 Gasket and O-ring Repair Kit.

Optional end yoke or companion flange (both ends). May not have been furnished by Waterous. See page 20 for choices

T31
Torque to
475-525 ft-lbs


Input End

T39-

T38-

-T32

T36-

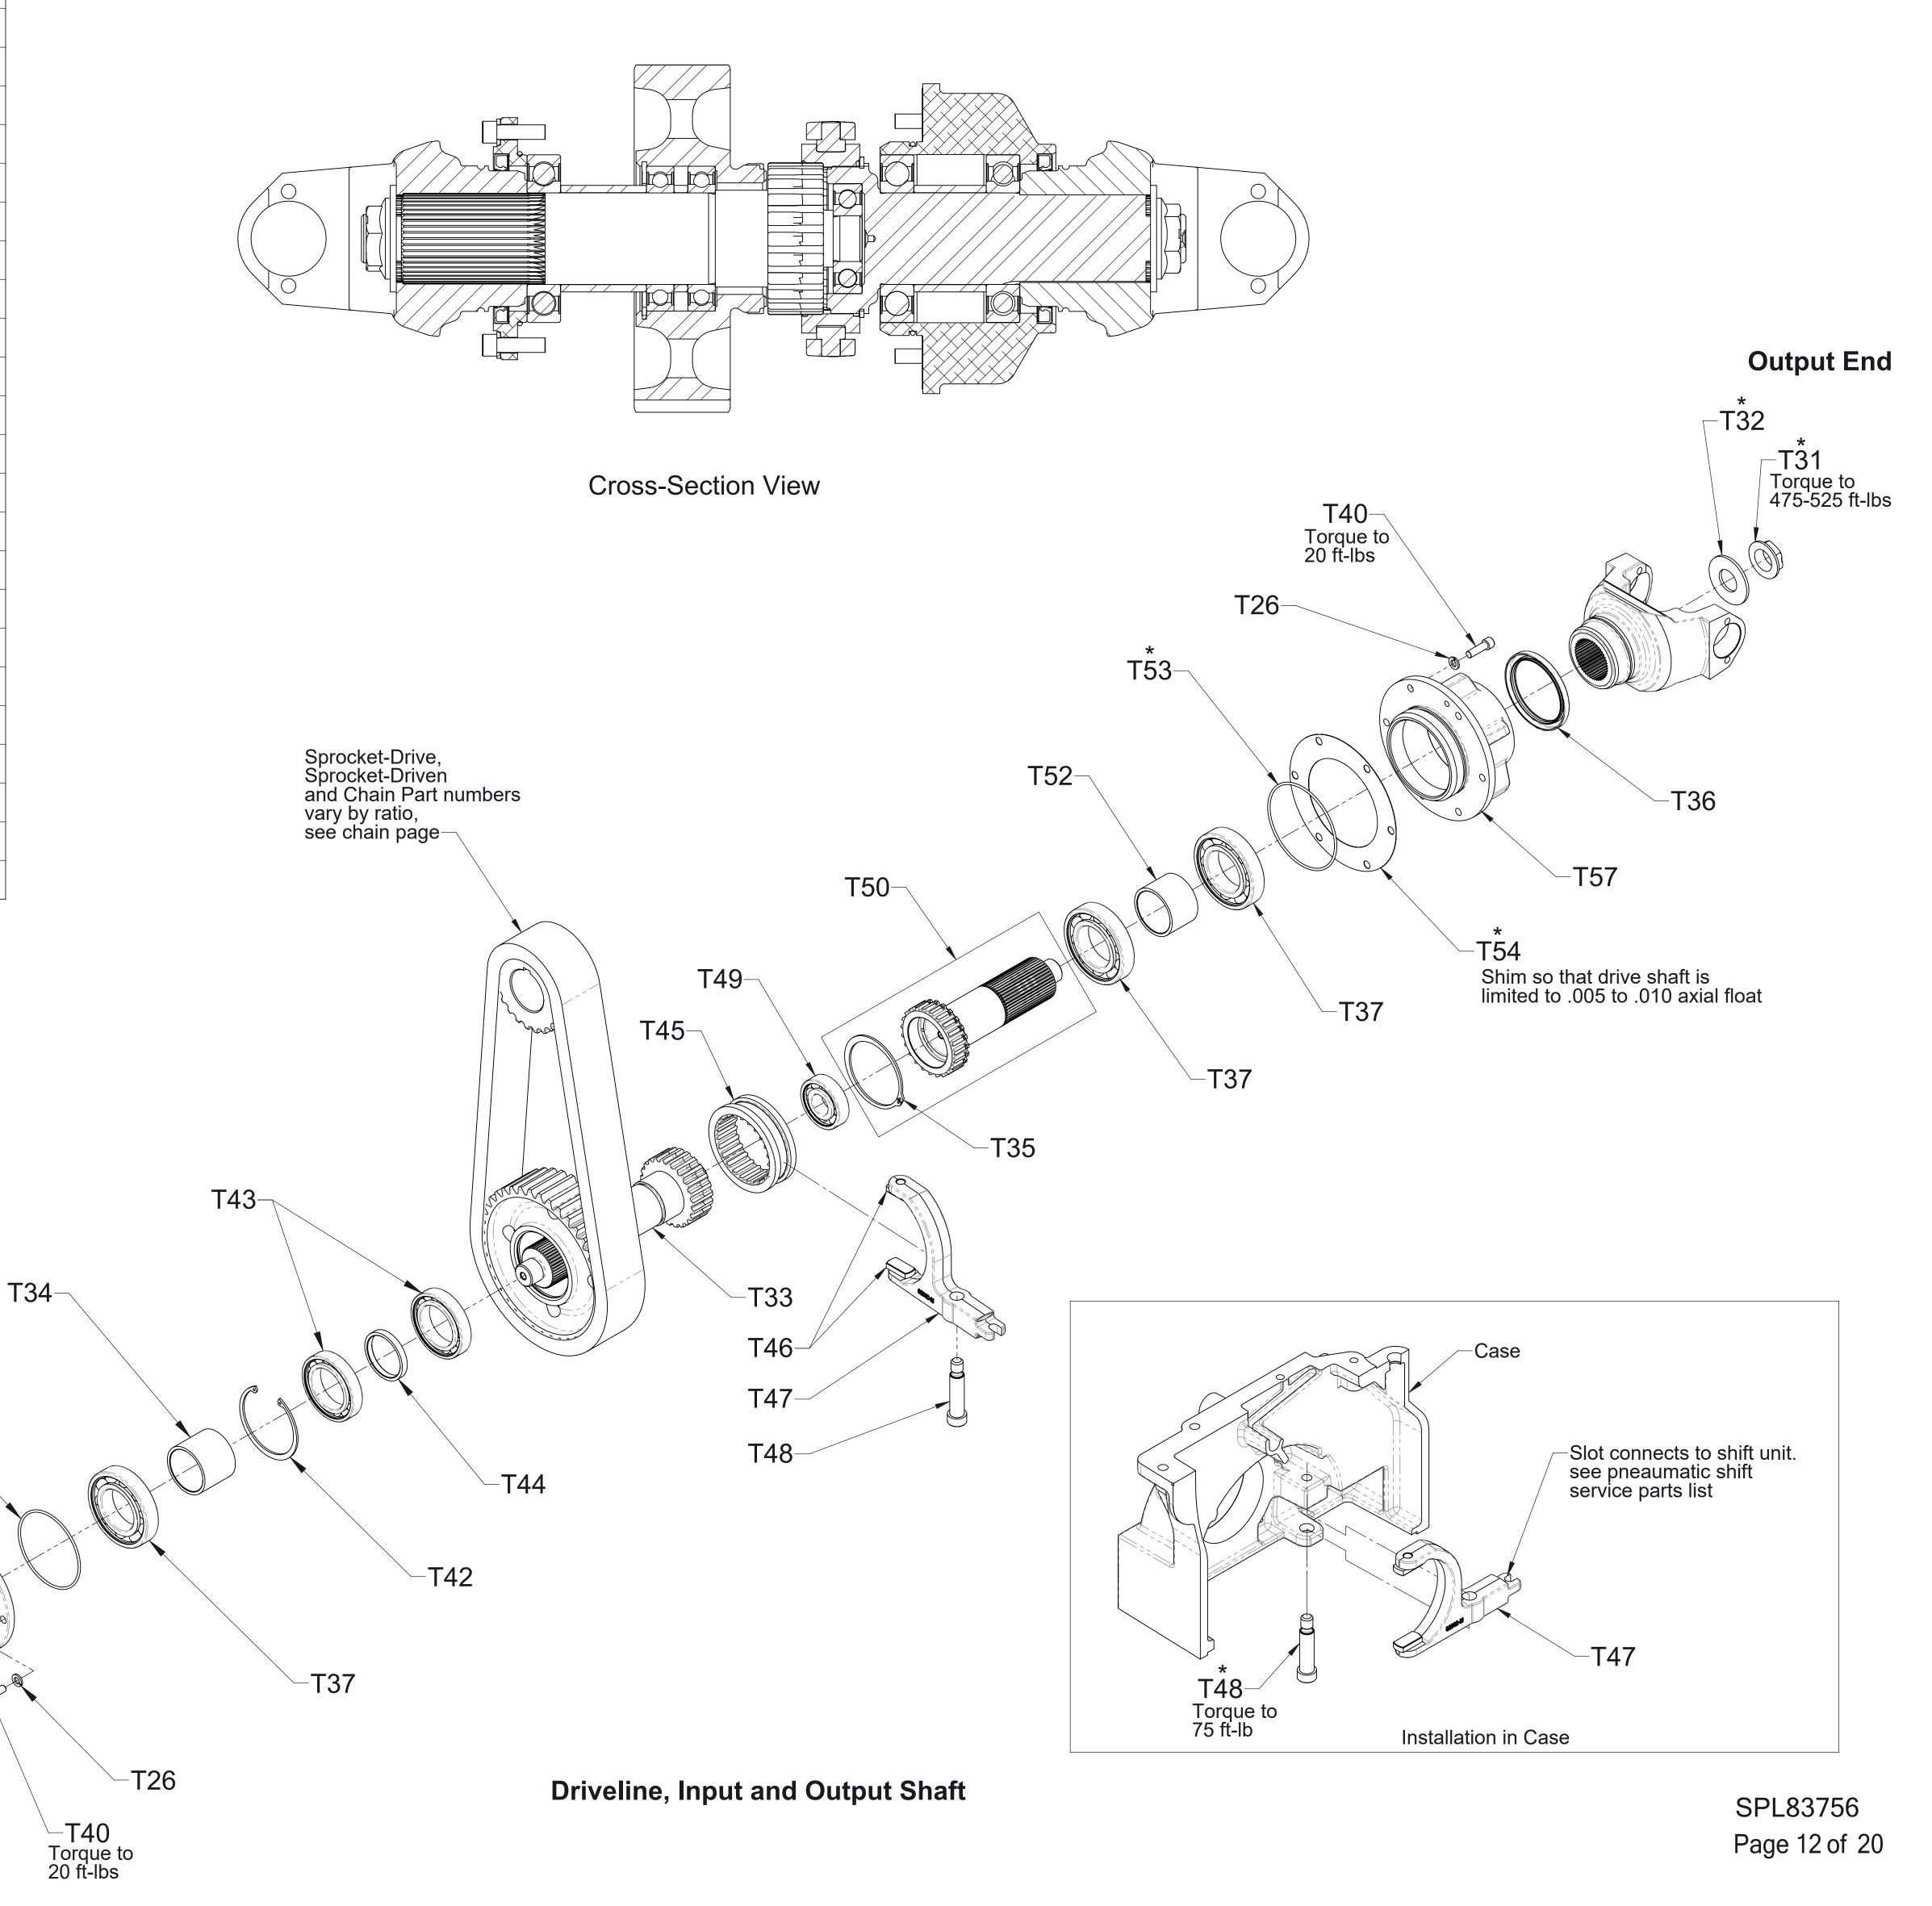


Ref No.	Description
T26	Washer-Lock, 3/8 in
* T31	Nut-Self Locking, 1-1/4-18 UNEF-2B
* T32	Washer-Plain, 1-1/4 in
T33	Shaft-Drive, 2.35-46 Spline, Input Only
T34	Spacer-Bearing
T35	Ring-Retaining, External, 3-15/16 in Shaft Dia
T36	Seal-Oil, 3-1/2 x 4-3/8 x 3/8
T37	Bearing, Ball, Single Row, 60 x 110 x 22 mm
T38	Housing - Drive Shaft
* T39	O-Ring, 4-1/4 x 4-1/2 in
T40	Screw-Cap, Hex Soc Hd, 3/8-16 x 1-1/4 in
T42	Ring-Retaining, Internal, 3-3/4 in Bore Dia
T43	Bearing, Ball, Single Row, 60 x 95 x 18 mm
T44	Spacer-Drive Shaft
T45	Collar-Shift
T49	Bearing, Ball, Single Row, 30 x 72 x 19 mm
* T53	O-Ring, 4-3/4 x 5 in
T58	Spring-Wave
T59	Housing-Bearing

^{*}Included in Ref No. T27 Gasket and O-ring Repair Kit.


Optional end yoke or companion flange (both ends). May not have been furnished by Waterous. See page 20 for choices

T31
Torque to
475-525 ft-lbs


Input End

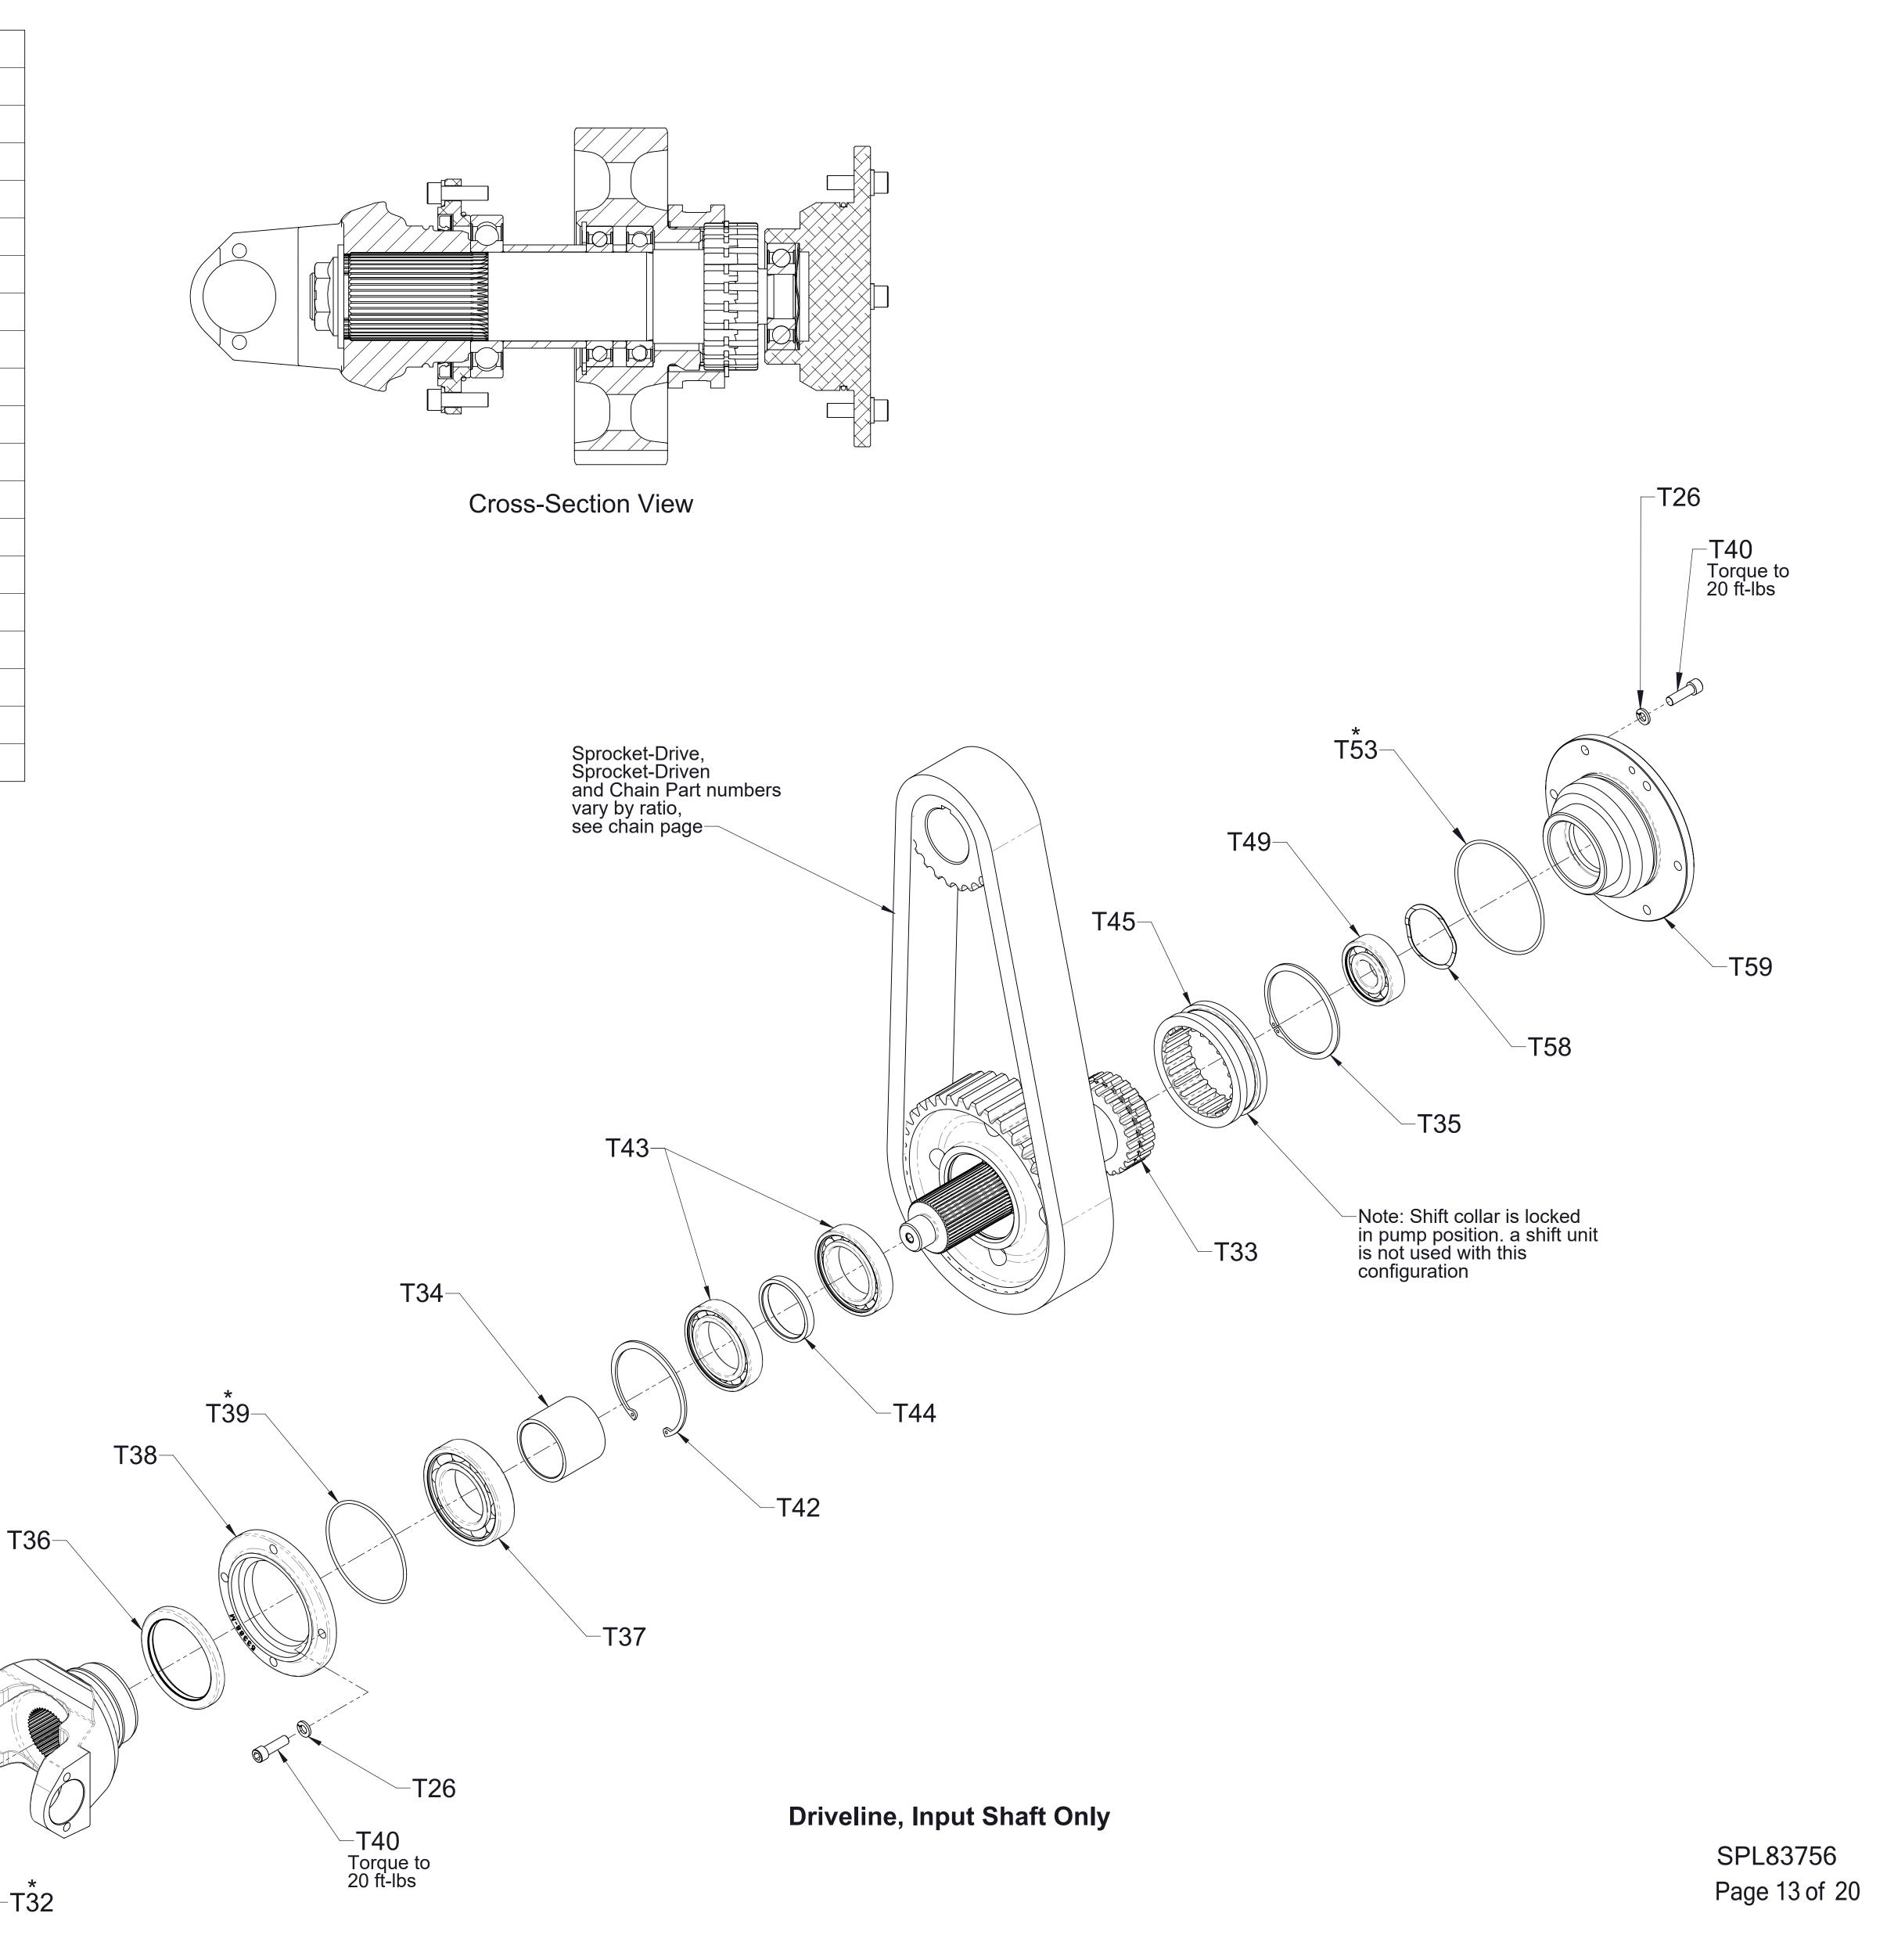


Ref No.	Description			
T6	Cap-Transmission, Front Facing			
Т7	Hose Assembly			

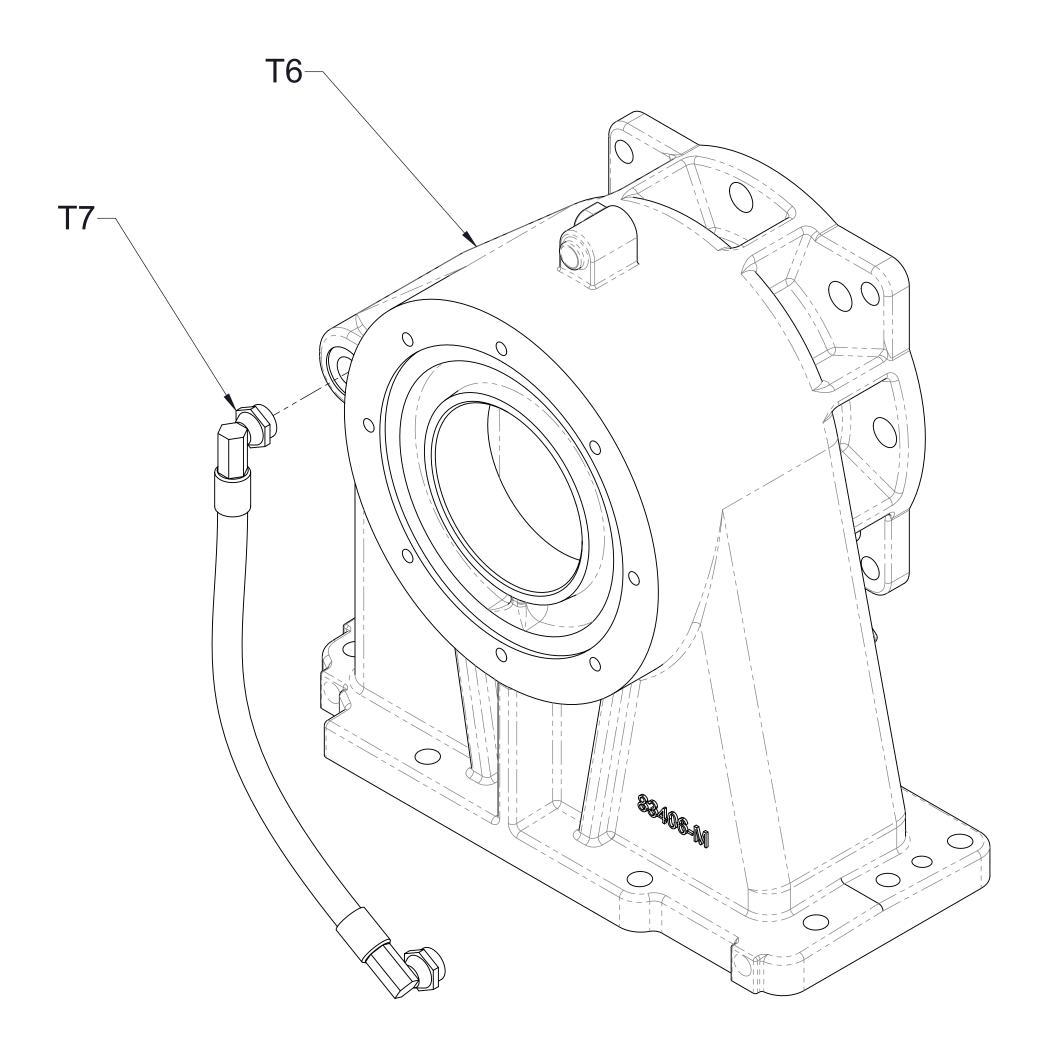

CRU-2 Front Mounted (Input Side) TC23 Front Connection (Input Side)

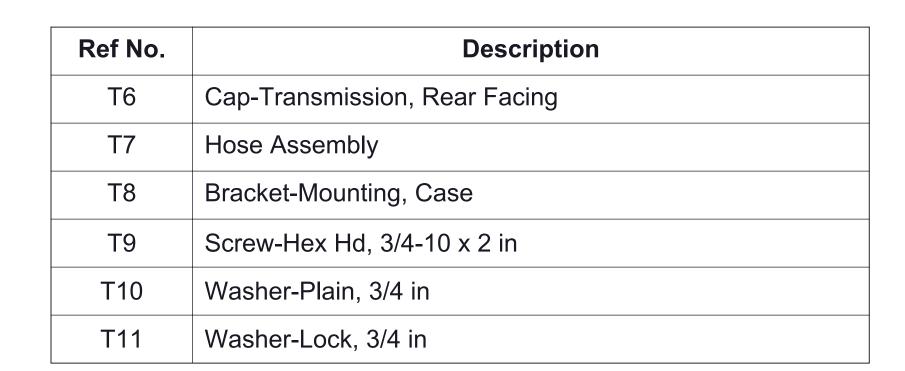

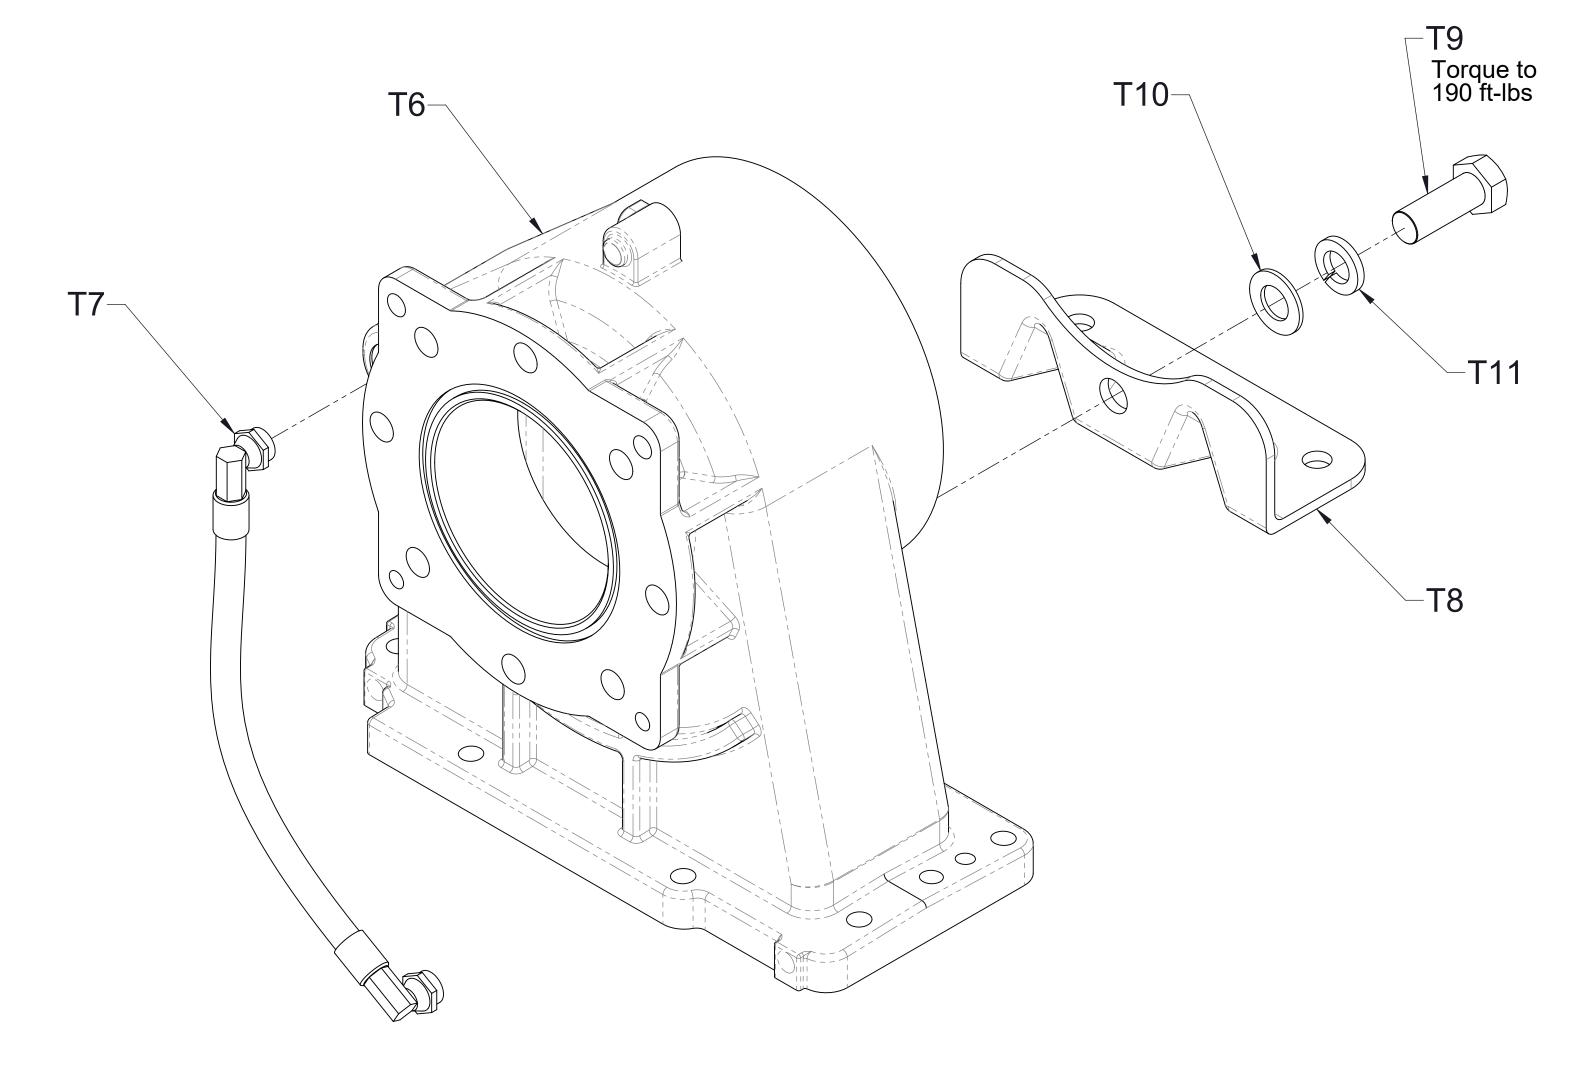



CRU-2 Rear Mounted (Output Side) TC23 Rear Connection (Output Side)


Apply a thin bead of sealant as shown by dashed line

Apply Loctite 518 sealant or equivalent to mating flanges

Ref No.	Description			
T12	Sprocket-Drive			
T13	Sprocket-Driven			
T28	Chain and Pin Set			
T29	Connecting Pin Set (Repairs)			

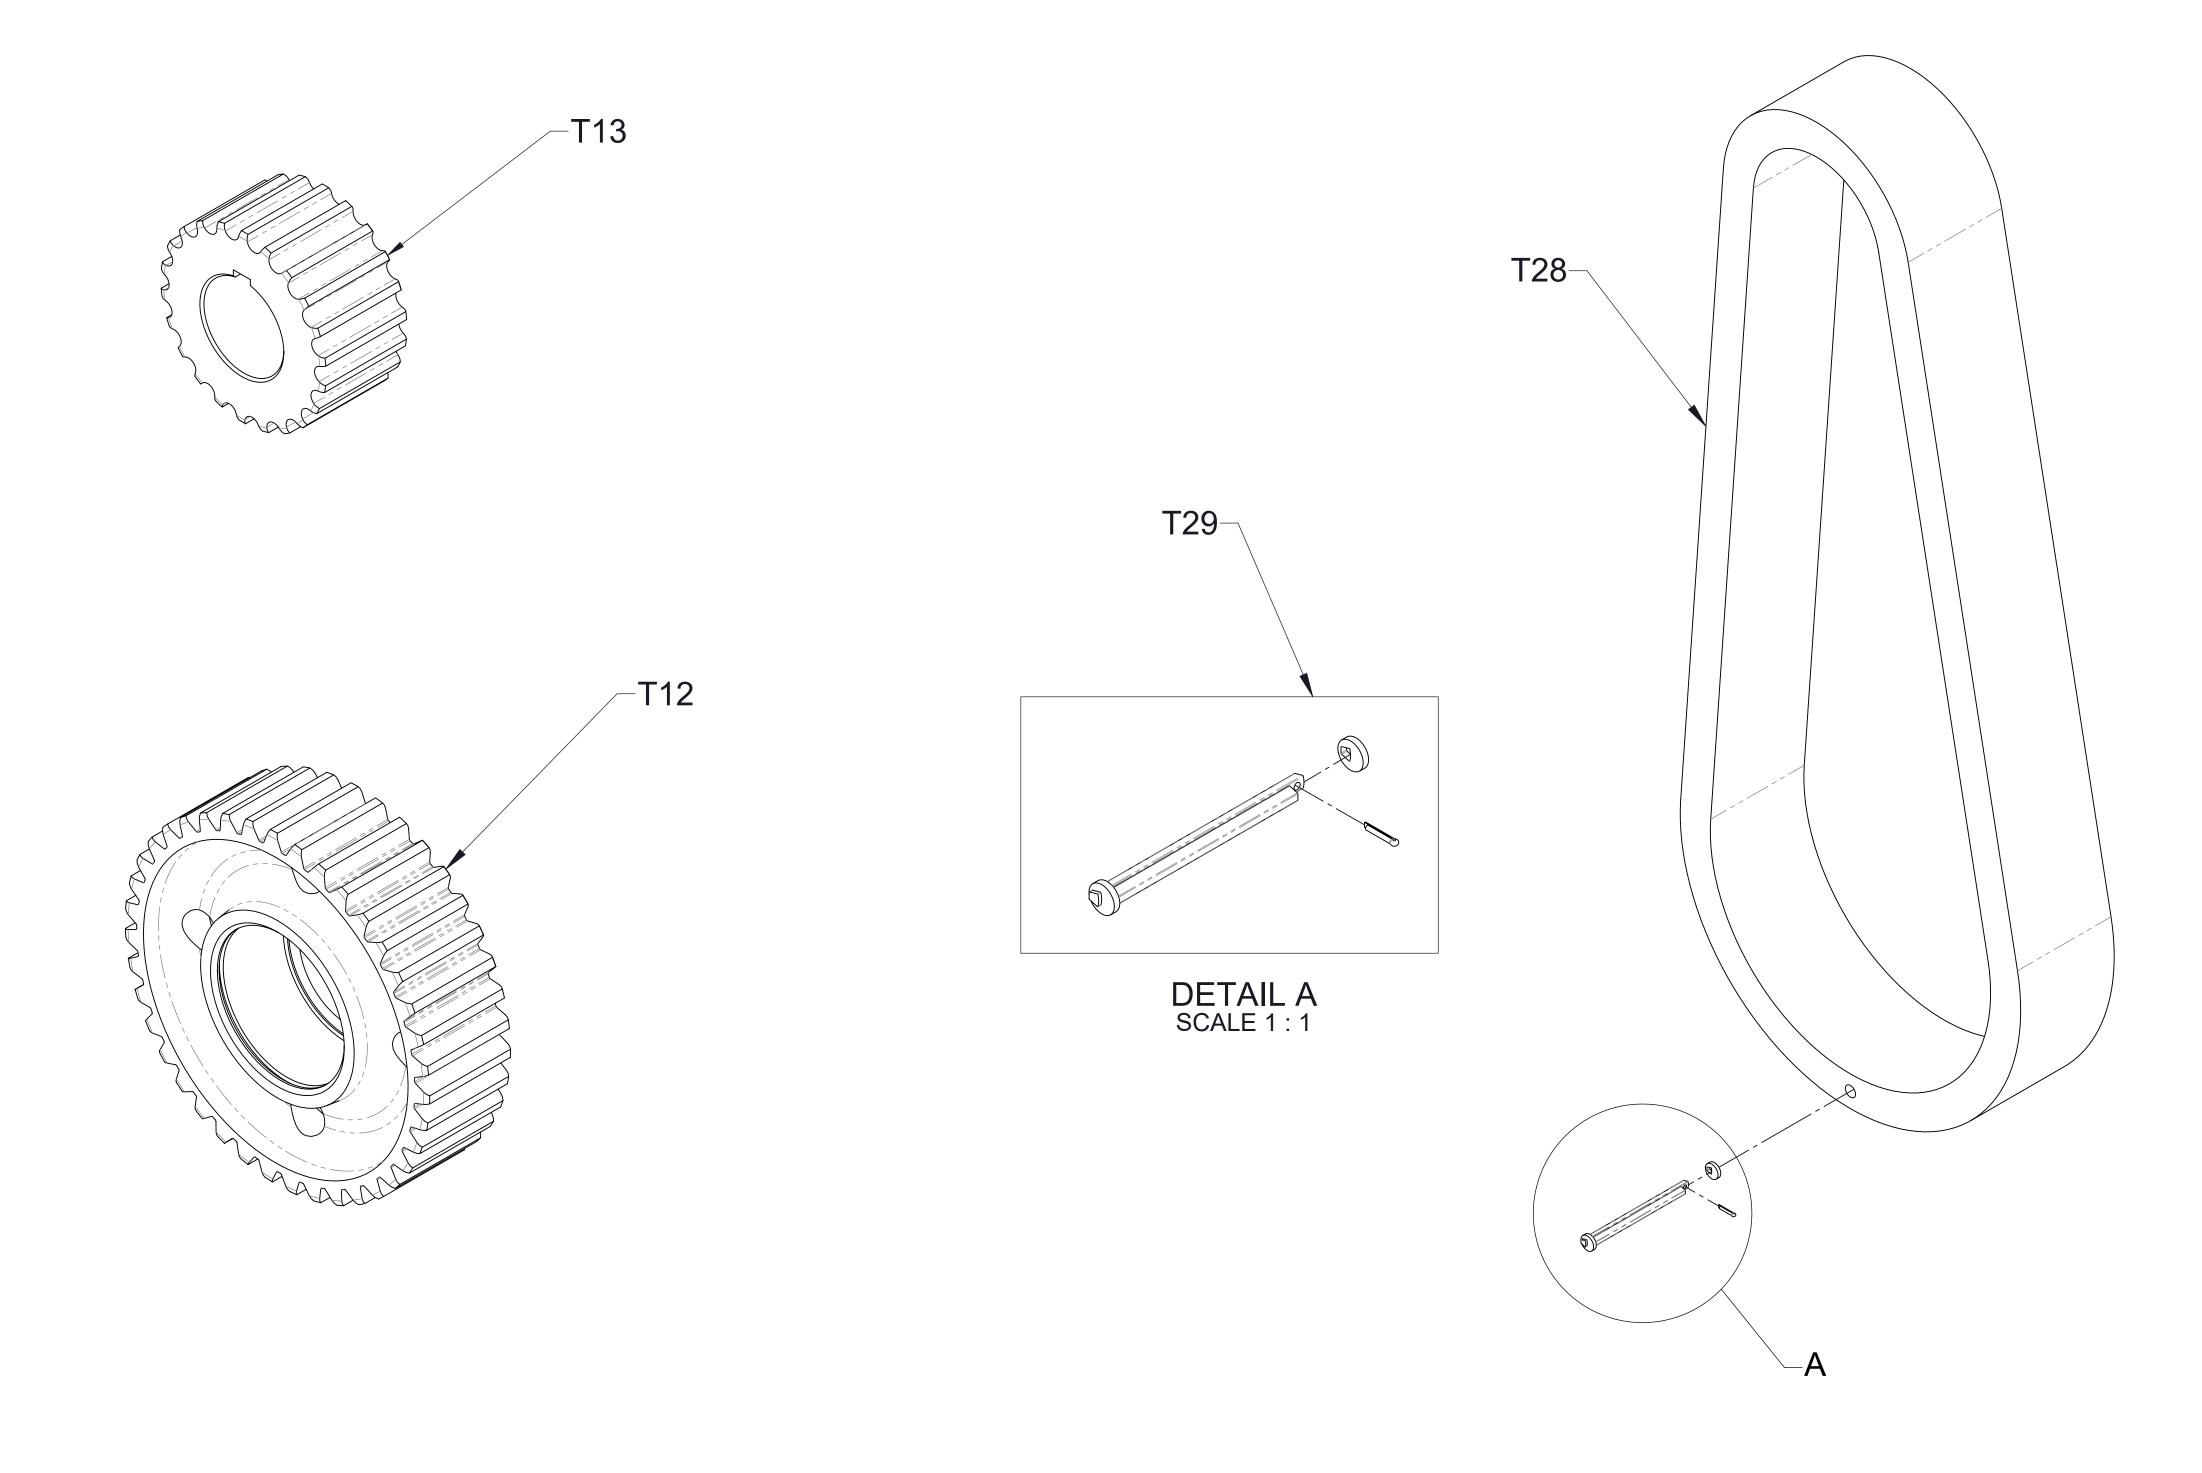

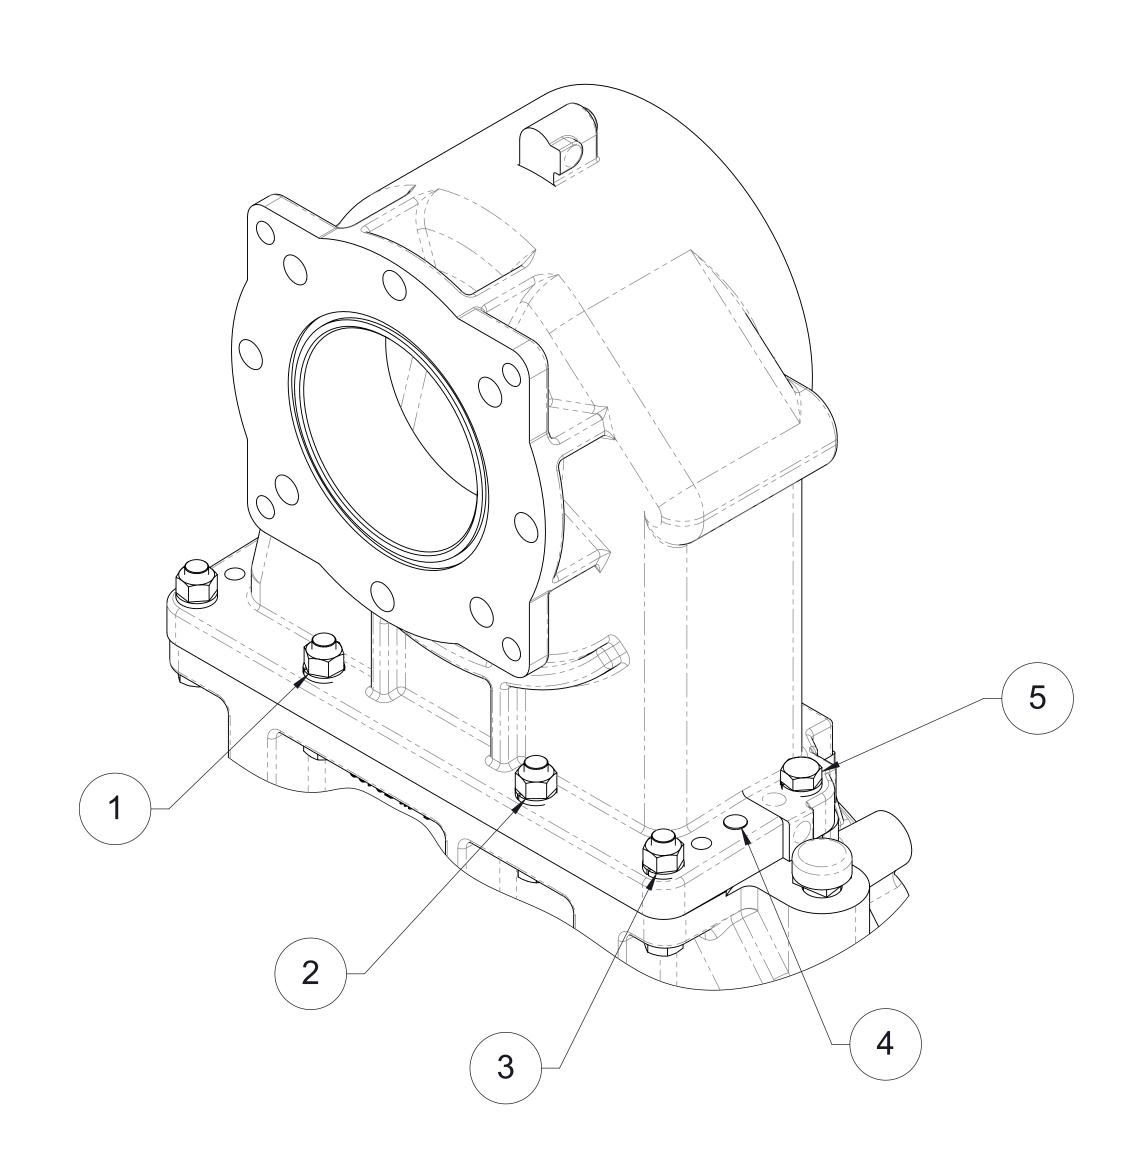

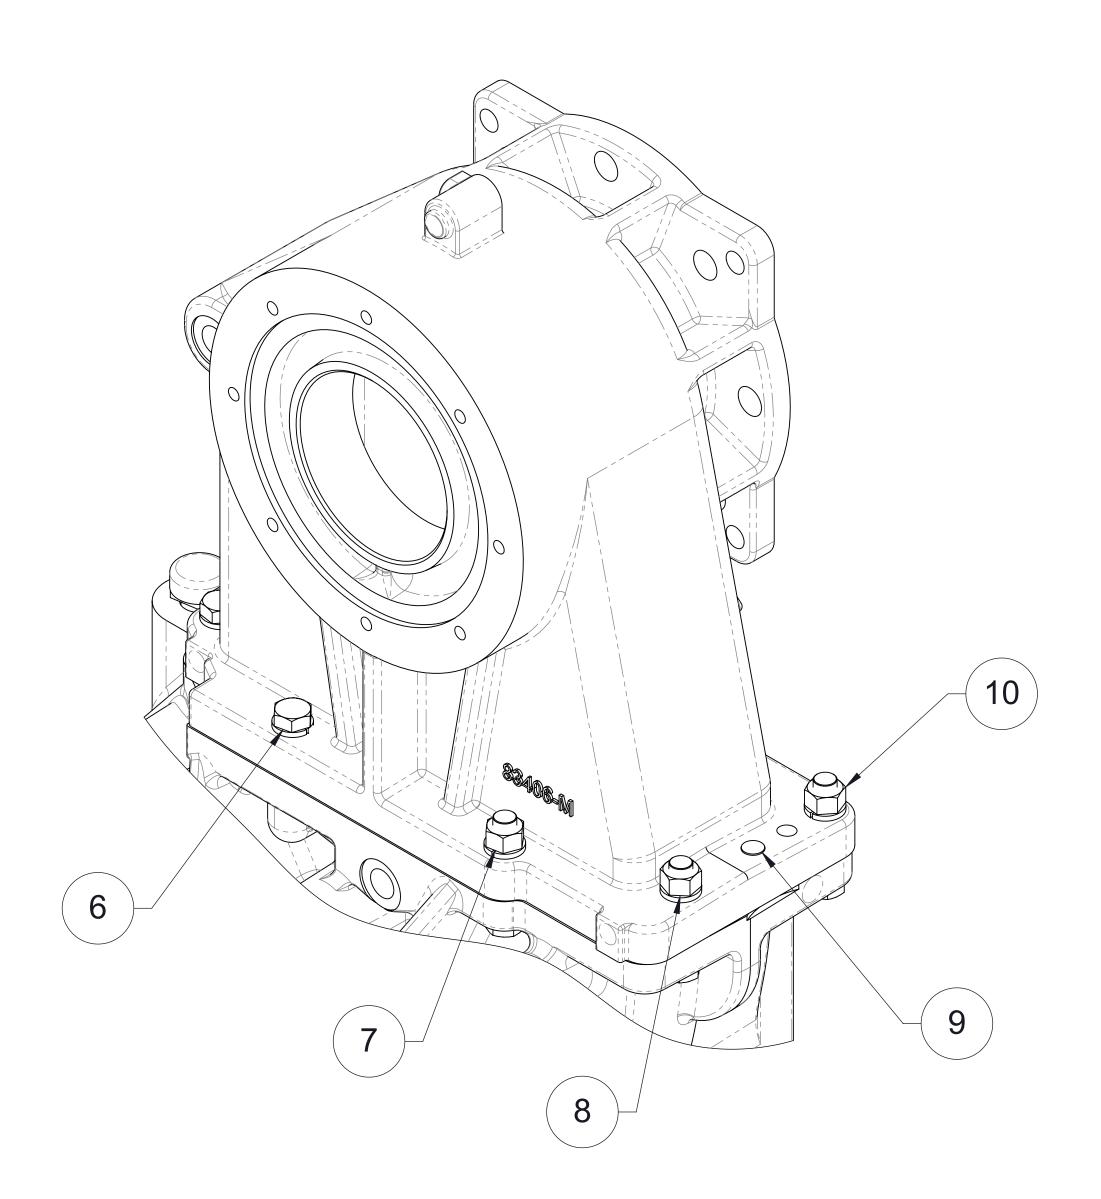



Input Side of Case

Output Side of Case

				Flang	je Hole				
1	2	3	4	5	6	7	8	9	10
T5, T91, T94	T5, T91, T94	T5, T91, T94	T95	T5, T90	T5, T90	T5, T91, T94	T5, T91, T94	T95	T5, T91, T94

Ref No.	Description	Torque To
T5	Washer-Lock, 1/2 in.	
T90	Screw-Hex Hd, 1/2-13 x 1.75 in.	55 ft-lbs
T91	Screw-Hex Hd, 1/2-20 x 2.50 in.	60 ft-lbs
T94	Nut-Hex, 1/2-20	
T95	Pin-Dowel, 1/2 x 1.75 in.	

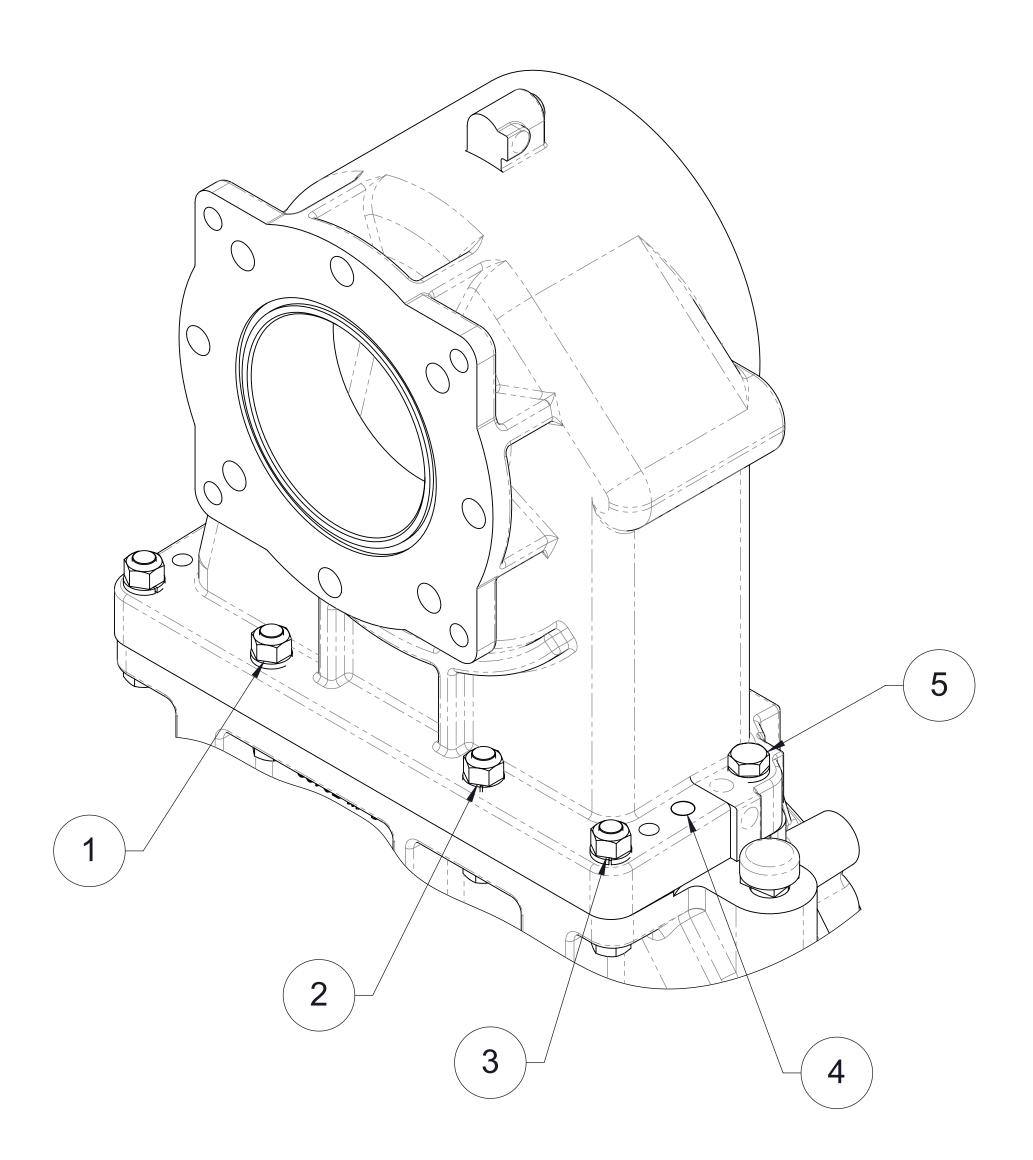

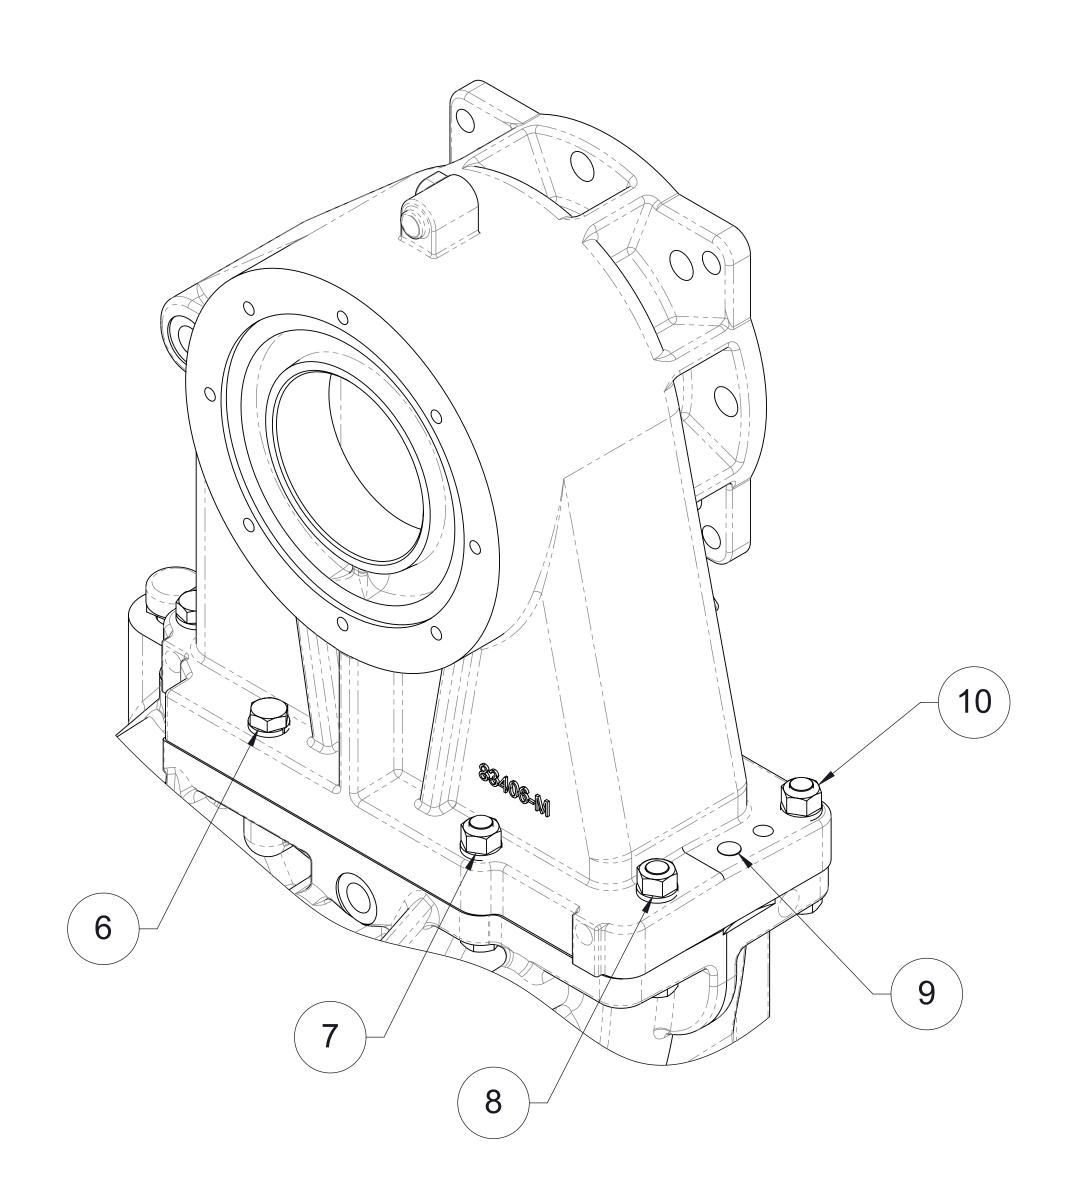


Input Side of Case

Output Side of Case

Flange Hole									
1	2	3	4	5	6	7	8	9	10
T5, T93, T94	T5, T93, T94	T5, T93, T94	T95	T5, T92	T5, T92	T5, T93, T94	T5, T93, T94	T95	T5, T93, T94

Ref No.	Description	Torque To	
T5	Washer-Lock, 1/2 in.		
T92	Screw-Hex Hd, 1/2-13 x 2.25 in.	55 ft-lbs	
T93	Screw-Hex Hd, 1/2-20 x 2.75 in.	60 ft-lbs	
T94	Nut-Hex, 1/2-20		
T95	Pin-Dowel, 1/2 x 1.75 in.		

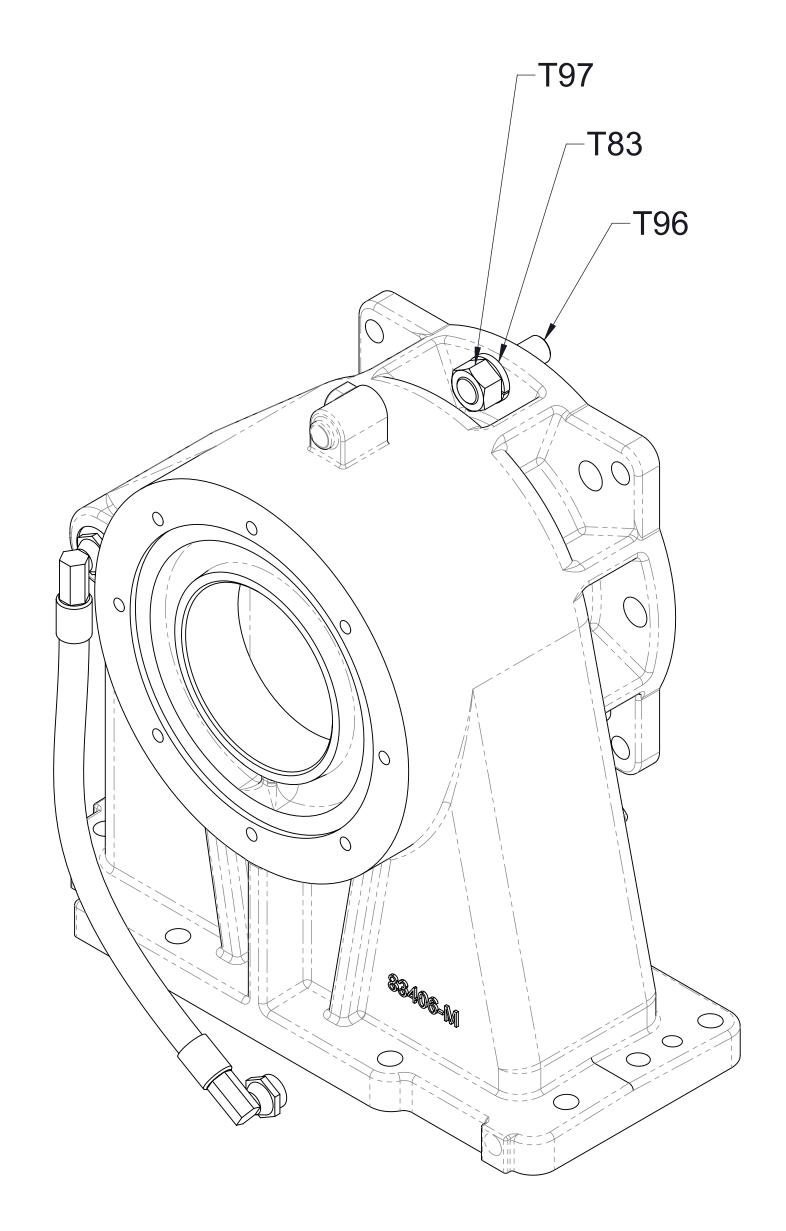

CRU-2
Front Mounted Pump (Input Shaft Side) (Shown)
Rear Mounted Pump (Output Shaft Side)


Ref No.	Description	Torque to
T83	Washer-Lock, 5/8 in	
T96	Stud-5/8-11 UNC x 5/8-18 UNF, 2-3/16 in	
Т97	Nut-Hex, 5/8-18	120 ft-lbs

Pump Mounting Hardware


Ref No.	Description
T101	Fitting-Elbow, 3/8 PTC x 1/4 MNPT, 90°
T102	Fitting-Straight, 3/8 PTC x 3/8 MNPT
T103	Tubing-Nylon, 3/8 in
T104	Tubing-Nylon, 3/8 in
T105	Elbow-Street, 90°, 3/4 NPT
T106	Tee-Street, 3/4 NPT
T107	Bushing-Reducing, Pipe, 3/4 x 3/8 NPT

Notes:

 Discharge UP shown.
 Apply thread sealant to pipe threads.
 Tubing to be cut to required length depending on pump orientation.
 Route tubing so water drains through 3/4 NPT street tee on bottom of volute.

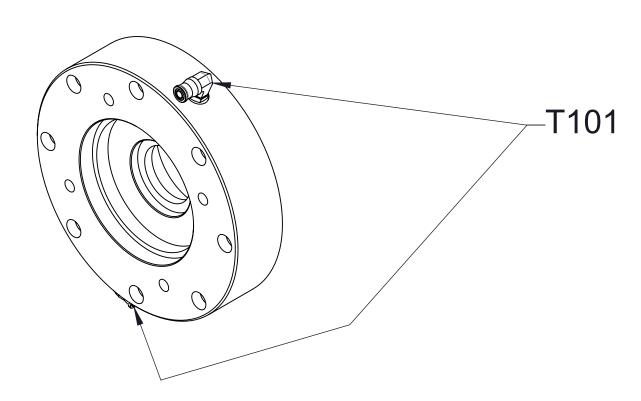


Optional Hydraulic Adapter

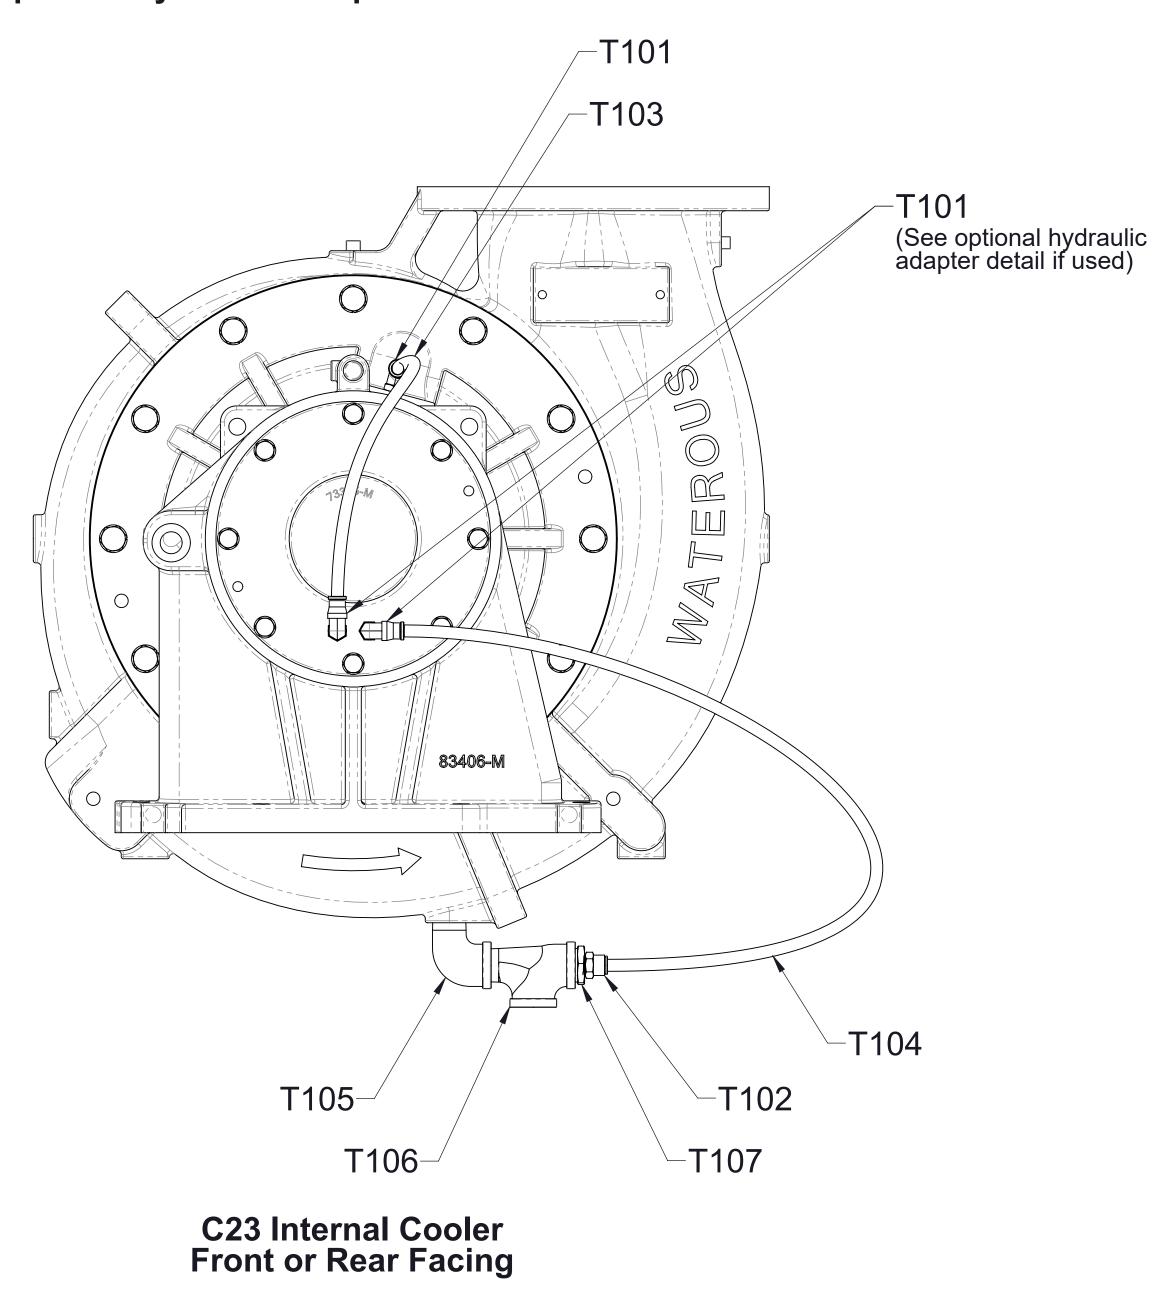


Description Ref No. T108 Plug-Pipe, Headless, 1/4 NPT

Note:
1. Apply thread sealant to pipe threads.

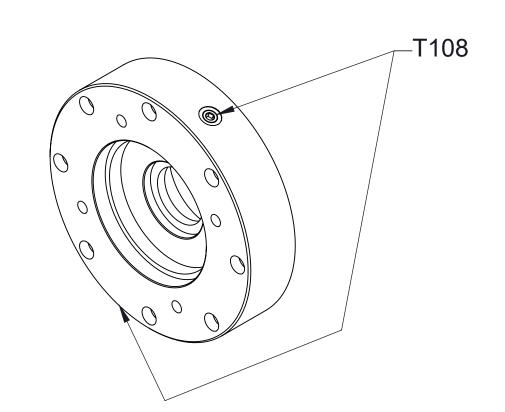

Optional Hydraulic Adapter

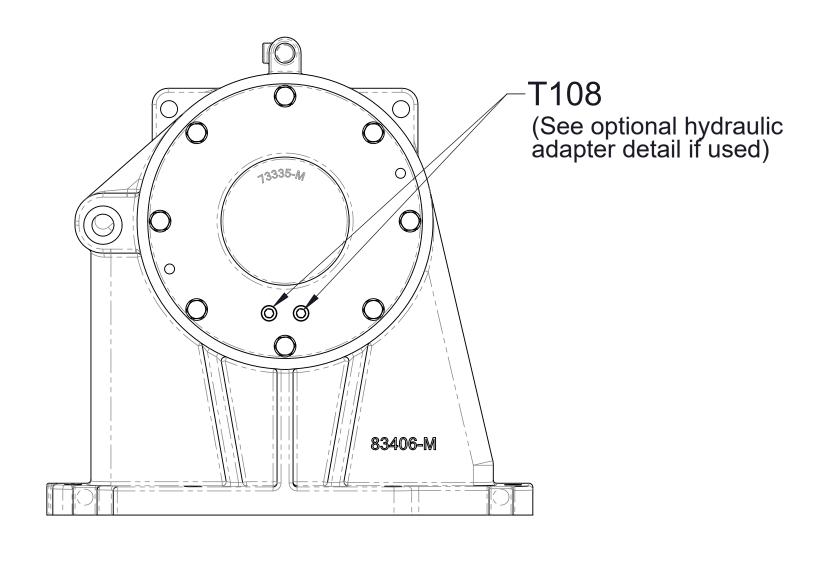

TC23 Internal Cooler Front or Rear Facing

-			Part No.		
Туре	U-Joint Series	Pilot Diameter	Flange	End Yoke Cross and Bearing Kit	
	1710		V 2837	V 2839	
End Yoke, Bearing Plate Type	1810		V 2838	V 2840	
	SPL 140		V 3388	V 3389	
End Yoke,	1710		V 4101	Uses Spicer 5-675X (Not available from Waterous)	
Half Round Type	1810		V 4102	from Waterous)	
	ISO 8667 Serrated		63714		
Companion Flange	1650/1710	7.750 in.	V 3619		
	1480/1610	6.625 in.	V 3719		

Optional Driveline End Yokes and Companion Flanges
May have been furnished by Truck Builder